

LIMITED 90 DAY WARRANTY

MGA Entertainment warrants to the original consumer purchaser this product that the product will be free from defects in material or workmanship for a period of 90 days from the date of original purchase.

This warranty does not cover damages resulting from misuse, improper or abnormal usage, negligence, leaking batteries, improper service or other causes not arising from defects in material or workmanship.

During this 90 day warranty period, the product will be either repaired or replaced (at MGA's option) at no charge to the purchaser, when returned to either the retailer with it's original sales receipt (containing date of purchase) or to MGA. The foregoing states the purchaser's sole and exclusive remedy for any breach of warranty with respect to the product.

All product returned to MGA must be shipped prepaid and insured for loss or damage to:

MGA Entertainment
Repair Department
16730 Schoenborn Street
North Hills, CA 91343-6122

Any returned product should be carefully packed in packing material sufficient to avoid damage during shipment. Please include a written description of the defect, a copy of the original sales receipt (containing date of purchase) and your printed name, address and telephone number.

Some states do not allow limitations on how long an implied warranty last or the exclusion of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific rights and you may also have other rights which vary from state to state. This warranty is only valid within the United States and Canada.

Please keep this manual. It contains important



TM, ® & © 2002 MGA Entertainment
All Rights Reserved.
16730 Schoenborn Street
North Hills, CA 91343 USA
(818) 894-2525

PRINTED IN CHINA



Operating Instructions

Ages 6 & up

INTRODUCTION

Motor Scooter Samantha is the fully articulated doll that rides her motor Scooter via a special remote control-shaped like a Motor Scooter. You can also remove Scooter Samantha (the Doll) from her Scooter and play with her separately! She looks great in her bike outfit! When she's back on her Motor Scooter, she turns her handlebars by your control. She comes with a detachable helmet for looking her best and staying safe on and off her Motor Scooter.

INSTALLATION OF BATTERIES

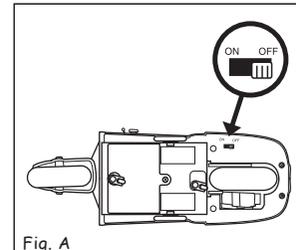


Fig. A
On/Off switch on the bottom of scooter.

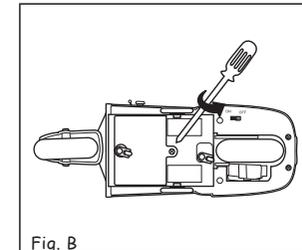


Fig. B
Battery compartment on bottom of scooter

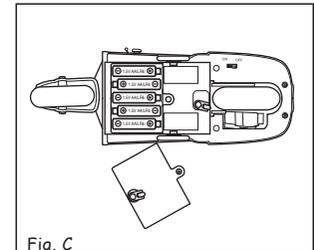


Fig. C
Insert 5 "AA" batteries

TO INSTALL/REPLACE BATTERIES IN MOTOR SCOOTER

1. The battery compartment is located on the bottom of the Scooter. Slide the switch to "OFF" position. Loosen the screw on battery compartment door with a Phillips screwdriver and remove door. (see Fig.A, B)
2. Install / Replace with 5 "AA" batteries. Replace battery compartment door and tighten screw. (see Fig.C)

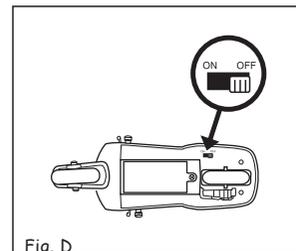


Fig. D
On/Off switch on the bottom of the R/C

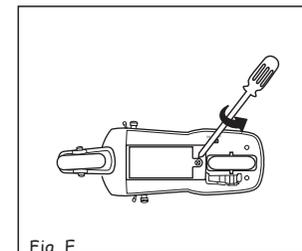


Fig. E
Battery compartment on bottom of R/C

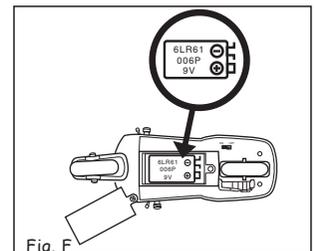


Fig. F
Insert 1 "9V" battery

TO INSTALL/REPLACE BATTERIES IN REMOTE CONTROL

1. The battery compartment is located on the bottom of the controller. Turn the switch to "OFF" position. Loosen screw on battery compartment door with a Phillips screwdriver and remove door. (see Fig.D, E)
2. Install / Replace with a 9V battery. Replace battery compartment door and tighten screw. (see Fig.F)