

# Micro Blast R/C Racer™

#???????

AGES 6+

Micro Blast R/C Racer (MBR™) is a fully functional pocket-sized R/C racers that can be raced indoors, on open ground or on a track, and allow another players with different frequency.

## BATTERY INSTALLATION

### REMOTE CONTROL

1. Switch the power to "OFF".  
Unscrew with a Phillips head screwdriver & remove the battery cover on the Remote Control.
2. Insert 2 AA (1.5V) Alkaline batteries in the proper direction, as indicated inside the battery compartment.
3. Replace the battery cover & tighten screw securely.
4. Switch the power to "ON"

### EXTERNAL CHARGER

1. Unscrew with a Phillips head screwdriver & remove the battery cover on the handset.
2. Insert 2 AAA (1.5V) Alkaline batteries in the proper direction, as indicated inside the battery compartment.
3. Replace the battery cover & tighten screw securely.

### SAFE BATTERY PRECAUTIONS

- Do not dispose the batteries in fire; batteries may leak or explode.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- The supply terminals are not to be short-circuited.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before being charged.
- When not in use for an extended time, remove batteries to prevent possible leakage.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- Batteries should be replaced by adult.

## TROUBLE SHOOTING

### IF THERE IS NO FUNCTION BETWEEN THE REMOTE CONTROL AND THE RACER:

- Make sure you have turned ON the Remote Control.
- Check that the batteries are inserted properly.
- Replace the old batteries with new alkaline batteries.
- Move the remote control above the racer to find the best communication between the Remote control and the Racer. (The control range will be around 6 to 8 feet.)


### IF THE EXTERNAL CHARGER HAS NO CHARGING FUNCTION:

- Check that the batteries are inserted properly.
- Replace the old batteries with new alkaline batteries.
- Check that the racer is placed properly.
- Check that the racer has contacted with the charging contact plates.

Please keep this instruction sheet since it contains important information.

TM & © 2002 MGA Entertainment®  
All Rights Reserved.  
16730 Schoenborn St.,  
North Hills, CA 91343 USA  
(800) 222-4685

Printed In China

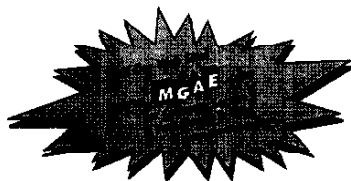

## PLAYING MBR™

### START PLAYING AND CONTROL

- Install the batteries into Remote Control and External Charger as in the section of Battery Installation.
- Charge the racer as in the section of Racer Charging.
- Hold the controller in a comfortable position in your hands.
- Switch the Remote Control power to "ON".
- Press FORWARD button to drive the racer moving forwards.
- Press BACKWARD button to dive the racer moving backwards.
- Press LEFT button to turn left while the racer is moving.
- Press RIGHT button to turn right while the racer is moving.
- When the racer is run out of battery power, charge the racer as in the section of Racer Charging.

### RACER CHARGING

- Place the Racer onto the External Charger charging connector.
- Press CHARGE button once for charging around 45 seconds.
- The charging Indicator on the charger will turn on only when the racer is charging.
- Take out the Racer from the charging connector and place it on the ground for playing.

### IMPORTANT:

- MODIFICATIONS NOT AUTHORIZED BY THE MANUFACTURER MAY VOID USERS AUTHORITY TO OPERATE THIS DEVICE.
- EMISSIONS OR INTERFERENCE OF SURROUNDING ELECTRONIC EQUIPMENT MAY AFFECT OPERATING

### CAUTION:

- Do not use rechargeable batteries for the Remote Control and the External Charger.
- Not suitable for children under 3 years.

### NOTES:

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help