 


Incredible R/C Racing Action!

 
Micro Blast RACERS™

AGES 6+


They may be small, but they've got BIG power! These full-functional, radio-controlled water racers are everything you'd expect in an R/C water vehicle ten times the size! Just place them in nearly any body of water to experience high-speed powerboat action anytime you want! Available in two radio frequencies and four racing boat styles, these racers are sure to take off--BIG TIME!

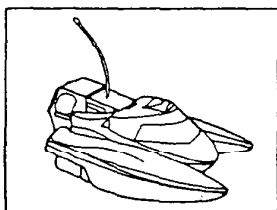


258957 Odyssey (27 Mhz)

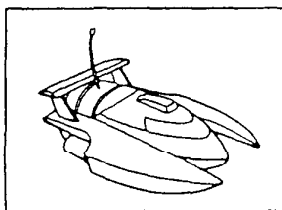

259312 Sea Spirit (49 Mhz)

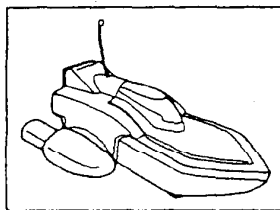 

258933 Osprey (49 Mhz)

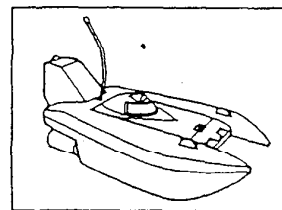 

258940 Tide Runner (27 Mhz)

QUICK START

STEP 1: BATTERY INSTALLATION

- Radio Control Handset

1. Switch the power to "OFF".
2. Unscrew the battery compartment cover located on the back of the handset with a Phillips screwdriver and remove. (see Fig. 1)
3. Insert 2 AA (1.5V) Alkaline batteries in the proper direction as indicated inside the battery compartment. (see Fig. 1)
4. Replace the battery cover & tighten screw securely.

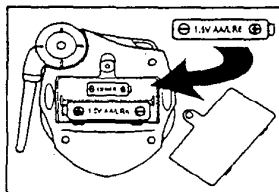 


Figure 1

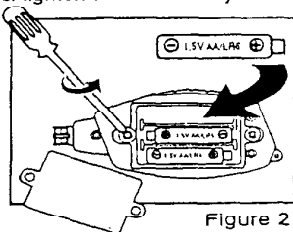 


Figure 2

- External Charger

1. Unscrew the battery compartment cover with a Phillips screwdriver & remove. (see Fig. 2)
2. Insert 4 AAA (1.5V) Alkaline batteries in the proper direction as indicated inside the battery compartment. (see Fig. 2)
3. Replace the battery cover & tighten screw securely.

STEP 2: CHARGING YOUR MBR

1. Open the charge port cover on rear of the boat.
2. Plug the charger into the charge port on the rear of the boat (see Fig. 3). The LED indicator on the charger will light up to indicate the racer is being charged.
3. After approximately 2 minutes of charging, the LED indicator on your External Charger will turn off.
4. Remove your External Charger from your MBR and place your MBR onto water, like a bathtub or

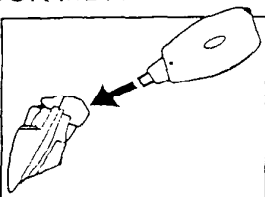 


Figure 3

STEP 3: RACING YOUR MBR

1. Switch the Remote Control Handset to "ON".
2. Extend the Antenna. (see Fig. 4).
3. Push the LEFT and RIGHT propeller control buttons to race your MBR in any direction! (see Fig. 5,6)
4. The TX output indicator light on the handset will turn on only when you push the buttons.
5. After approximately 2 minutes, your MBR will begin to lose its power. Simply follow the steps outlined in the 'Charging Your MBR' section to recharge your MBR and race again!

Race the 27 MHz Micro Blast Racers Against the 49 MHz Racers for awesome competitive water-racing action!

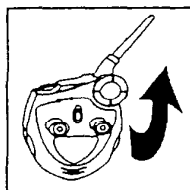 


Figure 4

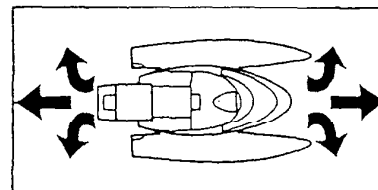 


Figure 5

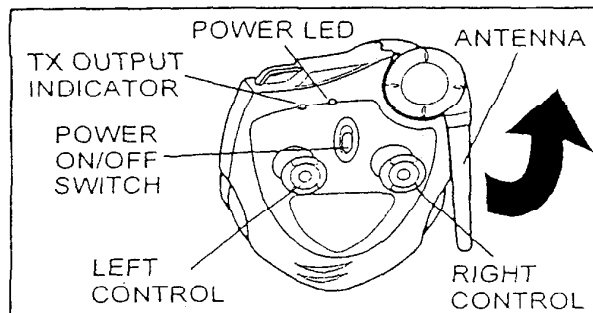 


Figure 6

pool, for racing.

TROUBLE SHOOTING

IF THERE IS NO FUNCTION BETWEEN THE REMOTE CONTROL HANDSET AND THE RACER:

- Make sure you have turned ON the Remote Control.
- Make sure your MBR racer is fully charged.
- Check that the batteries are inserted properly.
- Replace the old batteries with new alkaline batteries.
- Move the remote control handset closer to your MBR to determine the best communication between the Remote Handset and the Racer. (The maximum operating range is approximately 8 to 10 feet.)

IF YOUR MBR RACER FAILS TO CHARGE:

- Make sure the batteries have been inserted properly.
- Make sure the batteries are fresh; if not, replace with new, alkaline batteries.
- Make sure you have connected your MBR charge port to the External Charging Unit securely and so that the contact on the rear of your racer is connected to the contact on the tip of the Charger.

HELPFUL HINTS

- Do not operate during thunderstorms.
- Do not submerge your Charging Unit or Handset in water.
- When your vehicle starts to lose power, it may experience loss of performance ability. If this happens, simply recharge your MBR again.
- Your MBR is operated by radio waves. It is possible the unit may not perform properly due to talkie or other radio-controlled toys.
- Avoid sand and snow when operating your vehicle.
- Always select a safe place to play. Never operate your vehicle in populated water areas.
- Keep fingers, hair and loose clothing away from the propeller, wheel hubs and motors while the vehicle is switched on.
- Your MBR may take in water. After playing with your MBR in water, locate the drainage hole at the rear of the boat and open the charge port cover. Drain all water from the vehicle and replace the cover. (see Fig. 7)

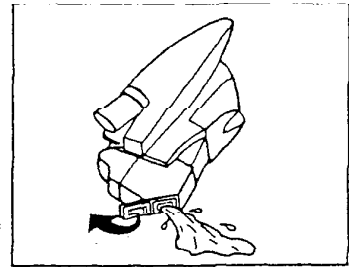 


Figure 7

SAFE BATTERY PRECAUTIONS

- Do not dispose the batteries in fire; batteries may leak or explode.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- The supply terminals are not to be short-circuited.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- When not in use for an extended time, remove batteries to prevent possible leakage.
- Batteries are to be inserted with the correct polarity.

IMPORTANT:

- MODIFICATIONS NOT AUTHORIZED BY THE MANUFACTURER MAY VOID USER'S AUTHORITY TO OPERATE THIS DEVICE.
- EMISSIONS OR INTERFERENCE OF SURROUNDING ELECTRONIC EQUIPMENT MAY AFFECT OPERATING PERFORMANCE.

CAUTION:

- Do not use rechargeable batteries for the Remote Control Handset and/or the External Charger.
- Not suitable for children under 3 years.
- May contain small parts.

NOTES:

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

PLEASE KEEP THIS INSTRUCTION SHEET SINCE IT CONTAINS IMPORTANT INFORMATION.

TM & © 2002 MGA Entertainment ©
All Rights Reserved.
16730 Schoenborn St.,
North Hills, CA 91343 USA
(800) 222-4685

Printed in China

0802-0

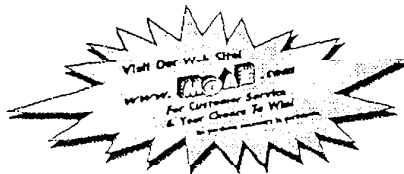

MGA
ENTERTAINMENT®