

## TROUBLE SHOOTING

### IF THERE IS NO FUNCTION BETWEEN THE REMOTE CONTROL HANDSET AND THE VEHICLE:

- ✘ Make sure you have turned the Remote Control ON.
- ✘ Make sure you have turned the Vehicle ON.
- ✘ Check that the batteries are inserted properly.
- ✘ Replace the old batteries with new alkaline batteries.
- ✘ Move the remote control handset closer to your R/C Racer to determine the best communication between the Remote Handset and

## HELPFUL HINTS

- ✘ Do not operate during thunderstorms.
- ✘ Avoid water when racing your R/C Racer. In addition, do not submerge your R/C Racer, or Handset in water.
- ✘ When your vehicle starts to lose power, it may experience loss of performance ability. If this happens, replace the old batteries with new alkaline batteries in your R/C Racer.
- ✘ Your R/C Racer is operated by radio waves. It is possible the unit may not perform properly due to interference from nearby devices such as a cordless phone, hair dryer, radio, walkie-talkie or other radio-controlled toys.
- ✘ Avoid sand and snow when operating your vehicle.
- ✘ Always select a safe place to play. Never drive your vehicle on populated streets.
- ✘ Keep fingers, hair and loose clothing away from the tires, wheel hubs and motors while the vehicle is switched on.

### SAFE BATTERY PRECAUTIONS

- ✘ Do not dispose of the batteries if fire, batteries may leak or explode.
- ✘ Different types of batteries or new and used batteries are not to be mixed.
- ✘ Only batteries of the same or equivalent type as recommended are to be used.
- ✘ The supply terminals are not to be short-circuited.
- ✘ Non-rechargeable batteries are not to be recharged.
- ✘ Rechargeable batteries are to be removed from the toy before being charged.
- ✘ Rechargeable batteries are only to be charged under adult supervision.
- ✘ When not in use for an extended time, remove batteries to prevent possible leakage.
- ✘ Batteries are to be inserted with the correct polarity.
- ✘ Exhausted batteries are to be removed from the toy.
- ✘ Batteries should be replaced by an adult.
- ✘ Use alkaline batteries for better performance.

### IMPORTANT:

- ✘ MODIFICATIONS NOT AUTHORIZED BY THE MANUFACTURER MAY VOID USER'S AUTHORITY TO OPERATE THIS DEVICE.
- ✘ EMISSIONS OR INTERFERENCE OF SURROUNDING ELECTRONIC EQUIPMENT MAY AFFECT OPERATING PERFORMANCE.

### CAUTION:

- ✘ Do not use rechargeable batteries for the Remote Control Handset.
- ✘ Not suitable for children under 3 years.
- ✘ May contain small parts.

### NOTES:

- ✘ This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.

PLEASE RETAIN THIS INSTRUCTION MANUAL WHICH CONTAINS IMPORTANT INFORMATION



Spider-Man and all related characters: TM & © 2004 Marvel Characters, Inc. All rights reserved.



TM & © 2004 MGA Entertainment, Inc. All Rights Reserved.  
16730 Schoonboom Street  
North Hills, CA 91343 USA  
(800) 222-4686

Printed in China

## SPIDER-MAN 2

AGES 6+

## QUICK START

### STEP 1: BATTERY INSTALLATION

#### Remote Control

1. Switch the power to "OFF".
2. Unscrew the battery compartment cover located on the back of the handset with a Phillips screwdriver and remove. (see Fig. 1)
3. Insert 3 AAA (1.5V) Alkaline batteries in the proper direction as indicated inside the battery compartment. (see Fig. 1)
4. Replace the battery cover & tighten screw securely.
5. Switch the power to "ON".



Figure 1



Figure 2

#### Vehicle

1. Switch the power to "OFF".
2. Unscrew the battery compartment cover located on the rear of the vehicle with a Phillips screwdriver & remove. (see Fig. 2)
3. Insert 4 AA (1.5V) Alkaline batteries in the proper direction as indicated inside the battery compartment. (see Fig. 2)
4. Replace the battery cover & tighten screw securely.
5. Switch the power to "ON".

### STEP 2: RACE YOUR RACER

1. Switch the Remote Control Handset to "ON" and the power indicator will light on. (see Fig. 3).
2. Switch the R/C Racer to "ON" and you will hear a sound effect.
3. Use the Left & Right control sticks to control the R/C Racer to move FORWARD, BACKWARD, LEFT, RIGHT and SPIN. (see Fig. 4 and 5)

Race the 27 MHz Spiderman2 R/C Racer Against any other racer or 49 MHz for awesome competitive racing action!



Figure 3



Figure 4


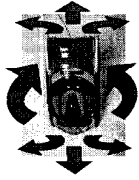


Figure 5

### THE RC RACER TUNE-UP: STEERING ADJUSTMENT

1. Adjust your R/C Racer's steering by rotating the Steering Knob bit by bit. (see Fig. 6)
2. After you have made an adjustment, place your R/C Racer on the ground and take it for a spin!
3. Simply repeat these simple steps until you get the best steering action for your R/C Racer.

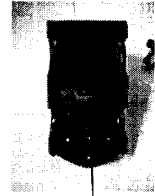

ADJUST THE STEERING KNOB

Figure 6