 


## IMPORTANT

1. After each use, remove any water or moisture from vehicle, upside down the vehicle to drain off the water and using a clean dry cloth for cleaning.
  2. Operate your vehicle only in calm, clear water. Pools and shallow ponds are recommended. Do not operate in salt water. Do not expose vehicle to water unless the battery compartment cover is properly closed.
  3. After about 20 minutes of running time, you should pay close attention to your vehicle's location, making sure that it's close to the water's edge. That way your vehicle will be able to return safely under its own power.
  4. Do not expose the transmitter to water.
  5. Keep fingers, hair and loose clothing away from the propeller drive while the vehicle is switched ON.
  6. To prevent entanglement, keep hair away from the propeller.
  7. Do not operate near swimmers. Stand away from water's edge when operating.
  8. To avoid accidental operation, remove all batteries when not in use.
- MODIFICATIONS NOT AUTHORIZED BY THE MANUFACTURER MAY VOID USERS' AUTHORITY TO OPERATE THIS DEVICE.
- EMISSIONS OR INTERFERENCE OF SURROUNDING ELECTRONIC EQUIPMENT MAY AFFECT OPERATING PERFORMANCE.

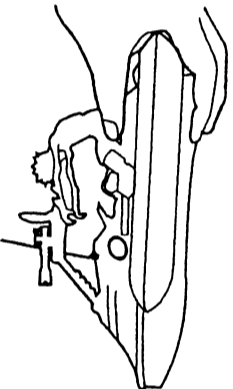

 
## NOTES

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:



- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The preferred method of contact for Customer Service is through our e-mail contact form at [www.alienracers.com](http://www.alienracers.com)

Please retain this instruction manual since it contains important information.

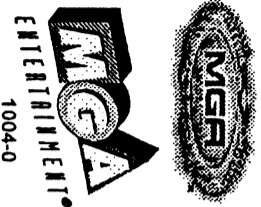

  TM & © MGA Entertainment, Inc.  
ALIEN RACERS™, GROG™, ULTROX™, GNARL™,  
SKRASH™ and all related logos, names,  
characters and distinctive likenesses are the  
exclusive property of MGA Entertainment.  
16300 Roscoe Blvd.  
Van Nuys, CA 91406 USA  
(800) 222-4685  
Made In China

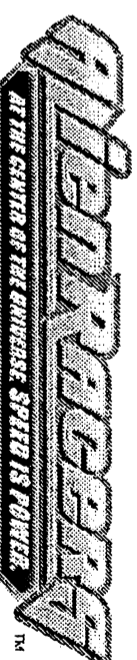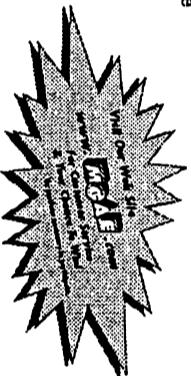

# SKRASH SEASKULL™

## Operation manual

Ages 6+

## INTRODUCTION

You've never seen a race like this! The Alien Racers are unlike any other R/C vehicles on the planet! They are amazingly detailed, fully-functioning R/C vehicles that are fast, fun and ferocious! With different unique characters, each with their own specialized racers, the Alien Racers are set to run the competition into the ground. Cause At The Center of The Universe, Speed Is Power!

## BEFORE YOU START

### Jet Ski

1. Steering Adjuster (adjust, if necessary, to keep your Skrash Seaskull running straight)
2. One Skrash figure.
3. ON/OFF Switch.
4. Battery door.

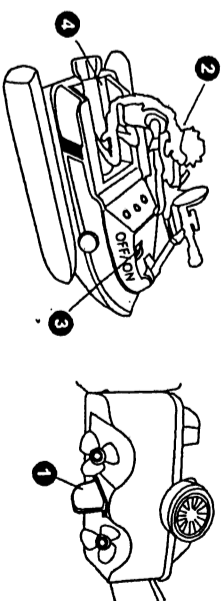 


Fig. 1

### Transmitter

1. Driving Controls
2. Battery door

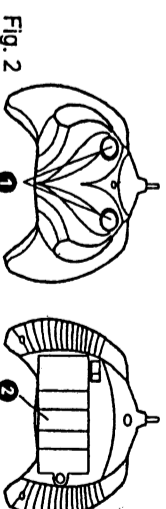 


Fig. 2

## INSTALLING BATTERIES

It requires three AA alkaline batteries for the Skrash Seaskull and one 9-volt battery for the transmitter.

### Powering Your Skrash Seaskull:

1. Use a screwdriver (Phillip's head) to open the battery door.
2. Insert 3 AA alkaline batteries with polarity (+/-) as shown inside battery compartment.
3. Replace the battery door.
4. When you finish playing, slide the ON/OFF switch to OFF position.

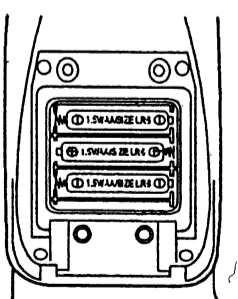 


Fig. 3

### Powering Your Transmitter:

1. Use a screwdriver (Phillip's head) to open the battery door.
2. Insert the 9-volt battery with polarity (+/-) as shown inside battery compartment.
3. Replace the battery door.
4. When you finish playing, slide the ON/OFF switch to OFF position.

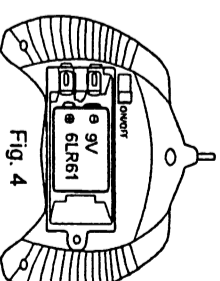 


Fig. 4

## SAFETY BATTERY USAGE

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not dispose of the batteries in fire, batteries may leak or explode.
- Batteries should be replaced by an adult.

## CAUTION

Adults should replace batteries. May contain small parts. Not suitable for children ages 3 & under. Use only the recommended battery pack and charger. Do not charge or recharge the battery pack while it is in the racer. After you charge or recharge the battery pack, disconnect it from the charger. Overcharging the battery pack could damage it. When you disconnect the battery pack from the charger, do not pull on the connector's wires. You might damage the battery pack. Occasionally, let the battery pack fully lose its charge before recharging it. Otherwise, the battery pack loses its ability to fully charge.

 
**IMPORTANT :** At the end of the battery pack's useful life it must be recycled or disposed of properly.

## HELPFUL HINTS

Do not operate during thunderstorms. Avoid water when racing your Alien Racers™. In addition, do not submerge your Racer or Remote controller in water. When your vehicle starts to lose power, it may experience loss of performance ability. If this happens, simply recharge your battery again. Your racer is operated by radio waves. It is possible the unit may not perform properly due to interference from nearby devices such as a cordless phone, hair dryer, radio, walkie-talkie or other radio-controlled toys. Avoid sand and snow when operating your vehicle. Always select a safe place to play. Never drive your vehicle on populated streets. Keep fingers, hair and loose clothing away from the tires, wheel hubs and motors while the vehicle is switched on. Avoid operating your vehicle in an inclined surface.

## Quick Start

1. Slide the ON/OFF switches on the Skrash Seaskull and transmitter to ON.
2. Basic operation as below.

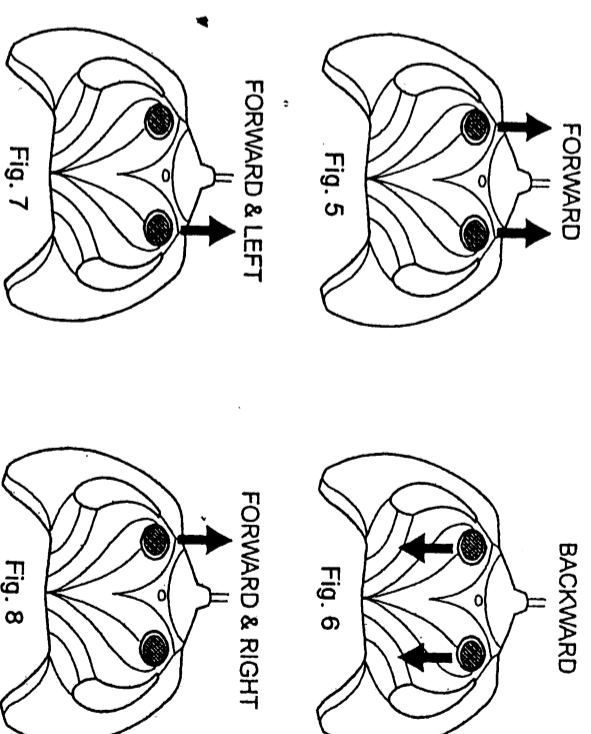

Remarks:  
If Skrash Seaskull cannot running straight, please fine tune the Steering Adjuster to keep your vehicle running straight.

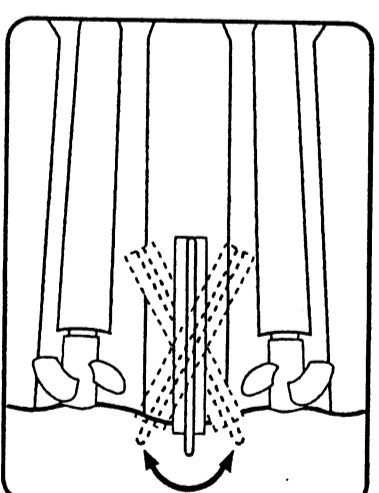 


Fig. 9