

## TROUBLE SHOOTING

### IF THERE IS NO FUNCTION BETWEEN THE REMOTE CONTROL HANDSET AND THE VEHICLE:

- Make sure you have turned ON the Remote Control.
- Make sure your vehicle is fully charged.
- Check that the batteries are inserted properly.
- Replace the old batteries with new alkaline batteries.
- Move the remote control handset closer to your vehicle to determine the best communication between the Remote Handset and the Vehicle. (The operating range is approximately 6 to 8 feet.)

### IF YOUR VEHICLE RACER FAILS TO CHARGE:

- Make sure the batteries have been inserted properly.
- Make sure the batteries are fresh; if not, replace with new, alkaline batteries.
- Make sure you have connected your vehicle onto the External Charging Unit's Charging Connector securely and so that the contact on the bottom of your racer are connected to the contacts on the top of the Charger.

## HELPFUL HINTS

- Do not operate during thunderstorms.
- Avoid water when racing your vehicle. In addition, do not submerge your Vehicle, Charging Unit or Handset in water.
- When your vehicle starts to lose power, it may experience loss of performance ability. If this happens, simply recharge your vehicle again.
- Your vehicle is operated by radio waves. It is possible the unit may not perform properly due to interference from nearby devices such as a cordless phone, hair dryer, radio, walkie-talkie or other radio-controlled toys.
- Avoid sand and snow when operating your vehicle.
- Always select a safe place to play. Never drive your vehicle on populated streets.
- Keep fingers, hair and loose clothing away from the tires, wheel hubs and motors while the vehicle is switched on.

### SAFE BATTERY PRECAUTIONS

1. Non-rechargeable batteries are not to be recharged;
2. Rechargeable batteries are to be removed from the toy before being charged;
3. Rechargeable batteries are only to be charged under adult supervision;
4. Different types of batteries or new and used batteries are not to be mixed;
5. Only batteries of the same or equivalent type as recommended are to be used;
6. Batteries are to be inserted with the correct polarity;
7. Exhausted batteries are to be removed from the toy;
8. The supply terminals are not to be short-circuited;
9. Do not dispose the batteries in fire, batteries may leak or explode;
10. Batteries should be replaced by adult;
11. Use alkaline batteries for better performance.

### IMPORTANT:

- CHANGES OR MODIFICATIONS TO THIS UNIT NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.
- EMISSIONS OR INTERFERENCE OF SURROUNDING ELECTRONIC EQUIPMENT MAY AFFECT OPERATING PERFORMANCE.

### CAUTION:

- Do not use rechargeable batteries for the Remote Control Handset and/or the External Charger.
- Not suitable for children under 3 years.
- May contain small parts.

### NOTES:

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please keep this manual as it contains important information.



0406-0

www.bratz.com  
www.bratzpack.com  
TM & © MGA Entertainment, Inc.  
BRATZ™, BRATZ PETZ™, LIL' BRATZ™, BRATZ BABYZ™, and all related logos, names, characters, distinctive likenesses and slogans, as well as the packaging and images appearing thereon, are the exclusive property of MGA.  
16300 Roscoe Blvd.  
Van Nuys, CA 91406 USA  
(800) 222-4685  
Printed in China

The preferred method of contact for Customer Service is through our e-mail contact form at [www.mga.com](http://www.mga.com).



Item no: 328735  
Item name: Itsy Bitsy Bratz RC Vehicle (27 MHz)  
Date 4/12/06



AGES 6+



Item no: 328735  
348733

They may be small, but they've got BIG power! These full-functional, radio-controlled vehicles are everything you'd expect in an R/C vehicle ten times the size, but unlike the bigger vehicles, you can race these cars nearly anywhere, whether it's on tabletops or driveways! Available in two radio frequencies (27MHz or 49 MHz) for true competitive racing action, these vehicles are sure to take off—BIG TIME!

## QUICK START

### STEP 1: BATTERY INSTALLATION

#### -Radio Control Handset

1. Switch the power to "OFF".
2. Unscrew the battery compartment cover located on the back of the handset with a Phillips screwdriver and remove. (see Fig. 1)
3. Insert 2 AAA (1.5V) Alkaline batteries in the proper direction as indicated inside the battery compartment. (see Fig. 1)
4. Replace the battery cover & tighten screw securely.
5. Switch the power to "ON".

 
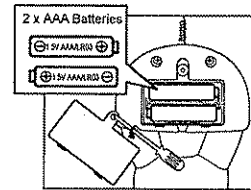 


Fig. 1

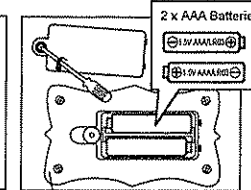

External Charger Fig. 2

#### -External Charger

1. Unscrew the battery compartment cover with a Phillips screwdriver & remove. (see Fig. 2)
2. Insert 2 AAA (1.5V) Alkaline batteries in the proper direction as indicated inside the battery compartment. (see Fig. 2)
3. Replace the battery cover & tighten screw securely.

### STEP 2: CHARGING YOUR VEHICLE

1. Place your vehicle onto the External Charger's Charging Connector, and secure it into place so that the contacts on the bottom of the vehicle connect with the contacts on the Charger. (see Fig. 3)
2. Press the CHARGE button once to charge your vehicle for approximately 75 seconds. (see Fig. 3)

**NOTE:** The Charging Indicator on the Charger will light up only when the vehicle is charging.  
3. LED go OFF, remove your vehicle from the External Charger and place it on the ground.

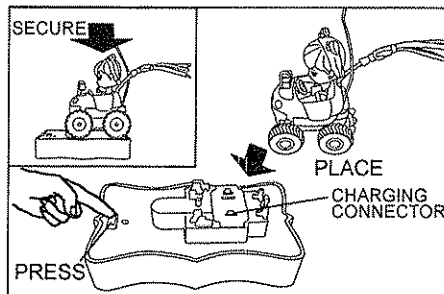 


Fig. 3

### STEP 3: RACING YOUR VEHICLE

1. Switch the Remote Control Handset to "ON".
2. Straighten the Antenna. (see Fig. 4).
3. Push the FORWARD, BACKWARD, LEFT and RIGHT buttons to race your vehicle in any direction! (see Figs. 5 & 6)
4. The TX output indicator light on the handset will turn on only when you push the buttons.
5. After approximately 2 minutes, your vehicle will begin to lose its power. Simply follow the steps outlined in the 'Charging Your Vehicle' section to recharge your vehicle and race again!

Race the 27 MHz Itsy City Vehicle Against the 49 MHz vehicles for awesome competitive racing action!

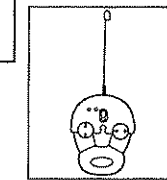 


Fig. 4

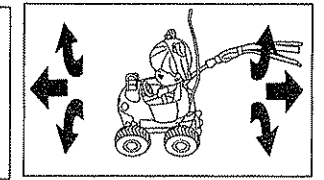 


Fig. 5

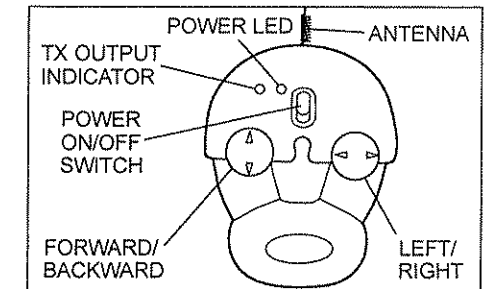 


Fig. 6

### THE VEHICLE TUNE-UP: STEERING ADJUSTMENT

1. Adjust your vehicle's steering by rotating the Steering Knob bit by bit. (see Fig. 7)
2. After you have made an adjustment, place your vehicle on the ground and take it for a spin!
3. Simply repeat these simple steps until you get the best steering action for your vehicle.

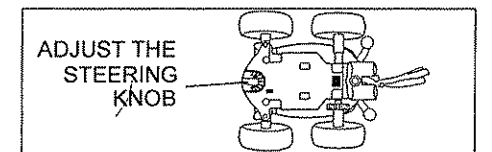 


Fig. 7