

# TEXT AND CALL MOBILE HANDSETS


Item no. 337966F7, 337966F7C ADULT BATTERY INSTALLATION

## INTRODUCTION

These single channel FRS Mobile Handsets allow friends to talk or text message up to 2 miles! Mobile Handset units also include a clock, note pad, alarm and phone book.

## CONTENTS


- 2 SMS Mobile Handsets

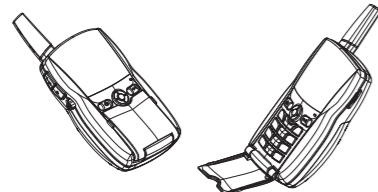

## BEFORE YOU BEGIN

Get ready to talk and text to friends by first installing batteries in your Mobile Handsets.

- Using a Phillips screwdriver (not included) remove the screw and battery compartment cover from the back of the Mobile Handset. (Fig. A)
- Install four (4) AAA alkaline batteries (not included) making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
- Replace the compartment cover and tighten the screw.

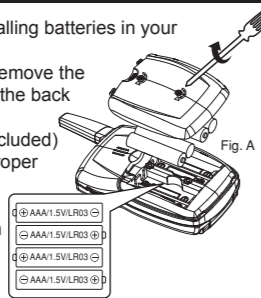

1

## MESSAGES

- In Mode "B," access the Menu, highlight the envelope diagram, then press "OK".



Function	Step
<b>To create a message to be sent to a Mobile Handset which has already had its ID number saved on your contact list.</b>	<ol style="list-style-type: none"> <li>Highlight the "envelope" on the menu and press "OK".</li> <li>Press <math>\downarrow</math> to highlight "NEW", then Press "OK".</li> <li>Type your message using the keypad by pressing the keys quickly until you reach the desired letter, then press "OK".</li> <li>When finished, press "OK" and the CONTACT screen will appear.</li> <li>Press <math>\uparrow</math> or <math>\downarrow</math> to highlight CONTACT. Press "OK".</li> <li>Using <math>\uparrow</math> or <math>\downarrow</math> to select the message recipient. Press "OK".</li> <li>A new menu will appear.</li> <li>Select "SEND ONLY" to send the message but not save it. Select "SAVE" to save the message only. Select "SAVE SEND" to save and send the message.</li> </ol>
<b>To create a message to a Mobile Handset which has NOT had its ID saved to your contact list.</b>	<ol style="list-style-type: none"> <li>Highlight the "envelope" on the menu and press "OK".</li> <li>Press <math>\downarrow</math> to highlight "NEW" then Press "OK".</li> <li>Type your message using the keypad. Press "OK".</li> <li>Use the <math>\uparrow</math> or <math>\downarrow</math> to highlight "NEW NUMBER" then press "OK".</li> <li>Input the new ID number, then press "OK".</li> <li>A new menu will appear.</li> <li>Select "SEND ONLY" to send the message only.</li> <li>Select "SAVE" to save the message only.</li> <li>Select "SAVE SEND" to save and send the message.</li> </ol> <p>NOTE: Number will NOT be saved to your address book.</p>
<b>To check the messages in your "Inbox".</b>	<ol style="list-style-type: none"> <li>Highlight the "envelope" on the menu and press "OK".</li> <li>Press <math>\uparrow</math> or <math>\downarrow</math> to highlight "INBOX" (Fig. 1) then press "OK".</li> <li>The sender of your first message will be shown.</li> <li>Press "OK" to read the message. Press "OK" again to see time and date sent.</li> <li>Press Cancel to return to beginning of message.</li> <li>Use the <math>\uparrow</math> or <math>\downarrow</math> keys to scroll to the next message.</li> </ol>

5

## IMPORTANT NOTE WHEN REPLACING BATTERIES:

If batteries are removed and replaced within a ONE MINUTE TIME SPAN, SAVED messages in both the INBOX and SENT area and messages in the phone book will be retained. (Clock will need to be reset and To-Do List messages and Notepad messages will be lost.)

If the unit loses power for more than one minute due to battery change or static shock, ALL messages will be lost.

## OTHER NOTES


- Each Mobile Handset's preset ID number is 0000 0000.
- To TEXT message another Mobile Handset, an ID number must be set in each unit.
- To set or change an ID number see page 12.
- To see the ID number of your Mobile Handset see page 3.
- To enter/store ID numbers of other units to your contact list, see "functions" on page 5.
- For VOICE chat, there is no need to know the ID of the unit with which you are chatting.

## QUICK START

- To turn your unit on and off, press and HOLD the ON/OFF button for several seconds.
- Before using the unit, turn the volume control on the side of the unit to mid-range.
- Before text messaging it's best to set up an ID number for each unit. To do so:
  - In Text Mode with no icons highlighted on the Menu, press \*\*00000000## and "OK" to confirm.
  - Press 9, then "OK" to confirm.
  - Enter a new 8 digit ID number and press "OK" to confirm.
  - To check that your number is entered correctly, go to Menu and, with no icons highlighted, press the ID key on the side of the unit.

2

## KEY LAYOUTS AND FUNCTIONS

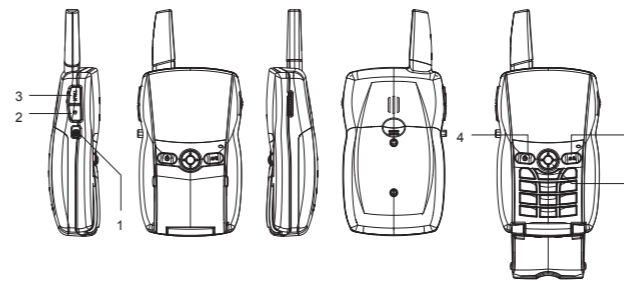


Key	Functions	Notes
<b>1. Talk/Text switch</b>	Slide switch, which allows you to select Talk mode or Text mode.	Mode "A" is Talk mode. Mode "B" is Text mode.
<b>2. ID</b>	Go to Menu. With no icons highlighted, press to see your current ID number.	To view your ID the unit must be in "B" (Text) Mode.
<b>3. Talk</b>	Press to talk, release to listen.	To transmit your voice, unit must be in "A" Talk Mode.
<b>4. Power</b>	Press and HOLD to switch the unit ON or OFF. (Welcome Screen and ID number will appear, followed by the Menu screen.)	To switch ON and OFF unit can be in either "A" (Talk) Mode or "B" (Text) Mode.
<b>5. Four Direction Keys and "OK" key.</b>	Highlights and selects menu and other items. (Center "OK" key confirms selection.)	
<b>6. Cancel</b>	Cancels your selection.	

3

## MAIN FEATURES
 
### TALKING FUNCTION

Function	Step
Talking and Listening	In "A" Mode, (the screen will say Talk/Listen) press and hold the Talk button and speak into the unit. Release the button to listen.
Adjusting the Volume	Adjust the volume using control dial on side of unit.

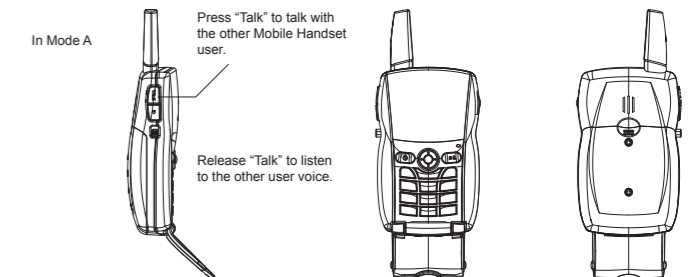

### Keypad

To switch from upper to lower case, Press * (or the Shift Key)	Example: ABC, or abc
To access symbols: 1. Highlight Message Mode (envelope) on Menu and press "OK" to confirm. 2. Highlight "New", then press "OK" to confirm. 3. Press #, rapidly until you reach the desired symbol.	<pre># * , . ? ! ; @ + - / = : _ \ / \$ % ^ ( ) &lt; &gt; { } [ ]</pre>
NOTES: Use directional keys to go back. Use the #1 Key for Commas and Periods.	Symbol Screen in Text ("B") mode.

4

## TOOLS

In Mode "B," press the  $\leftarrow$  and  $\rightarrow$  keys to highlight the "CLOCK" icon on the menu. (Fig. 14)



Fig. 14



Fig. 15

Press "OK" and a new screen (Fig. 15) will appear. To see the time and date CURRENTLY displayed on the unit:

Function	Step
<b>Setting the time.</b>	See "To Adjust the Time Setting" on page 11 for complete instructions as to how to set the correct time.
<b>Setting the alarm.</b>	To set the Alarm, Countdown and Stopwatch functions: <ol style="list-style-type: none"> <li>First access the "Clock" icon from the Main Menu then follow directions below.</li> <li>Use the <math>\leftarrow</math> and <math>\rightarrow</math> keys to highlight the "ALARM" icon and press "OK".</li> <li>Use the <math>\uparrow</math> or <math>\downarrow</math> to highlight "SET" and press "OK".</li> <li>Use the keypad to input the alarm time you wish and press "OK".</li> <li>Use the <math>\uparrow</math> or <math>\downarrow</math> to highlight ALARM, then press "OK" to toggle between ALARM ON and ALARM OFF until you reach the desired setting then press CANCEL.</li> </ol>
<b>Setting the countdown function.</b>	<ol style="list-style-type: none"> <li>Use the <math>\leftarrow</math> and <math>\rightarrow</math> keys to highlight the "COUNTDOWN" icon and press "OK".</li> <li>Use the keypad to set the time you wish to countdown from and press "OK".</li> <li>Press "OK" to start the countdown.</li> <li>Press "OK" again to stop the countdown.</li> </ol>
<b>Using the stopwatch.</b>	<ol style="list-style-type: none"> <li>Use the <math>\leftarrow</math> and <math>\rightarrow</math> keys to highlight "STOPWATCH" and press "OK".</li> <li>To start the stopwatch, press "OK".</li> <li>To stop the stopwatch, press "OK" again.</li> </ol>

8

7. Press $\rightarrow$ to go to the screen shown in Fig. 6.	SAVE DELETE FORWARD REPLY Fig. 6
8. Select "SAVE" and Press "OK" to save the message.	
9. Select "DELETE" and Press "OK" to delete the message.	WRITE A Fig. 6A
10. Select "FORWARD" and Press "OK" to forward the message to others.	
11. Select "REPLY", write a message, and Press "OK" to reply the sender.	SEND SMS... Fig. 6B
NOTE: A maximum of 9 messages can be saved. They will be numbered from 1 to 9 on the screen.	
A "closed lock" icon $\mathcal{L}$ means the message was saved. An "open lock" icon $\mathcal{L}$ means the message was NOT saved.	
<b>Check Sentbox</b>	Similar to the steps in "Check Inbox."
<b>Receiving messages</b>	The Mobile Handset can receive messages in SMS (text) model. A text cycle is 30 seconds long. Once you type in and send a message, your unit will stay in send mode for the remainder of the 30 second cycle. During that time you will not be able to receive messages.

NOTE: You can save 9 Inbox messages and 8 messages in the Sent Folder.

## CONTACTS

In Mode "B," press the  $\leftarrow$  and  $\rightarrow$  keys until the "CONTACTS" icon is highlighted (Fig. 7). Press "OK".  $\leftarrow$   $\rightarrow$



Fig. 7



Fig. 8



Fig. 9



Fig. 10

6

Function	Step
<b>Search</b>	<ol style="list-style-type: none"> <li>Use the <math>\uparrow</math> or <math>\downarrow</math> keys to highlight "PHONE BOOK". (Fig. 8) Press "OK".</li> <li>Use the <math>\uparrow</math> or <math>\downarrow</math> keys to reach the contact name you wish. Press "OK".</li> <li>A new menu (Fig. 10) will appear.</li> <li>To see the contact's record, use the <math>\uparrow</math> or <math>\downarrow</math> keys to highlight "VIEW" and press "OK".</li> <li>To edit information on the entry, use the <math>\uparrow</math> or <math>\downarrow</math> keys to highlight "EDIT." Press "OK," then use the keypad to update the information.</li> <li>To remove a contact, use the <math>\uparrow</math> or <math>\downarrow</math> keys to highlight "DELETE" and press "OK".</li> </ol>
<b>To save information regarding a contact, first.</b>	<ol style="list-style-type: none"> <li>Highlight the "Contacts" icon from the Menu and press "OK".</li> <li>Use the <math>\uparrow</math> or <math>\downarrow</math> keys to highlight "ADD." (Fig. 8) and press "OK".</li> </ol> <p>Fig. 11</p> <ol style="list-style-type: none"> <li>Input your friend's ID number and Press "OK".</li> <li>Input your friend's name and press "OK".</li> <li>A new menu (Fig. 11) will appear.</li> <li>To input a friend's birthday information, use the <math>\leftarrow</math> or <math>\rightarrow</math> keys to highlight the "BIRTHDAY" cake icon and press "OK".</li> <li>Use the keypad to input the information, then press "OK".</li> <li>To input a friend's cell phone number, use the <math>\leftarrow</math> or <math>\rightarrow</math> keys to highlight the "CELL PHONE" icon and press "OK".</li> <li>Use the keypad to input the information, then press "OK".</li> <li>To input a friend's email address, use the <math>\leftarrow</math> or <math>\rightarrow</math> keys to highlight the "@" sign, then press "OK".</li> <li>Use the keypad to input the information, then press "OK".</li> <li>To input a friend's home address, use the <math>\leftarrow</math> or <math>\rightarrow</math> keys to highlight the "HOUSE" icon and press "OK".</li> <li>Use the keypad to input the information, then press "OK".</li> </ol>

7

**NOTES**

- In Mode "B," use the ◀ and ▶ keys to highlight the "NOTEPAD" icon on the menu (Fig. 16).
- Press "OK" and a new menu (Fig. 17) will appear.



Fig. 16

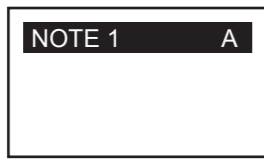 


Fig. 17

- Use the keypad to Input any notes you wish and press ▶.
- A new menu (Fig. 18) will appear.
- To save your notes, use the ▲ or ▼ keys to highlight "SAVE" and press "OK".
- To erase your notes, use the ▲ or ▼ keys to highlight "DELETE" and press "OK".

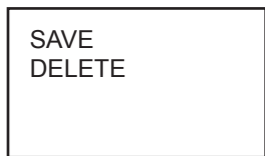 


Fig. 18

- Press "OK" to move to the next note.

NOTE: You can save a maximum of 8 notes.

**APPLICATIONS**

- In Mode "B", press ◀▶ the ▶ and keys to highlight the "EXTRAS" menu. (Fig. 19)
- Press "OK".



Fig. 19

Function	Step
To do list	1. Use the ▲ or ▼ keys to highlight "TO DO LIST" then press "OK".
	2. The current month and year will be shown.
	3. Use the ▲ or ▼ keys to scroll through the "TO DO LIST".
	4. Press the ▼ key to highlight the date you want select e.g. 2007 Jan 2nd
	5. Press the ▶ key to select 2007 Jan 2nd
	6. Select "EDIT" to input a To-Do List message e.g. "Go to movies with Jimmy"
	7. Use the keypad to input your message.
	8. After you have input your message, press "OK". "TASK TIME" will appear.
	9. To set the time to 12:34 PM, press 1▶▶2▶▶3▶▶4 and▶▶to ▼ select "PM".
	10. Once you have set the "time" on the To-Do List message, press "OK" to save it.
	11. To Delete a saved message, highlight the date of the message then press the right arrow.
	12. Select "DELETE" to delete the message, then press "OK".

**SETTINGS**

- In Mode "B", press the ◀ and ▶ keys to highlight the "SETTINGS" menu. (Fig. 20)



Fig. 20



Fig. 21

- Press "OK".

Function	Step
To select a Ring Tone.	1. Highlight SET-UP on the Menu. 2. Using the ▲ and ▼ keys, highlight "RING TONE" and press "OK". 3. Using the ▲ and ▼ keys, highlight the ring tone you desire and press "OK".  NOTE: Five pre-set ring tones are available and a sample of each will play when highlighted.
To adjust the Ring Volume.	1. Highlight SET-UP on the Menu. 2. Using the ▲ and ▼ keys, highlight "RING VOL" and press "OK".  NOTE: Eight pre-set volume settings are available and a sample of each will play when highlighted.
To adjust the Time Setting.	1. Highlight SET-UP on the Menu. 2. Using the ▲ and ▼ keys, highlight "TIME" and press "OK". 3. Use the keypad to adjust the time and date. EXAMPLE: To set the time to 12:34 PM, press 1, 2, 3, 4, ▼ and press "OK".  NOTE: After you change your batteries, the Mobile Handset will automatically be reset. The initial setting of time and date will revert to 12:00 AM, 2007 Jan 1st

**CHECKING YOUR ID NUMBER**

- To check your ID number, go to "B" Mode, press the CANCEL key until no icons are highlighted, then press the "ID" key on the side of your Mobile Handset.

**TO CHANGE ID NUMBER OR ERASE ALL DATA**

- To change your ID number, go to "B" Mode, press the CANCEL key until no icons are highlighted, then press \*\*0000000## then press "OK".

To adjust any of the 2 items below, first go to "B" Mode, press the CANCEL key until no icons are highlighted, then press \*\*0000000## and "OK" then press 0 or 9.

To erase the data in your mailbox, to-do list, and phone book	In Text Mode with no icons highlighted on the Menu, press **0000000## and "OK" to confirm. 1. Press "0" 2. Press Cancel
To change the ID	In Text Mode with no icons highlighted on the Menu, press **0000000## and "OK" to confirm. 1. Press 9, then "OK" to confirm. 2. Enter a new 8 digit ID number and press "OK" to confirm. 3. Press Cancel

**FCC WARNING STATEMENT**

FCC Compliance

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Modifications not authorized by the manufacturer may void users authority to operate this device.

**IC RSS210 WARNING STATEMENT**

This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Operation temperature

The product can only be operated from 0 degrees centigrade to 35 degrees centigrade.

Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Warning: Any adjustment to this equipment is recommended to be performed by or under the immediate supervision and responsibility of a person certified as technically qualified to perform transmitter maintenance and repair duties in the private land mobile services and fixed services by an organization or committee representative of users of those services.

Warning: Replacement of any transmitter component (crystal, semiconductor, etc.) for this equipment could result in violation of FCC rules.

**SAFETY INFORMATION**

Your wireless hand-held portable transceiver contains a low power transmitter. When the Push-to-Talk (PTT) button is pushed it sends out radio frequency (RF) signals. The device is authorized to operate at a duty factor not to exceed 50%. In August 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless devices. CAUTION: To maintain compliance with the FCC's RF exposure guidelines hold the transmitter and antenna at least 1 inch (2.5 centimeters) from your face and speak in a normal voice, with the antenna pointed up and away from the face.

Use only the supplied antenna. Unauthorized antennas, modifications, or attachments could damage the transmitter and may violate FCC regulations.

This Class B digital apparatus complies with Canadian ICES-003.

**SAFE BATTERY USAGE**

- Use alkaline batteries for best performance and longer life
- Use only the type battery recommended for the unit.
- Batteries should be replaced only by an adult.
- Insert batteries with the correct polarity (+ and -).
- Do not mix different types of batteries or old and new batteries.
- Do not short-circuit batteries.
- When not used for an extended time, remove batteries to prevent possible leakage and damage to the unit.
- Do not mix rechargeable and non-rechargeable batteries.
- Rechargeable batteries are to be removed from the toy before charging.
- Rechargeable batteries are to be recharged only under adult supervision.
- Do not recharge non-rechargeable batteries.
- Exhausted batteries are to be removed from the units.
- Do not dispose of batteries in fire as they may leak or explode.

DISPOSAL OF BATTERIES: Do not treat old batteries as household waste. Take them to a designated recycling facility.

NOTE: The voltage of a fully-charged, rechargeable battery is often lower than that of a fresh alkaline battery. Therefore, it is recommended that alkaline batteries be used instead of rechargeable batteries for best performance and for longest play time.



'Let's care for the environment!'

The wheelee bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item

Please keep this manual as it contains important information.



0507-0 E

www.bratz.com  
TM & © MGA Entertainment, Inc.  
BRATZ™, BRATZ PETZ™, LIL' BRATZ™, BRATZ BABYZ™, BRATZ KIDZ™ and all related logos, names, characters, distinctive likenesses and slogans, as well as the packaging and images appearing thereon, are the exclusive property of MGA.  
16300 Roscoe Blvd.  
Van Nuys, CA 91406 USA  
(800) 222-4685  
Printed in China.

The preferred method of contact for Customer Service is through our e-mail contact form at [www.mgae.com](http://www.mgae.com)

