

KIDZ Radio Controlled Motor Scooter

Ages 4+

WARNING:
CHOKING HAZARD—Small parts
Not for children under 3 years

Item no: 338376

ADULT BATTERY INSTALLATION REQUIRED

INTRODUCTION

 
Every day's an adventure for the kids with a passion for fun! And when you do the driving, this RC motor scooter is an adventure for you too!

QUICK START


STEP 1: BATTERY INSTALLATION

Radio Control Handset

1. Switch the power to "OFF".
2. Using a Phillips screwdriver (not included) remove the screw and battery compartment cover from the bottom of the Handset. (see Fig. 1)
3. Install one (1) 9V alkaline battery (not included) making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment. (Fig. 1)
4. Replace the battery cover & tighten the screw.

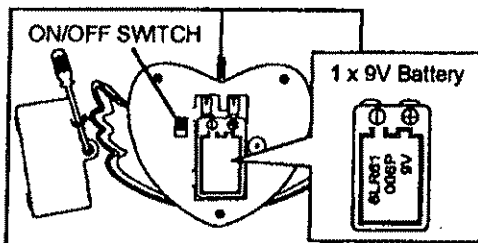

RC Handset Fig. 1

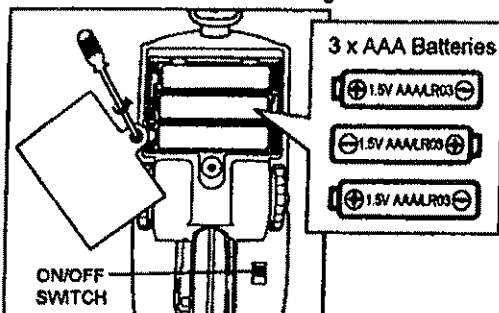 

Motor Scooter Fig. 2

Motor Scooter

1. Using a Phillips screwdriver (not included) remove the screw and battery compartment cover from the bottom of the scooter. (Fig. 2)
2. Insert three (3) AAA (1.5V) Alkaline batteries (not included) making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment. (Fig. 2)
3. Replace the battery cover & tighten the screw.

STEP 2: GIVE YOUR BRATZ KIDZ™ A RIDE

To get your Bratz Kidz™ ready to roll:

1. Place the helmet on her head and secure with the Velcro™ fastener. (Fig. 3)
2. Bend your Bratz Kidz™ legs at the knees and place her on the scooter (Fig. 4)
3. Fasten her seat belt using the Velcro™ fastener. (Fig. 4)

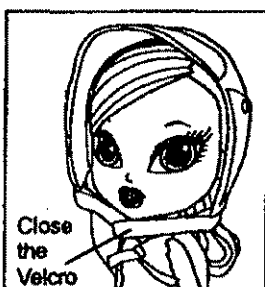 


Fig. 3

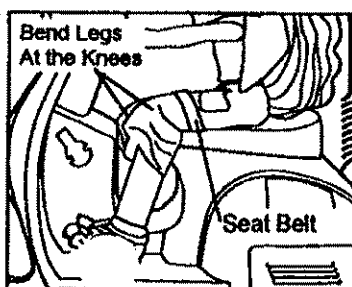 


Fig. 4

STEP 3: RACING YOUR SCOOTER

1. Switch the Remote Control Handset and the Motor Scooter switches to "ON."
2. Straighten the Antenna (Fig. 5)
3. Push the FORWARD, BACKWARD, LEFT and RIGHT buttons to race your vehicle in any direction! (Figs. 6 & 7)

NOTE: An indicator light on the handset will light only when you push the buttons.

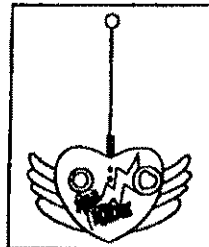 


Fig. 5

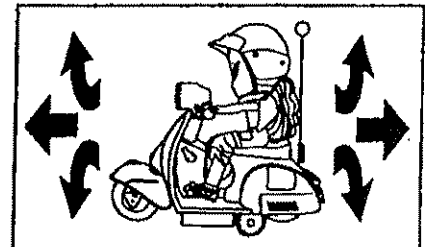 


Fig. 6

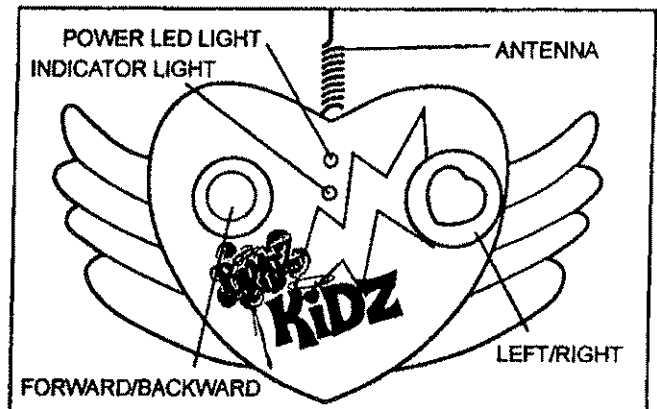 


Fig. 7

MOTOR SCOOTER STEERING ADJUSTMENT

1. Adjust your motor scooter's steering by rotating the Steering Knob bit by bit. (Fig. 8)
2. After each adjustment, place your motor scooter on the ground and take it for a spin!
3. Repeat these steps until you get the best steering action for your motor scooter.

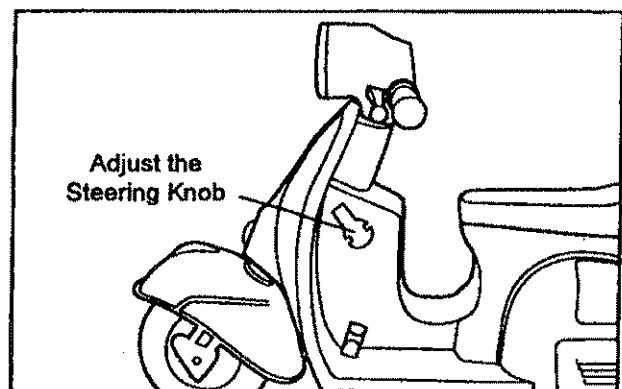 


Fig. 8

TROUBLE SHOOTING

IF THERE IS NO FUNCTION BETWEEN THE REMOTE CONTROL HANDSET AND THE MOTOR SCOOTER:

- Make sure the Remote Control Handset and the Motor Scooter switches to the ON position.
- Make sure the batteries are inserted properly.
- Replace the old batteries with new alkaline batteries.
- Move the remote control handset closer to the motor scooter to determine the best communication between the two. (The operating range is approximately 6 to 8 feet.)
- When not in use, turn both the remote and scooter switches to OFF to save battery power.

HELPFUL HINTS

CAUTION: DO NOT operate units during thunderstorms. DO NOT operate the motor scooter on the street or in traffic.
CAUTION: Keep fingers, hair and loose clothing away from the tires, wheel hubs and motors while the motor scooter is switched on.

- Avoid water when racing your motor scooter. In addition, do not submerge your Motor Scooter Handset in water.
- When your motor scooter starts to lose power and/or experiences a loss of performance ability, replace the batteries.
- Your motor scooter is operated by radio waves. It is possible the unit may not perform properly due to interference from nearby devices such as a cordless phones, hair dryers, radios, walkie-talkies or other radio-controlled toys.
- Avoid operating the motor scooter in sand and snow.
- Always select a safe place to play. Never operate your motor scooter on populated streets.

SAFE BATTERY PRECAUTIONS

1. Non-rechargeable batteries are not to be recharged;
2. Rechargeable batteries are to be removed from the toy before being charged;
3. Rechargeable batteries are only to be charged under adult supervision;
4. Different types of batteries or new and used batteries are not to be mixed;
5. Only batteries of the same or equivalent type as recommended are to be used;
6. Batteries are to be inserted with the correct polarity;
7. Exhausted batteries are to be removed from the toy;
8. The supply terminals are not to be short-circuited;
9. Do not dispose of the batteries in fire, batteries may leak or explode;
10. Batteries should be replaced by adult;
11. Use alkaline batteries for better performance;
12. When not in use for an extended time, remove batteries to prevent possible leakage.

CAUTION:

- DO NOT use rechargeable batteries in the Remote Control Handset or the Motor Scooter.
- Not suitable for children under 3 years.
- May contain small parts.

IMPORTANT:

- **Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- EMISSIONS OR INTERFERENCE OF SURROUNDING ELECTRONIC EQUIPMENT MAY AFFECT OPERATING PERFORMANCE.

NOTES:

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please keep this manual as it contains important information.



0506-0

www.bratz.com
www.bratzpack.com
TM & © MGA Entertainment, Inc.
BRATZ™, BRATZ PETZ™, LIL' BRATZ™,
BRATZ BABYZ™, BRATZ KIDZ™ and all related
logos, names, characters, distinctive likenesses
and slogans, as well as the packaging and images
appearing thereon, are the exclusive
property of MGA.
16300 Roscoe Blvd.
Van Nuys, CA 91406 USA
(800) 222-4685
Printed in China

The preferred method of contact for
Customer Service is through our e-mail
contact form at www.mga.com.

