 




Item No.: 352358
 352396
 353201

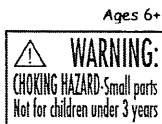

 
ADULT BATTERY INSTALLATION REQUIRED

INTRODUCTION

The Bratz™ are revved up for maximum cool on super hot, remote control Skateboards! You control the stunts and tricks and play real music at the same time! Each Bratz™ is removable from her board and comes with sizzling safety gear.

CONTENTS

- 1 Bratz Play Sportz™ X-Treme Skateboarding Doll
- 1 X-Treme Skateboard
- 1 Full-Function Remote Control
- 1 Hairbrush/Comb
- 1 Mini Skateboard keychain (attached on packaging handle)
- 1 Pair of Earrings (on doll)
- 1 Skateboarding Helmet (on doll)
- 1 Pair of Kneepads (on doll)
- 1 Pair of Elbow Pads (on doll)
- 1 Sticker sheet (back of package)

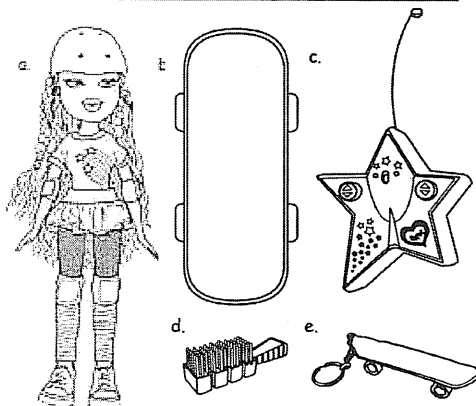


Illustrations may vary from actual contents.

BEFORE YOU BEGIN

Ask an Adult to help you install batteries.


Remote Control

 - Using a Phillips screwdriver (not included) remove the screw and battery compartment cover from the bottom of the Remote Control.
- Install one (1) 9 Volt alkaline battery (not included) making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
- Replace the compartment cover and tighten the screw.


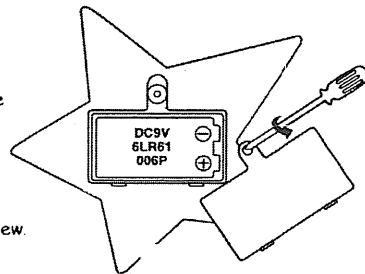


Skateboard

 - Remove the screw and battery compartment cover from the bottom of the Skateboard.
- Install three (3) AAA alkaline batteries (not included) making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
- Replace the compartment cover and tighten the screw.

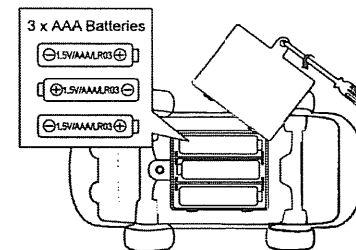

 
 
- To remove the Skateboard keychain from the top of the package, ask an ADULT to use scissors (not included) to clip the ties attaching it to the package. (Figs. 1 & 2)

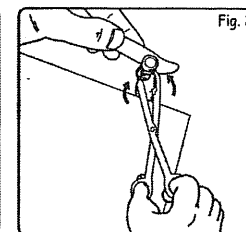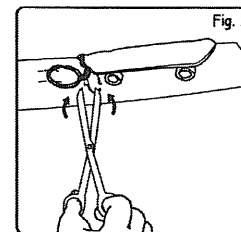


QUICK START

Get ready to roll with the Bratz™ and create musical sounds too by doing the following:

  - Safety First! Make sure your Bratz™ has put on her protective gear including kneepads, elbow pads and helmet.
- Place your Bratz™ on the Skateboard by fitting the holes in her shoes over the Pegs on the board and pressing down firmly.
- Turn the ON/OFF switch on the bottom of the Skateboard to ON.

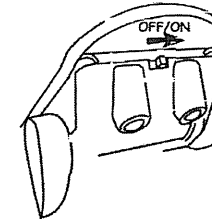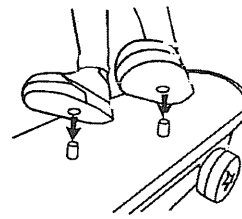

 
- Push the ON/OFF switch on the Remote forward. (A red light on top of the Remote will light up.)

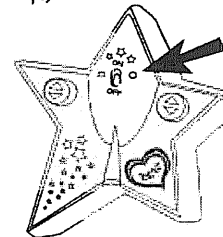

- Place the Board on the floor or other level area.



 6. To send your Bratz™ off on a Skateboarding adventure:
- Press both joysticks forward to move the Board forward.
 - Press both joysticks backward to move the Board backward.
 - Press one joystick forward and one backward to make the Board spin.
 - Reverse the direction of the joysticks to spin the Board in the opposite direction.

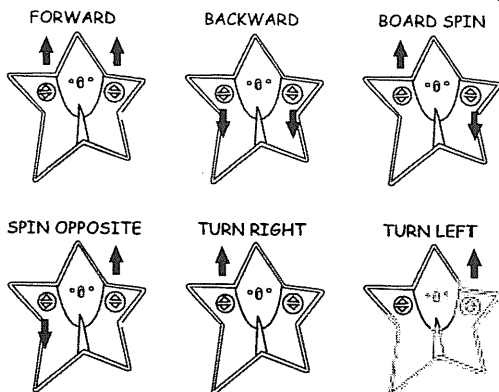

7. Practice making right or left hand turns by moving one joystick or the other forward in a short burst then pressing both sticks forward to continue onward.
 8. Rock, roll, do stunts and hear cool sounds while you make super moves!
 NOTE: Performance of the Skateboard will vary depending on the pose of the doll. Find the ultimate pose for stunts, tricks or just plain speed and...GO!

FCC

NOTE: This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- Warning: changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- EMISSIONS OR INTERFERENCE OF SURROUNDING ELECTRONIC EQUIPMENT MAY AFFECT OPERATING PERFORMANCE.

CAUTION:

- Do not operate the Skateboard on streets or in traffic.
- Do not operate units during thunderstorms.
- Keep fingers, hair and loose clothing away from the tires, wheel hubs and motors while the Skateboard is switched on.

- Avoid water when racing your Skateboard. In addition, do not submerge your Skateboard or Remote Control in water.
- Your Skateboard is operated by radio waves. It is possible the unit may not perform properly due to interference from nearby devices such as cordless phones, hair dryers, radios, walkie-talkies or other radio-controlled toys.
- Avoid operating the Skateboard in sand and snow.
- Always select a safe place to play. Never operate your Skateboard on populated streets.

TROUBLESHOOTING


If there is no function between the Remote Control Handset and the Skateboard.

- Make sure you have turned ON both the Remote Control and the Skateboard.
- Check that the batteries are inserted properly.
- Replace the old batteries with new alkaline batteries.
- Move the remote control handset closer to your Skateboard to determine the best communication between the Remote Handset and the Skateboard
- For best performance, operate the skateboard on smooth, flat surfaces. Avoid playing with the unit on carpet or in outdoor areas such as grass or other surfaces which will hamper wheel traction.
- When not in use, turn both the Remote and Skateboard switches to the OFF position to save battery power.

SAFE BATTERY USAGE

Under unusual conditions, batteries may leak and cause damage to this product or a chemical burn injury if touched. To minimize battery leakage:

- Non-rechargeable batteries are not to be recharged;
- Rechargeable batteries are to be removed from the toy before being charged;
- Rechargeable batteries are only to be charged under adult supervision;
- Different types of batteries or new and used batteries are not to be mixed;
- Only batteries of the same or equivalent type as recommended are to be used;
- Batteries are to be inserted with the correct polarity;
- Exhausted batteries are to be removed from the toy;
- The supply terminals are not to be short-circuited;
- Do not dispose of the batteries in fire, batteries may leak or explode.
- Batteries should be replaced by adult.
- Use alkaline batteries for better performance.
- When not used for an extended time, remove batteries to prevent possible leakage and damage to the unit.
- Use only the type battery recommended for the unit.
- Do not mix rechargeable and non-rechargeable batteries.

 Hereby, MGA Entertainment (H.K.) Ltd., declares that this Bratz X-Treme Skate Boarding RC Doll is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Please keep this manual as it contains important information.



1006-0 E

www.bratz.com
 TM & © MGA Entertainment, Inc.
 BRATZ™, BRATZ PETZ™, LIL' BRATZ™,
 BRATZ BABYZ™, BRATZ KIDZ™ and all
 related logos, names, characters, distinctive
 likenesses and slogans, as well as the
 packaging and images appearing thereon,
 are the exclusive property of MGA.
 16300 Roscoe Blvd.
 Van Nuys, CA 91406 USA
 (800) 222-4685
 Printed in China

The preferred method of contact for Customer Service is through our e-mail contact form at www.mgae.com

