

## IMPORTANT

EMISSIONS OR INTERFERENCE OF SURROUNDING ELECTRONIC EQUIPMENT MAY AFFECT OPERATING PERFORMANCE.

## CAUTION

1. Not suitable for children under 3 years.

## FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



Let's care for the environment!  
The wheeled bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item.

DISPOSAL OF BATTERIES: Do not treat old batteries as household waste. Take them to a designated recycling facility.

Please keep this manual as it contains important information.

Chevrolet, the Chevrolet Bowtie Emblem, Corvette, the Corvette Emblem, and the related vehicle body designs are General Motors Trademarks used under license to MGA.



0607-0-E/INT

www.bratz.com  
TM & © MGA Entertainment, Inc.  
BRATZ™, BRATZ PETZ™, LIL' BRATZ™,  
BRATZ BABYZ™, BRATZ KIDZ™ and all  
related logos, names, characters, distinctive  
likenesses and slogans, as well as the  
packaging and images appearing thereon, are  
the exclusive property of MGA.  
16300 Roscoe Blvd.  
Van Nuys, CA 91406 USA  
(800) 222-4685  
Printed in China

The preferred method of contact for  
Customer Service is through our e-mail  
contact form at [www.mga.com](http://www.mga.com).



# RC 1962 CORVETTE

**WARNING:**  
CHOKING HAZARD—Small parts.  
Not for children under 3 years.

Ages 6+

Asst. no.: 366355

 
 
ADULT BATTERY INSTALLATION REQUIRED

## INTRODUCTION

This super-cool, crusin', classic car is straight out of the Bratz™ movie! With its sizzlin' style and kickin' curves, it's the perfect ride for your Bratz™!

## CONTENTS

- a. 1 Bratz™ The Movie RC 1962 Corvette (operated under either 27MHz or 49MHz frequency)
- b. 1 Remote Control

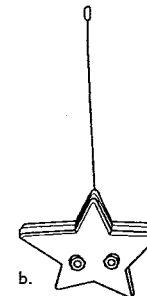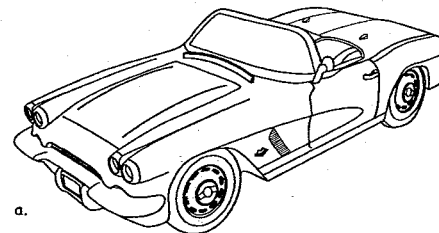

## BEFORE YOU BEGIN

Before hitting the road in your classic car an adult must install the batteries. Here's how:

### REMOTE CONTROL

1. Turn the ON/OFF switch to OFF
2. Using a Phillips screwdriver (not included) remove the screw and battery compartment cover on the back of the remote. (See Fig. 1)
3. Insert a 9V ALKALINE battery (not included) making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment. (See Fig. 2)
4. Replace the compartment cover, tighten the screw and turn the ON/OFF switch to the ON position.

NOTE: Do not use rechargeable batteries for the Remote Control Handset.



Fig. 1

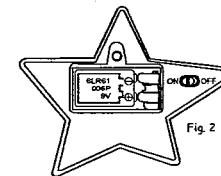 


Fig. 2

## BEFORE YOU BEGIN (con't)

### VEHICLE

1. Press the button on the vehicle trunk to open the trunk lid.
2. Turn the ON/OFF switch located inside the trunk to OFF. (See Fig. 3)
3. Using a Phillips screwdriver (not included) remove the screw and battery compartment cover from inside the trunk.
4. Install six (6) AA (1.5V) alkaline batteries (not included) making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
5. Replace the compartment cover, tighten the screw, turn the ON/OFF switch to ON and close the trunk.

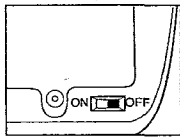 


Fig. 3

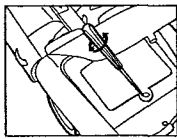 


Fig. 4

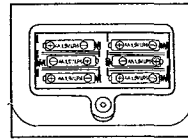 


Fig. 5

NOTE: When racing two Bratz™ The Movie RC 1962 Corvette, they must be of opposite radio frequencies or they may not perform as designed.

### LIGHTS AND RADIO

1. Using a Phillips screwdriver (not included) remove the screw and the battery cover on the bottom of the vehicle. (Fig. 6)
2. Insert two (2) AA (1.5V) alkaline batteries as indicated inside the battery compartment. (Fig. 7)
3. Replace the battery cover and tighten the screw.

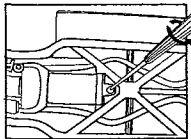 


Fig. 6

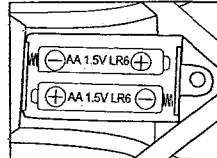 


Fig. 7

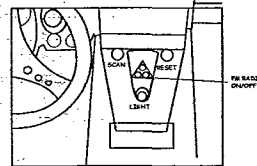 


Fig. 8

## QUICK START

### OPERATING THE LIGHTS

1. Press the ON/OFF button to turn lights on. Press it again to turn lights off. (Fig. 8)

### OPERATING THE RADIO

1. Press the ON/OFF button (Fig. 8) to turn the Radio on. Press it again to turn the Radio off.
2. Press the RESET button (Fig. 8) to set your radio at the lowest end of the FM frequency band (approximately 88 FM).
3. Press the SCAN button (Fig. 8) repeatedly to scan radio stations, from the lowest frequency to the highest.

NOTE: Hold the button down for faster scanning. Release the button to stop at a station.

4. When only static can be heard and you have reached the highest FM frequency band (108 FM), press the RESET button to restart at the lowest end of the frequency band, then press the SCAN button again to scan for a radio Station.

### USING THE REMOTE CONTROL

1. Switch the vehicle to the "ON" position. (Fig. 3)
2. Switch the Remote Control to the "ON" position. (Fig. 1)
3. Use the Left and Right control switches to control the vehicle.

LEFT CONTROL - Press forward to move the vehicle forward.  
Press backward to move the vehicle backward.

RIGHT CONTROL - Press right to move the vehicle right.  
Press left to move the vehicle left.

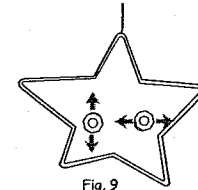 


Fig. 9

## TROUBLE SHOOTING

1. If the radio signal or the lights become weak or fail to work, replace the batteries with fresh alkaline batteries. (See Figs. 6 and 7)
2. Radio performance may be affected by surrounding buildings, structures or equipment. If the radio signal is poor, move the vehicle to another location for a better signal.
3. Radio performance may be affected when the vehicle is moving. Either stop the vehicle to listen to the radio or move the vehicle to another location to receive a better signal.

### REMOTE CONTROL

If there is no signal between the Remote Control and the vehicle:

1. Make sure the Remote Control is switched ON.
2. Make sure the vehicle is switched ON.
3. Check that the batteries are inserted properly.
4. Replace the old batteries with new alkaline batteries.
5. Move the remote control closer to the vehicle until you find the optimum operating range.
6. When not in use, turn off both the remote & vehicle to save battery power.



## WARNING

1. DO NOT operate the units during thunderstorms.
2. DO NOT operate the vehicle on streets or in traffic.
3. Keep fingers, hair and loose clothing away from the tires, wheel hubs and motors, especially when they are moving.
4. DO NOT subject unit to moisture of any kind.
5. DO NOT operate the unit in sand, snow or water.
6. Your R/C vehicle is operated by radio waves. It is possible the unit may not perform properly due to interference from nearby devices such as a cordless phones, hair dryers, radios, walkie-talkies or other radio-controlled toys.
7. Use the unit indoors for best performance.

## SAFE BATTERY PRECAUTIONS

- Use alkaline batteries for best performance and longer life.
- Use only the type battery recommended for the unit.
- Batteries should be replaced only by an adult.
- Insert batteries with the correct polarity (+ and -).
- Do not mix different types of batteries or old and new batteries.
- Do not short-circuit batteries.
- When not used for an extended time, remove batteries to prevent possible leakage and damage to the unit.
- Do not mix rechargeable and non-rechargeable batteries.
- Rechargeable batteries are to be removed from the toy before charging.
- Rechargeable batteries are to be recharged only under adult supervision.
- Do not recharge non-rechargeable batteries.
- Exhausted batteries are to be removed from the toy.
- Do not dispose of batteries in fire as they may leak or explode.

NOTE: The voltage of a fully-charged, rechargeable battery is often lower than that of a fresh alkaline battery. Therefore, it is recommended that alkaline batteries be used instead of rechargeable batteries for best performance and for longest play time.