

LIMITED WARRANTY

The Little Tikes Company makes fun, high quality toys. We warrant to the original purchaser that this product is free of defects in materials or workmanship for one year * from the date of purchase (dated sales receipt is required for proof of purchase). At the sole election of The Little Tikes Company, the only remedies available under this warranty will be the replacement of the defective part or replacement of the product. This warranty is valid only if the product has been assembled and maintained per the instructions. This warranty does not cover abuse, accident, cosmetic issues such as fading or scratches from normal wear, or any other cause not arising from defects in material and workmanship. *The warranty period is three (3) months for daycare or commercial purchasers.

U.S.A and Canada: For warranty service or replacement part information, please visit our website at www.littletikes.com, call 1-800-321-0183 or write to: Consumer Service, The Little Tikes Company, 2180 Barlow Road, Hudson OH 44236, U.S.A. Some replacement parts may be available for purchase after warranty expires—contact us for details.

Outside U.S.A and Canada: Contact place of purchase for warranty service. This warranty gives you specific legal rights, and you may also have other rights, which vary from country/state to country/state. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

BATTERY SAFETY INFORMATION

- Use only 4 size "AA" (LR6) and 2 size "AAA" (LR03) alkaline batteries (6 required).
- Charging of rechargeable batteries should only be done under adult supervision.
- Remove rechargeable batteries from the product before recharging.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Be sure to insert the batteries correctly and follow the toy and battery manufacturer's instruction.
- Always remove exhausted or dead batteries from the product.
- Dispose of dead batteries properly: do not burn or bury them.
- Do not attempt to recharge non-rechargeable batteries.
- Avoid short-circuiting battery terminals.
- Remove batteries before placing the unit into storage for a prolonged period of time.

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void users authority to operate this device.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device. CAN ICES-3 (B)/NMB-3(B).



'Let's care for the environment!'

The wheellie bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item.

Do not treat old batteries as household waste. Take them to a designated recycling facility.

Please keep this manual as it contains important information.



© The Little Tikes Company, an MGA Entertainment company. LITTLE TIKES® and RESCUE TALES™ are trademarks of Little Tikes in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of Little Tikes.

Printed in China • 0621-1-C



www.littletikes.com
www.littletikes.co.uk
www.littletikes.com.au

Little Tikes Consumer Service
2180 Barlow Road
Hudson, Ohio 44236 U.S.A.
1-800-321-0183

MGA Entertainment UK Ltd.
50 Presley Way, Crownhill, Milton
Keynes, MK8 0ES, Bucks, UK
support@LittleTikesStore.co.uk
Tel: +0 800 521 558

MGA Entertainment (Netherlands) B.V.
50 Presley Way, Crownhill, Milton
Keynes, MK8 0ES, Bucks, UK
support@LittleTikesStore.co.uk
Tel: +31 (0) 172 758038

**Imported by MGA Entertainment
Australia Pty Ltd**
Suite 2.02, 32 Delhi Road
Macquarie Park NSW 2113
1300 059 676



WALK 'N WIGGLE DAISY™

ENG

SKU: 657719C

AGES 4+
ADULT SUPERVISION REQUIRED
ADULT BATTERY INSTALLATION REQUIRED

CONTENTS

- A. Walk 'n Wiggle Daisy™
B. Remote Control with Detachable Leash

Sign your pet's adoption certificate.



 
Illustrations are for reference only. Styles may vary from actual contents. Please remove all packaging including tags, ties & tacking stitches before giving this product to a child.

BATTERY INSTALLATION

The batteries included in your pup are for in-store demonstration. It is recommended that, prior to playing, an adult install fresh alkaline batteries. Here's how:


PUP BATTERY REPLACEMENT

1. Open the flap located under the pup.
2. Using a Phillips screwdriver (not included) remove the screw and battery compartment cover under the pup.
3. Remove the battery pack from inside the battery compartment. **NOTE: The battery pack is double-sided.**
4. Install four (4) 1.5V AA (LR6) alkaline batteries (not included) making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
5. Replace the battery pack, making sure the metal plates on the battery pack and the metal plates inside the battery compartment touch.
6. Replace the compartment cover and tighten the screw. Then, close the flap.

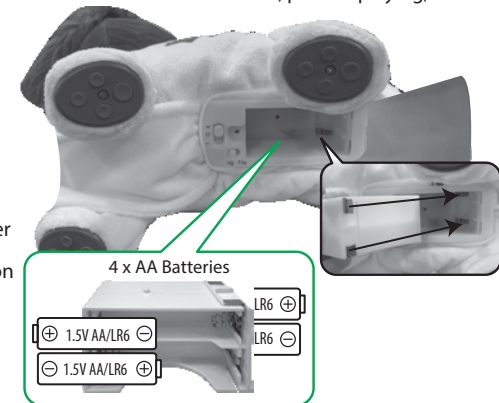


REMOTE CONTROL BATTERY INSTALLATION

 
1. Using a Phillips screwdriver (not included) remove the screw and battery compartment cover on the back of the remote control.
2. Install two (2) 1.5V AAA (LR03) alkaline batteries (not included) making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
3. Replace the compartment cover and tighten the screw.

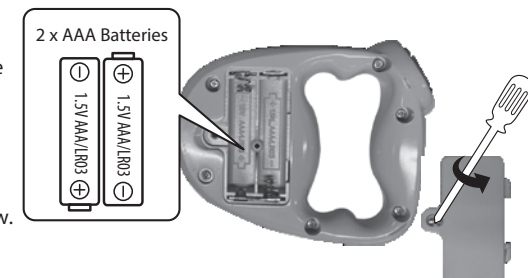

BEFORE BEGINNING

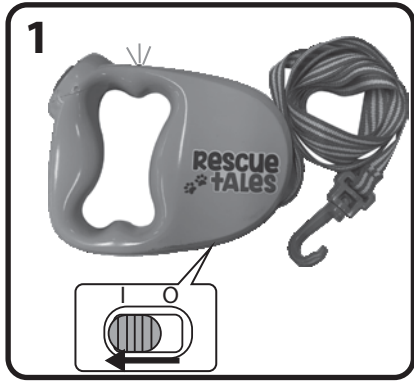 

 1. Move the switch under the remote control to the ON (I) position. The light on top of the remote control will begin to flash.


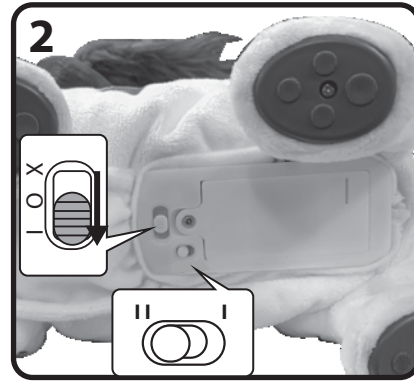


2. Open the flap under the pup and move the switch from Motion Detection mode (X) to the ON position (I). The light on the remote control will stop flashing.

To change the language, move the language switch from ENG (I I) to FRE (I) or vice versa.

WALKING DAISY

  1. Hook the leash onto the back of the pup's collar. (Fig. 1)
2. To walk your pup, press the left, right or up buttons once. Daisy can also dance! Press the middle button once to see your pup dance. (Fig. 2) To stop Daisy, press the stop button.
3. Your pup will continue to respond to the remote control commands even if detached from the leas .

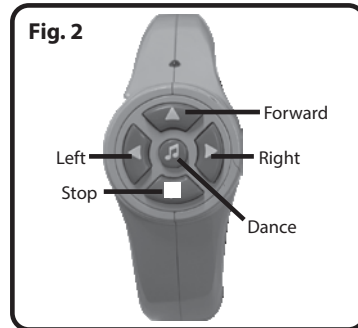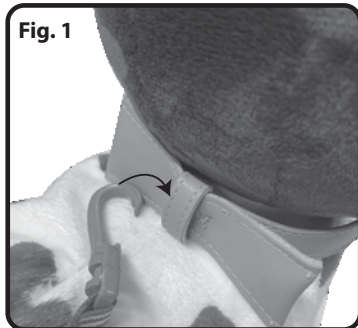

TRAINING DAISY

Daisy understands commands! Say "Daisy" and then the command to see her reactions. Make sure to speak clearly and that you say "Daisy" before any command. See Phrases You Can Say for all the different commands. Make sure to speak clearly in front of Daisy and in a quiet room.



ENG

PHRASES YOU CAN SAY!

Daisy will react differently to each command.

- Dance party!
- Who's a good girl?
- Let's go! (Daisy will walk away from the direction the command came from.)
- Wanna go for a walk?
- Snack time!
- Come here! (Daisy will walk towards the direction the command came from.)
- Get your tail!
- What's that?
- I love you.
- Time for bed!

FR

EXPRESSIONS QUE VOUS POUVEZ DIRE !

Daisy réagira différemment à chaque commande.

- Danse !
- Qui est gentille ?
- Allons-y ! (Daisy s'éloignera de la direction d'où vient l'ordre.)
- Tu veux faire une promenade ?
- Tu veux une friandise ?
- Viens ici ! (Daisy se dirigera vers la direction d'où vient l'ordre.)
- Cours après ta queue !
- Qu'est-ce que c'est, là-bas ?
- Je t'aime bien.
- C'est l'heure du coucher !

IMPORTANT NOTES:

- Before giving Daisy a command, make sure to clearly say "Daisy" and then wait for her response.
- When you tell Daisy "time for bed," Daisy will go into sleep mode. Pet her head front to back to wake her up.
- While in sleep mode, Daisy can sense motion and make sounds. Pet her to wake her up.

INTERACTING WITH DAISY

Move the switch under Daisy from the ON (I) or OFF (O) position to the Motion Detection mode (X) position. While in this mode, Daisy can sense motion. Walk by your pup to hear puppy sounds.



IMPORTANT INFORMATION

- Play is limited in MOTION DETECTION mode. Move the switch to the ON (I) position for full play experience.
- After a minute of no activity, your pup will go into sleep mode. Pet Daisy to wake her up.
- Turn off the pup after use to conserve battery power by moving the switch to the OFF position (O).
- Surface wash the pup only. Keep moisture away from the battery compartment.
- Do not play in the street, where there is vehicular traffic or in heavily traveled areas with pedestrians.
- Do not use leash on live animals.
- Frequency band range is 2.407GHz - 2.475GHz.
- Maximum radio-frequency power is 10dBm.

FCC ID: LU9657719TX
 LU9657719RX
 IC: 4504A-657719TX
 4504A-657719RX