

Note:

Sprint PCS
Wireless Web
service will not
work when roam-
ing off the
Sprint PCS
Nationwide
Network and may
not be
available in select
Affiliate areas.

The Sprint PCS Wireless Web

With the Sprint PCS Wireless Web and your wireless Internet-ready phone, you have access to the wireless Internet in three ways:

The Sprint PCS Wireless Web MiniBrowser allows you to view specially-design text versions of popular web sites.

Sprint PCS Wireless Web Connection allows you to connect to the Internet or your company's network with a laptop PC or hand-held computing device and a Sprint PCS Wireless Web Connection Kit

Sprint PCS Wireless Web Updates allows you to automatically receive the information that's important to you - e-mails, news, weather and more - directly on your Sprint PCS Phone.

The Sprint PCS Wireless Web Browser

Your phone comes equipped with a MiniBrowser, which allows you to access up-to-the minute information through the Sprint PCS Wireless Web.

You can view specially-designed text versions of popular Internet sites, including Yahoo!®, Amazon.com®, The Weather Channel®, and more. Browsing the Sprint PCS Wireless Web using your phone is different than using a home computer because the amount of information is reduced (sites usually display only their most critical aspects) and most of the graphics have been removed.

The MiniBrowser connects to the Internet by placing a call. Note that  appears on the display whenever a call is in progress, just as with a regular voice call. Service charges vary depending on your service option.

Launching a Sprint PCS Wireless Web Browser Session

To launch the Sprint PCS Wireless Web Browser:

1. From the main menu, highlight **Wireless Web** and press **OK**. You'll see a few introductory messages as the browser launches.

The first time you use the MiniBrowser, you'll be prompted to enable the security feature. This automatic process will take 3-6 minutes to complete and it occurs just once. When the process is complete, you're ready to start using the Sprint PCS Wireless Web.

Following the security setup, you'll see the Sprint PCS Wireless Web home page. This is the main page for the MiniBrowser and it gives you access to all the sites in the Sprint PCS Wireless Web. The next time you use the MiniBrowser, you may not see the home page at first because the MiniBrowser will re-display the page you were viewing when you last exited the MiniBrowser.

WIRELESS WEB

- 1 @SprintPCS
- 2 Yahoo!
- 3 Amazon.com
- 4 Ameritrade
- 5 Bloomberg
- 6 FOX Sports
- 7 The Weather
- 8 CNN
- 9 Bookmarks
- More...
- OK GOTO

The Sprint PCS Wireless Web Home Page*

*subject to change

[Illustration is a placeholder and will be replaced.]

You may notice that sometimes the MiniBrowser will launch without placing a call. This is because the phone stores recently viewed pages in its memory cache. The MiniBrowser will connect automatically when you access a page that's not stored in the cache.



If you've been inactive for awhile and not requesting new wireless web pages, the MiniBrowser will automatically disconnect. The MiniBrowser will remain active-only the connection will end. The MiniBrowser will automatically reconnect when you go to a page that's not stored in the phone's memory cache. For this reason, you may find that you are billed for several network connections within a single session. This is normal and is designed to minimize airtime charges.

When launching the MiniBrowser you will see a reminder that MiniBrowser calls will be charged.

Using the Sprint PCS Wireless Web Browser

Using the MiniBrowser is easy once you've learned a few basics. Here are some tips for navigating the Sprint PCS Wireless Web:

Softkeys

The bottom line of the MiniBrowser contains a row of softkeys. These are your main controls for getting around. To activate a softkey, press the Mouse Key left or right to highlight the desired softkey, then press

OK

Press the Mouse Key right a few times and you'll see more softkeys. Depending on the web page you're using, the first two softkeys may change names and functions, but the other softkeys are always available and give you access to these special features:

- **Home** Accesses the Sprint PCS Wireless Web home page.
- **Exit** Exits the MiniBrowser and disconnects from the Sprint PCS Wireless Web.
- **Help** Opens the MiniBrowser Menu, which is described later.
- **Mark** Creates a bookmark for the current page.
- **Bkmrks** Accesses the list of Bookmarks.

Scrolling

As with other parts of your phone's menu, you'll have to scroll up and down to see everything on some web pages. Press the Mouse Key up or down to scroll line by line. You can also use the volume control keys on the side of your phone to quickly scroll one page at a time rather than one line at a time.

Tip:

The tenth item in a numbered list may be selected by pressing the 0 (zero) key on your phone's keypad, even though the number 0 doesn't appear on screen.

Selecting

Once you've learned how to activate softkeys, you can start navigating web pages. Select on-screen items by using the Mouse Key to highlight the desired item, then activate the desired softkey. You'll find that the left softkey is used primarily for selecting items. This softkey is often labeled "OK," but don't confuse it with **OK** on your phone, which always activates the highlighted softkey.

If the items on a page are numbered, you can also use your keypad (number keys) to select an item.

Links, which appear [in brackets], allow you to jump to different web pages, select special functions, or even place phone calls. Select links by highlighting the link and then activating the appropriate softkey, which is usually (but not always) the left softkey.

Going to a Wireless Internet Site

From the Sprint PCS Wireless Web home page, you can go to a wireless Internet site simply by highlighting the desired site name and activating the OK softkey. Note that the list of wireless Internet sites extends beyond one page. Select "More" to see additional site listings.

To access a site that does not appear on the home page, use the "GO TO" function. You'll be required to enter the URL (site address) for the site you want to visit. Note that only specially designed wireless Internet sites are accessible via the GO TO function.

Going to a Wireless Internet Site

To go back one page, press **CLP**.

Going Home

To return to the Sprint PCS Wireless Web home page, highlight the Home softkey and press **OK**.

Entering Text

Some web pages require that you enter text using your phone's keypad. See "Entering Characters Using T9 Text Input" on page xx or "Entering Characters by Tapping the Keypad" on page xx.

Creating a Bookmark

Bookmarks allow you to store the address of favorite web pages for easy access at a later time. Note that marking a page doesn't store the page contents, just its address.

To create a bookmark:

1. Go to the page you want to mark.
 2. Highlight the **Mark** softkey and press **OK**.
 3. When a page has a title, it is automatically used for the name of the bookmark. If you want, you can change the name.
 5. Highlight **Save** and press **OK** to save the name and add the page to your list of bookmarks. A message appears confirming the bookmark was added to the list.
 6. Select **OK** to return to the screen that you marked and resume navigation within the Sprint PCS Wireless Web Browser.
- The new bookmark is added to the bottom of your bookmark list.

To access a bookmark:

1. Select the **Bookmark** softkey and press.
2. Highlight the bookmark and press **OK**.

Finding a Bookmark

1. From the home page, select **Bookmarks**.
2. Choose the bookmark you want.

Deleting a Bookmark

1. From the bookmark list, highlight the bookmark you want to delete.
2. Press **OK**.
3. Select **Delete** from the options. A message displays prompting you to confirm.
4. Select **Yes** to delete the bookmark.

Using Go To:

1. Select the 'Go To' option, from the home page.
2. Enter the name or URL of the wireless Internet site. Press **OK**.

The Browser Menu

The Browser Menu contains several special functions. To access the Browser Menu, use the Mouse Key to highlight the Help softkey, then press **OK**.

Help View help text for the current web page (when available).

Home Accesses the Sprint PCS Wireless Web home page.

Mark Site Create a bookmark for the current web page.

Mark Creates a bookmark for the current page.

Show URL Display the URL (address) for the current web page.

Restart Reset and restart the MiniBrowser.

Phone.com Display information about the Phone.com browser.

Ending a Browser Session

To end a browser session and disconnect from the Sprint PCS Wireless Web, press **ESC** or highlight the Exit softkey and press **OK**.

Troubleshooting

If you're having trouble using the Sprint PCS Wireless Web MiniBrowser, use the following troubleshooting guide:

Problem

You can't escape from a particular site.

Recommendation

Go to the Sprint PCS Wireless Web home page by using the Mouse Key to highlight the Home softkey, then press **OK**.

Problem

You continue to receive errors when using a certain site.

Recommendation

Try again later. Sites are sometimes temporarily inaccessible due to high traffic. If the problem persists, there may be a problem with the site.

Problem

The MiniBrowser appears to be malfunctioning or stops responding.

Recommendation

Reset the MiniBrowser by going to the Browser Menu and selecting the "Restart" option. If that doesn't work, turn your phone off then on again. If that also fails, try removing the battery and then replacing it.

Tip:

Your phone's display shows you information on the status of the Sprint PCS Wireless Web Connection call.



If none of these solutions work, please contact Sprint PCS Customer Care.

Problem

An error message says that my phone is not yet registered for Sprint PCS Wireless Web services.

Recommendation

Sprint PCS Wireless Web services can take longer to activate than voice services. Please try again later. If the problem persists for more than one day, please contact Sprint PCS Customer Care.

Problem

The message "Service Not Available" appears.

Recommendation

Your phone can't acquire a signal or you are in an area that does not yet support Sprint PCS Wireless Web services. Move to an area that supports Sprint PCS Wireless Web services. If you continue to receive this message, please contact Sprint PCS Customer Care.

Problem

The message "Data Server Unavailable" appears.

Recommendation

 
Sprint PCS Wireless Web services are temporarily unavailable for some reason. Please try again later. If this problem persists, please contact Sprint PCS Customer Care.

Problem

The message "IP Address Missing" appears.

Recommendation

Your phone's factory settings have been altered. Please contact Sprint PCS Customer Care for assistance.



Tip:

To use the Sprint Wireless Web Connection with your Sprint PCS Phone, you'll need to acquire a Sprint PCS Wireless Web Connection Kit (sold separately). The kit contains everything you need, including a complete user guide.

Setting up a Sprint PCS Wireless Web Connection

Getting Started

Your wireless Internet-ready Sprint PCS Phone allows you to connect to a laptop PC, hand-held or palm-sized computing device to send and receive e-mail, access the Internet or your company's network and more, without searching for a wall-mounted telephone jack. In just three steps, you can use your connectivity:

1. First, you'll need a Sprint PCS Wireless Web™ Connection Kit (sold separately).
2. Connect your laptop PC to your Sprint PCS Phone by using the serial data cable. The cable adapter will connect to a hand-held or palm-sized computing device.
3. Finally, take a few minutes to install the Sprint PCS Dialer™ software onto your computer using your CD.

For complete details on how to install and use this software, refer to the user guide in the Sprint PCS Wireless Web Connection Kit.

Placing a Call

To place a call while you're connected to the Sprint PCS Wireless Web:

1. First, make sure the cable is connected properly.
2. Open the Sprint PCS Dialer software or application on your computer and place the call.

The phone displays the number your computer is calling and a "connecting" message is displayed.

Once the call successfully connects, your phone's display shows you information on the status of the data call.

Receiving Sprint PCS Wireless Calls

Most users use the Sprint PCS Wireless Web Connection to place outgoing data/fax calls. But you can also set up your Sprint PCS Phone to receive (host) data and fax calls. Because each phone model is different, the Sprint PCS Wireless Web Connection Kit doesn't include instructions for how to set up your phone to receive data and fax calls. Here's the procedure to set up your Sprint PCS Phone to receive a (mobile-terminated) data or fax call:

1. From the main menu, highlight **Settings** and press **OK**.
2. Highlight **Data/Fax (In)** and press **OK**.

Tip:

Caller ID is not available on Sprint PCS Wireless Web Browser calls.

Sprint PCS
Wireless Web
13

3. Select the menu option to enable incoming data/fax calls. Note that incoming voice calls are not possible when your Sprint PCS Phone is set to receive data/fax calls.
4. Once you've received the incoming data/fax call, you may want to return the phone to its normal state by disabling incoming data/fax calls.

Using Special Features During a Sprint PCS Wireless Web Call

Your phone gives you the ability to use special features while you're on a wireless Internet call. They are outlined below:

Caller ID: Just like your phone stores regular Caller ID numbers, it also stores the numbers of incoming Sprint PCS Wireless Web Connection calls. To distinguish between the two types of calls, "Data" or "Fax" displays along with the number of the caller when you view your Caller ID records.

Call Waiting: If someone tries to reach you while you're connected to the Sprint PCS Wireless Web, your phone behaves like it is turned OFF. Depending on your service, callers may get your voicemail. Call Waiting is automatically deactivated whenever you place or receive a Sprint PCS Wireless Web Connection call.

Accessing features: You can still access most of your phone's features while you're connected to a Sprint PCS Wireless Web Connection Call. You can navigate the phone's menu system to change or view your phone's features or phone book entries. You can also read messages or view the Caller ID records that you received before placing the call.

Ending a Sprint PCS Wireless Web Call

It's important to note that some of the normal ways to end a call won't work with the Sprint PCS Wireless Web Connection calls. You should always close the connection through the application on your computer. Your phone will then return to Standby mode.

Although you can end a wireless web connection call by disconnecting the data cable or turning off your phone, this may disrupt your phone.

Accessing Sprint PCS Wireless Web Updates

With Sprint PCS Wireless Web Updates, you'll automatically receive the information that's important to you. Internet updates are sent at the times you choose with the Sprint PCS Wireless WebSM Messaging capability.

By using personalization options on the My Yahoo! Page, you can decide which updates you want to receive. In addition to stock quotes and news headlines, you'll also have access to weather reports, Yahoo!, sports scores and more.

Every Sprint PCS Phone is capable of receiving updates or other text messages if you have signed up for a messaging plan.

To enroll in Sprint PCS Wireless Web Updates, you must be able to access the Internet from a computer.

To sign up:

 
1. Visit www.sprintpcs.com to sign up for service.
2. Visit www.sprintpcs.my.yahoo.com to change selections and times after your initial sign-up for the service.

Receiving a Sprint PCS Wireless Web Update Alert

Sprint PCS Wireless Web Alerts let you know when you receive an email notification from a web site (for example, a stock quote).

If your phone is on and you receive a message alert, your phone's alert sounds and [Text Message icon] displays. To view the alert, follow the steps listed below:

1. From the main menu, highlight **Messages** and press **OK**.
2. Highlight **Web Messages** and press **OK**.
3. To go to the web site that sent the message, highlight the message and press **OK**.



14

Using the Voice Services of your Sprint PCS Phone

In this Section

Recording Memos

Recording Ringers

Using Voice Commands

This section explains the features associated with your phone's Voice Services. The easy-to-follow instructions explain how to make calls or go to a menu by simply speaking a command. You'll also learn how to record memos and personal ringers.

Learning the
Settings
14

Calling Phone Numbers Using Voice Services

You can use a Voice Tag to automatically dial a phone number in your Internal Phone Book. (To create a Voice Tag, see "Creating a Phone Book Entry" on page xx.)

To use a Voice Tag to call a phone number:

1. Press the Voice Services key on the side of the phone.
2. Follow the voice prompts and recite the phone number's Voice Tag into your phone's microphone.

Recording Memos

To record a memo (or other sounds):

1. Press the Voice Services key on the side of the phone and press **OK** or highlight **Voice Services** from the main menu and press **OK**.
2. Highlight **Record Memo** and press **OK**.
3. Record your memo and press **OK** or the Voice Services key when you are finished. The time and date you recorded your memo, the length of the memo and the memory size are displayed. The time and date is used as the memo title. (For memo options, see "Memo Options" on page xx.)

Tip:

You can also begin recording memos by pressing and holding the Voice Services key.

Note:

Your phone can store up to four minutes of memo recordings, scheduler voice attachments or recordable ringers.

Memo Options

To select a memo option:

1. Press the Voice Services key on the side of the phone and press **OK** or highlight **Voice Services** from the main menu and press **OK**.
2. To select an option, highlight it and press **OK**.

Play Speaker to play a memo through the speaker.

Play Private to play a memo through the earpiece.

Erase Memo to delete the memo.

Edit Title to edit the memo title. (See "Memo Titles" on page xx for options.)

Add to Schedule to add the memo to your Scheduler. (See "Adding Memos to your Scheduler" on page xx.)

Next to display the next memo.

Previous to display the previous memo.

Exit to return to the Voice Services menu.

Tip:

You can also view the next memo by pressing the Mouse Key right or view the previous memo by pressing the Mouse Key left.

Displaying Memos

To display a recorded memo:

1. Press the Voice Services key on the side of the phone and press **OK** or highlight **Voice Services** from the main menu and press **OK**.
2. Highlight **Memo List** and press **OK**.
3. Highlight a memo and press **OK**. The memo title, time and date you recorded your memo, the length of the memo and the memory size are displayed. (For memo options, see "Memo Options" on page xx.)

Playing Memos

To play a memo:

1. Press the Voice Services key on the side of the phone and press **OK** or highlight **Voice Services** from the main menu and press **OK**.
2. Highlight **Memo List** and press **OK**.
3. Highlight a memo and press **OK**.
4. Highlight **Play Speaker** and press **OK** to play the memo through the speakerphone. Highlight **Play Private** and press **OK** to play the memo through the earpiece. To skip forward or backward in the memo, press the Mouse Key left (backward) of right (forward).

Deleting Memos

To erase a memo:

1. Press the Voice Services key on the side of the phone and press **OK** or highlight **Voice Services** from the main menu and press **OK**.
2. Highlight **Memo List** and press **OK**.
3. Highlight the memo you want to erase and press **OK**.
4. Highlight **Erase Memo** and press **OK**.

Memo Titles

To title a voice memo:

1. Record a new memo or display an existing one. The memo title, time and date you recorded your memo, the length of the memo and the memory size are displayed.
2. Highlight **Edit Title** and press **OK**.
3. Enter a title and press **OK**.

Adding Memos to your Scheduler

To add a memo to your scheduler:

1. Display memo options.
2. Highlight **Add to Schedule** and press **OK**.
3. Enter the time, date and duration of the event using your keypad. (Fields must be two digits, for example "05:07a 01/01/99.") To toggle between AM and PM, highlight **AM/PM** and press **OK**.

4. To select an option, highlight it and press **OK**.

Done to schedule the event.

Edit Alarm to change the event's alarm. Enter the number of hours or minutes before the event you want be reminded of the event and press **OK**. If you do not want to be reminded, highlight **No Alarm** and press **OK**.

Edit Repeat to change the event's repeating frequency. Highlight **Daily**, **Weekly**, **Monthly** or **Yearly** and press **OK**.

Add New Memo to add a memo alert to the event. Record your memo and press **OK**.

Set End Time to change the event's end time (if it is longer than 99 hours 99 minutes). Enter the end time and date and press **OK**.

Edit Descript. to change the title of the event. Enter a new description and press **OK**.

Recording Ringers

You can record ringers and use them as ring types to identify callers or types of calls. (See "Selecting an ID Ringer for a Phone Book Entry" on page xx, "Selecting Ring Types for Voice Calls" on page xx or "Selecting Ring Types for Folders" on page xx.)

To record a ringer:

1. Press the Voice Services key on the side of the phone and press **OK** or highlight **Voice Services** from the main menu and press **OK**.
2. Highlight **Record Ringers** and press **OK**. Recorded ringer locations have a checkmark in front of them and empty ringer locations have an asterisk in front of them.
3. Highlight an entry and press **OK**.
4. Highlight **Record** and press **OK**.
5. Follow the voice prompts and record your ringer. When you are finished, press **OK**.

Note:

Recordable ringers are replaced by the Standard ring type in analog mode.

Voice Commands

You can use Voice Commands to redial a phone number, display the Scheduler menu, turn the backlight on, select a Personality or access Wireless Web bookmarks.

To train your phone to react to your voice commands:

1. Press the Voice Services key on the side of the phone and press **OK** or highlight **Voice Services** from the main menu and press **OK**.
2. Highlight **Voice Commands** and press **OK**. Trained voice commands have a checkmark in front of them and untrained voice commands have an asterisk in front of them.
3. Highlight a Voice Command and press **OK**.
4. Highlight **Train Command** and press **OK**. (Select **Play Command** to hear a recorded command or **Description** for a description of the command.)
5. Follow the voice prompts.

Using Voice Commands and Voice Dialing

To perform a command or call a phone number by speaking into the phone:

1. Press the Voice Services key on the side of the phone.
2. Follow the voice prompt and say a voice command or Voice Dial tag into the phone. (For information on Voice Commands, see "Voice Commands" on page xx. To add a Voice Dial tag to a phone number, see "Editing a Phone Book Entry" on page xx.)

Playing Voice Commands

To play trained voice commands:

1. Press the Voice Services key on the side of the phone and press **OK** or highlight **Voice Services** from the main menu and press **OK**.
2. Highlight **Voice Commands** and press **OK**. Trained voice commands have a checkmark in front of them and untrained voice commands have an asterisk in front of them.
3. Highlight a voice command and press **OK**.
4. Highlight **Play Command** and press **OK**.

Voice Command Descriptions

To see a description of a voice command:

1. Press the Voice Services key on the side of the phone and press **OK** or highlight **Voice Services** from the main menu and press **OK**.
2. Highlight **Voice Commands** and press **OK**. Trained voice commands have a checkmark in front of them and untrained voice commands have an asterisk in front of them.
3. Highlight a voice command and press **OK**.
4. Highlight **Description** and press **OK**.

Voice Dial Options

To use a Voice Dial tag, see "Using Voice Commands and Voice Dialing" on page xx.

To add a Voice Dial tag to a phone number, see "Editing a Phone Book Entry" on page xx.

To display Voice Dial options:

1. Press the Voice Services key on the side of the phone and press **OK** or highlight **Voice Services** from the main menu and press **OK**.
2. Highlight **Voice Dial List** and press **OK**.
3. Highlight a voice-dial tag and press **OK**.
4. To select an option, highlight it and press **OK**.

Play Voice Dial to play the voice-dial tag.

Erase to delete the voice tag.

Next to display the next voice tag.

 
Previous to display the previous voice tag.

Exit to return to the main menu.



Menu Navigation

The Mouse Key provides circular scrolling through menus quickly and easily. The scroll bar at the right of the menu keeps track of your position in the menu at all times.

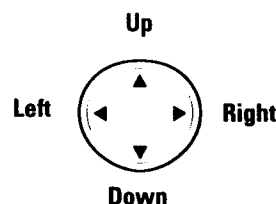

As you navigate through a menu, the options are highlighted. Select an option by highlighting it and pressing **OK**.

You can also go directly to menus or selected features by using shortcuts. For example, press the Mouse Key right to display the All Entries folder of your Internal Phone Book.

To access other shortcuts, press the Mouse Key left from the main menu and then press the appropriate number or highlight the option and press **OK**.

- 1 Select a Setup
- 2 Wireless Web Bookmarks
- 3 Wireless Web Alert Messages
- 4 Page/Text Message Inbox

- 5 Add a New Phone Book Entry
- 6 Add a New Event to the Scheduler
- 7 Today's Scheduler Events
- 8 To Do List
- 9 Change the Backlight Setting

Working within the Menu Structure

Selecting Menu Items

As you navigate through a menu, the options are highlighted. Select an option by highlighting it and pressing **OK**.

For example, if you want to view your last incoming call:

1. From the main menu, highlight **Call Logs** and press **OK**. (It may already be highlighted.)
2. Press the Mouse Key down to highlight **Incoming Log** and press **OK**. If you have received any calls, they are displayed on the screen.

Backing up within a Menu

To go to the previous menu:

1. Press **Left**.

To go to the main menu:

1. Press **Up**.

Viewing the Menus

Menu Diagram

Menus let you check or change your phone settings. The following illustration shows the menu structure. Later in the section, you'll find out how to use menus.

Call Logs

- Outgoing Log
- Incoming Log
- Missed Log
- Erase Logs
- Air Time

Messages

- Vicemail
- Page/Text
- Web Messages

Phone Book

- Find Name
- Find Speed Dial
- Add New Entry
- Add New Folder
- Edit Folder
- Sort Name
- Services
- My Phone #

Roaming

- Set Mode
- Call Guard

Scheduler

- View Week
- View Month
- Add Event
- To Do List
- Go To Date
- Memory
- Exit

Wireless Web

Settings

- Headline
- Sounds
- Display
- Alarm Mode
- Data/Fax (In)
- Car Use
- More...

Security

- Lock Phone
- Change Lock
- Restrict Calls
- Special #s
- Erase PhoneBook
- Reset Phone

Calculator

Games

Voice Services

- Record Memo
- Memo List
- Record Ringers
- Voice Commands
- Voice Dial List

KeyGuard

Entering Characters by Tapping the Keypad

Your Sprint PCS Touchpoint Phone™ provides convenient ways to enter letters, punctuation or numbers. (See “Entering Characters Using T9 Text Input” on page xx and “Entering Symbols and Numbers” on page xx.)

When you create Phone Book entries or enter titles for memos and folders, you enter characters by tapping the keypad. Press the corresponding key until the desired character appears. By default, the first letter of a word is capitalized and following letters are lowercase. Characters scroll in the following order:

- 1. 1, 2, 3, 4, 5, 6, 7, 8, 9, 0, *, #, ~, _
- 2. ABC2abc2
- 3. DEF3def3
- 4. GHI4ghi4
- 5. JKL5jkl5
- 6. MNO6mno6
- 7. PQRS7pqrs7
- 8. TUV8tuv8
- 9. WXYZ9wxyz9
- 0. Space 0
- Forward
- Backward

After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character not on the same key.

To enter characters by tapping the keyboard for Scheduler event descriptions, To Do items or Web Browser messages:

1. Highlight the character input softkey by pressing the Mouse Key right.
2. Press **OK** until **ALPHA** (for capital letters) or **alpha** (for lowercase letters) is displayed.
3. Enter characters by tapping the keypad.

If you make a mistake, press **Left** to move the cursor left or **Right** to erase a character. To clear the entire entry, press and hold **Clear**.

Tip:

To move the cursor within your text entry, press the [asterisk key] to move the cursor left or press the [pound key] to move the cursor right.

Entering Characters Using T9 Text Input

T9 Text Input enables you to quickly and conveniently enter text for Scheduler event descriptions, To Do items or Web Browser messages.

To use T9 Text Input:

1. Highlight the character input softkey by pressing the Mouse Key right.
2. Press **OK** until **T9WORD** (for capital letters) or **T9word** (for lowercase letters) is displayed.
3. Press the key your desired character appears on only once. (You can use **1** to enter Smart Punctuation.)

T9 Text Input analyzes the letters you enter using an intuitive word database and creates a suitable word. (The word may change as you type.) If the word you want does not display after you have entered all the letters, press the Mouse Key down to scroll through additional word selections. To accept a word and insert a space, press **0**.

If the word you want does not display as an option, you can add it to the database.

To add a word to the T9 Text Input database:

1. Highlight the character input softkey by pressing the Mouse Key right.
2. Press **OK** until **ALPHA** (for capital letters) or **alpha** (for lowercase letters) is displayed.
3. Enter the word using multi-tap text entry. (See page xx.)
4. Return to T9 Text Entry mode by highlighting the character input softkey and pressing **OK**.

If you make a mistake, press **CLR** to erase a character. To clear the entire entry, press and hold **CLR** for two seconds.

Entering Symbols and Numbers

When you create Phone Book entries and To-Do items or enter titles for memos and folders, you can enter symbols or numbers by tapping the keypad. (See "Entering Characters by Tapping the Keypad" on page xx.)

For Scheduler event descriptions, To Do items or Sprint PCS Wireless Web messages, you can also enter symbols and numbers by pressing the Mouse Key right and highlighting the character input softkey. Press **OK** until **SYM1** (for symbols) or **NUM** (for numbers) is displayed. Then, enter a symbol or number by pressing the appropriate key.

15

Selecting your Accessories

In this section

Overview of Available Accessories for this Phone

How to Order

We offer a variety of accessories for your new Sprint PCS Phone.[™] Choose from chargers, carrying cases, batteries and hands-free devices – all designed to give you more flexibility and convenience.

Accessory Options

Standard Battery

The standard battery provides approximately XX hours of continuous talk time in digital mode and XX hours continuous talk time in analog mode, or approximately XX hours of continuous standby time in digital mode and XX hours continuous standby time in analog mode. The battery charges in X to X hours using any of the charging accessories available with this phone.

Model Number: SBP-220

Extended Battery

The extended battery provides approximately X hours of continuous talk time in digital mode and XX hours of continuous talk time in analog mode, or XX hours continuous standby time in digital mode and XX hours continuous standby time in analog mode. The battery charges in X to X hours using any of the charging accessories available with this phone.

Model Number: EBP-220

Cigarette Lighter Adapter

You can charge your phone (even during a call) in your vehicle using the cigarette lighter adapter. The cigarette lighter adapter charges the standard battery in approximately XX hours and the extended battery in XX hours.

Model Number: CLA-200

Installed Hands-Free Car Kit

Allows you to operate your phone hands-free so you can drive safely. It also charges the phone's battery. The hands-free car kit charges the standard battery in approximately XX hours and the extended battery in XX hours.

Model Number: IHF-200

Portable Hands-Free Car Kit

Allows you to operate your phone hands-free so you can drive safely. This accessory connects to your car's cigarette lighter and does not require installation. It also charges the phone's battery. The hands-free car kit charges the standard battery in approximately XX hours and the extended battery in XX hours.

Model Number: PHF-200

Desktop Charger

Charges your phone and a standard or extended battery at the same time. Two color LEDs indicate when the battery and/or phone is charging or fully charged. The desktop charger charges the standard battery in approximately XX hours and the extended battery in XX hours.

Model Number: DTC-200

Travel Charger

Compact and lightweight, this is a convenient way to charge your phone while on the road. The travel charger charges the standard battery in approximately XX hours and the extended battery in approximately XX hours.

Model Number: STC-200

Sync Station

The Sync Station simultaneously charges your phone and an extra battery as well as connects your phone to a personal computer. The Handset Slot of the Sync Station charges a Standard Battery in approximately xx hours and a Extended Battery in approximately xx hours when the battery is attached to your phone in the phone slot. The extra-battery slot charges the Standard Battery in approximately xx hours and the Extended Battery in approximately xx hours.

Model Number: SYN-200

Sync It!™

Sync It!™ is a Windows-based software application you can use to manage your phone's Scheduler appointments, Call Alarms, Phone Book and user preferences. This enables you to input Phone Book and Scheduler data into your personal computer, then download the information to your phone.

Model Number: SIM 200

Belt Clip

The Belt Clip attaches to the back of your phone and provides a safe and convenient way to wear the phone on your body.

Model Number: SBC-200

Sprint PCS Wireless Web™ Connection Kit

Lets you link your phone to a laptop PC, hand-held or palm-sized computing device to send and receive e-mail messages and browse the Internet. Includes serial data cable, cable adapter, CD-ROM (with software) and user guide. Designed for Microsoft® Windows 95, 98, NT, CE and Palm® operating systems.

Model Number: XXXXXX

How to Order

Most Sprint PCS Accessories found at local Sprint PCS Centers can also be purchased through the Sprint PCS Accessory Hotline™ by calling 1-800-974-ACC1 (2221). Next day delivery is offered in select areas. You can also visit our web site at www.sprintpcs.com.

16

Knowing Performance and Safety Guidelines

Performance
and Safety
16

In this section

Getting the Most Out of your Reception

Maintaining Safe Use and Access to your Phone

Caring for the Battery

Acknowledging Special Precautions and the FCC Notice

Part of getting the most out of your Sprint PCS Phone™ is knowing where and how it works at optimum efficiency. This section outlines performance and safety guidelines that ensure you experience the full quality your Sprint PCS Phone was designed to give you.

Getting the Most Out of your Reception

Keeping Tabs on Signal Strength

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal.

If you're inside a building, being near a window may give you better reception.

Understanding Power Save Feature

If you try to use your Sprint PCS Phone in an area where the signal is not available, the Power Save feature automatically activates to conserve battery power if you're unable to pick up a signal for 15 minutes. If your phone is on, it periodically rechecks service availability or you can check yourself by pressing any key. Anytime the Power Save feature is activated, a message displays on the screen.

Understanding How your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Knowing Radio Frequency Safety

The design of your Sprint PCS Phone complies with updated NCRP standards described below. To further limit RF exposure, you can limit the duration of your calls and operate your phone in the most power-efficient manner.

In 1991-92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

Tip:

For the best care of your phone, only Sprint PCS authorized personnel should service your phone and its accessories. Faulty service may void the warranty.

Emergency Calls**IMPORTANT!**

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely upon any wireless phone for essential communications (e.g. medical emergencies).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks. Check with local service providers.

Maintaining your Phone's Peak Performance

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Hold the phone with the antenna up and over your shoulder.
- Try not to ever hold, bend or twist the phone antenna.
- Don't use the phone if the antenna is damaged.
- Speak directly into the mouthpiece.

Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it's inoperable, return it to a Sprint PCS Center or call Sprint PCS Customer Care for service.

Maintaining Safe Use of and Access to your Phone

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED IN THIS SECTION MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE

Using your Phone While Driving

Talking on your phone while driving is illegal in some states. Even where it's not, it can divert your attention from driving. Remember that safety always comes first.

When using your phone in the car:

Get to know your phone and its features, such as speed dial and redial.

When available, use a hands-free device.

Position your phone within easy reach.

Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.

Do not take notes or look up phone numbers while driving.

Tip:

If you really need to use your phone while you're driving, use one-touch, speed dialing or a headset.

Tip:

Purchase an optional Hands-Free Car Kit.

ss Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic.

Do not engage in stressful or emotional conversations that may divert your attention from the road.

Dial **9-1-1** to report serious emergencies. It's free from your wireless phone.

Use your phone to help others in emergencies.

Call roadside assistance or a special non-emergency wireless number when necessary.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating and entertainment systems in motor vehicles. Check with the manufacturer or its representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Turning Off your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Tip:

Always turn off the phone in health-care facilities and request permission before using the phone near medical equipment.

Turning Off your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn off your phone when in a blasting area or in other areas with signs indicating that two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn off your phone when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone or its accessories could generate sparks. Sparks could cause an explosion or a fire resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- Fueling areas such as gas stations
- Below deck on boats
- Fuel or chemical transfer or storage facilities
- Areas where the air contains chemicals or particles such as grain, dust or metal powders
- Any other area where you would normally be advised to turn off your vehicle engine

Restricting Children's Access to your Phone

Your Sprint PCS Phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

Tip:

Never transport or store flammable gas, liquid or explosives in the compartment of your vehicle that contains your phone or accessories.

Caring for the Battery

Protecting your Battery

The guidelines listed below help you get the most out of your battery's performance.

Use only Sprint PCS-approved batteries and desktop chargers. These chargers are designed to maximize battery life. Using other batteries or chargers voids your warranty and may cause damage.

In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).

Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.

Never dispose of the battery by incineration.

Keep the metal contacts on top of the battery clean.

Don't attempt to disassemble or short-circuit the battery.

The battery may need recharging if it has not been used for a long period of time.

Tip:

For safety, do not handle a damaged or leaking Lilon battery.

It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.

Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

Less than one month:

-4° F to 140° F (-20° C to 60° C)

More than one month:

-4° F to 113° F (-20° C to 45° C)

Disposal of Lithium Ion (Lilon) Batteries

For safe disposal options of your Lilon batteries, contact your nearest Sprint PCS-authorized service center.

Special note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Acknowledging Special Precautions and the FCC Notice**FCC Notice**

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publication Sales Division.

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and voids the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Acknowledging Special Precautions and the FCC Notice

The model number, regulatory number and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: Sprint PCS Touchpoint Phone™
(TP2200)

Serial No.:

User Guide Proprietary Notice

CDMA Technology is licensed by
QUALCOMM Incorporated under one or
more of the following Patents:

4,901,307 5,103,459 5,337,338 5,426,392
5,056,109 5,309,474 5,339,046 5,437,055
5,257,283 5,099,204 5,341,456 5,442,322
5,265,119 5,228,054 5,383,219 5,442,627
5,267,262 5,107,225 5,392,287 5,452,473
5,101,501 5,283,536 5,414,728 5,461,639
5,267,261 5,280,472 5,414,796
5,109,390 5,289,527 5,416,797

T9 Text Input is licensed by Tegic
Communications and is covered by U.S. Pat.
5,818,437, U.S. Pat. 5,953,541, U.S. Pat.
6,011,554 and other patents pending.



17

Index



A

Accessories 191
Activating your Phone 18
Air Time 66
Alert Notification 114
Answering Calls 45

B

Battery 32
 Capacity 32
 Charging 33
 Installing 32
 Removing 33
 Set Mode 38
 Using the Desktop Charger or Adapter Charger 34

C

Calculator 144
Call Alarm 96
 Adding Call Alarms from the Scheduler 134
 Alerts 96
 Changing 137
 Menu 96
 Viewing 131
Call Guard 39
Call Log 60
 Erasing Call Logs 66
 Making a Call from a Call Log 61
 Prepending a Phone Number from a Call Log 61
 Saving a Phone Number 63
 Viewing Call Log Details 65
Call Waiting 68
Caller ID 68
Calling Emergency Numbers 53
Contrast 115

D

Data/Fax Mode 116
 Receiving a Fax 116
 Receiving Data 116
 Returning to Voice Mode 117
Dialing Options 46
Displaying your Phone Number 54

E

End of Call Options 50
Entering Characters by Tapping the Keypad 186
Entering Characters Using T9 Text Input 188
Entering Symbols and Numbers 190
Events 131
 Adding 128
 Changing 136
 Event Type Icons 129
 Scheduled Event Alert Menu 132
 Scheduled Event Alerts 132

F

FCC RF Exposure Information 12
Finding a Phone Number 51
Forwarding your Calls 70

G

Games 145
Going To Dates 135

H

Hands-Free Car Kit 118
Help
 Sprint PCS Directory Assistance 23
 Sprint PCS Operator Services 23
Hold 49

I

Incoming Call Notification 49



M

Making Calls 44

- Correcting Dialing Mistakes 44
- Dialing and Saving Phone Numbers with Pauses 52
- In-Call Options 48

Memory 143

- Viewing and Clearing Scheduler, Call Alarm or To Do List Memory 143

Menu Navigation 212

Messages 72

- Message Alerts 73
- Message Types 72
- New Voicemail Message Alerts 74

Missed Call Notification 45

Mouse Key 212

O

One-Touch/Two-Touch Speed Dialing 54

P

Page/Text Messages 75

- Creating Folders and Filters 79
- Deleting Messages 81
- Displaying Messages 76
- Editing Filters for Page/Text Folders 83
- Erasing All Page/Text Messages 85
- Extracting Phone Numbers from Text Messages 84
- Moving Page/Text Messages between Folders 84
- New Numeric Page or Text Message Alert 75
- Numeric Page Options 77
- Renaming Page/Text Folders 81
- Setting the Maximum Number of Messages for Page/Text Folders 82
- Storage 75
- Text Message Options 78

Pauses 52

Personal Information Management 127

Phone Book 53

- Adding Call Alarms from the Phone Book 95
- Dialing from the Phone Book 53

Phone Book Entries 90

- Adding a New Entry 104
- Adding a Phone Number 94
- Changing 98
- Details 97
- Editing Phone Numbers 100
- Finding an Entry Using a Speed Dial Memory Location 91
- Finding Phone Book Entries 90
- Phone Book Entry Options 92
- Reviewing All Entries 90
- Secret Entries 103
- Selecting an ID Ringer 102
- Sorting 107

Phone Book Folder 105

- Adding 105
- Deleting 107
- Moving Phone Book Entries into Folders 105
- Renaming 106
- Selecting Ring Types 106

R

Roaming 35

- Answering Incoming Roaming Calls with Call Guard On: 40

S

Saving Phone Numbers 88

Scheduler 130

Security 121

- Calendar 130
- Changing the Lock Code 123
- Erasing the Phone Book 126
- Locking your Phone 123
- Resetting your Phone 126
- Restricting Calls 124
- Unlocking your Phone 123
- Unrestricting Calls 125
- Selecting Ring Types 111
 - For Alarms, Data Calls and Fax Calls 113
 - For Messages 112
 - For Voice Calls 111

Speakerphone 58
Special Numbers 125
 Using 125
Sprint PCS Customer Care 21
Sprint PCS Wireless Web 147
 Creating a Bookmark 156
 Finding a Bookmark 157
 Launching a Session 150
 Setting up 162
 Sprint PCS Wireless Web Browser 149
 Sprint PCS Wireless Web Update Alert 167
 Wireless Web Updates 166

T
Three-Way Calling 69
To Do List 138
 Adding a To Do Item as an Event 141
 Adding To Do Items 138
 Changing To Do Items 140
 Deleting To Do Items 142
 Viewing To Do Items 139
Tone Length 114
Turning your Phone ON and OFF 31

U
Unlocking your Phone 18

V
Voice Command 178
 Playing Voice Commands 177
Voice Services 169
 Calling Phone Numbers 170
 Deleting Memos 173
 Displaying Memos 172
 Memo Options 173
 Playing Memos 172
 Recording Memos 170
 Recording Ringers 175
 Training Voice Commands 176
 Using Voice Commands and Voice Tags 177
Voice Tag 179
 Options 179
Voicemail 20
 Clearing the Message Icon 74
 Setting Up Your Voicemail 20
Volume 55, 110
 Adjusting Volume During a Conversation 57
 Changing Ringer Volume 56
 Muting a Call 57
 Silencing the Ringer 56