

## **User Notices and WARNINGS**

### **USER NOTICES**

# IT IS VERY IMPORTANT TO READ THE FOLLOWING MANUAL SECTIONS PRIOR TO OPERATION OF THIS TRANSMITTER!

#### Notice 1

The transmitter main operating voltage setting is marked on the rear of the AT7250 chassis.

#### Notice 2

#### The transmitter operating frequency is set from the factory.

#### Notice 3

For adjusting the RF output power setting a qualified technician should always employ the use of an RF Wattmeter and a calibrated dummy load.

#### Notice 4

Should accident or injury occur to the personnel engaged in the installation, operation, or service of the equipment should seek proper medical attention. It is advisable that such personnel have familiarity with first-aid practices.

#### Notice 5

To call our technical support center or for other customer service issues at Linear Inc, refer to the following number: 630 346 6698.

#### Notice 6

If you experience some specific difficulty and the technical information available in this manual is not enough to help you, do not hesitate to call LINEAR technical support center.

#### Notice 7

The technical information presented on this manual is sole intellectual propriety of LINEAR INDUSTRIES Inc. Reproduction of this document in full or partial is prohibiting with out written authorization. This document is legally protected by the copy rights laws.