

TEST MODE OF 36252

MAY 26, 2000

BASE UNIT

1. RF TEST MODE (SINGLE LINE TEST)

SET THE RINGER SWITCH TO THE RING_ON POSITION

Press and hold the '5', '.' key and then put the power jack into the base unit.

AT FIRST, LINE 1 IS SEIZED.

TO CHANGE THE LINE TO LINE2 , SET THE RINGER SWITCH TO OFF POSITION.

Default channel	CHANNEL 20
Channel select	Press 2 digits channel numbers using 1 ~ 0 key For example, '4','0' for CH 40.
Deviation test	Press and hold 'PAGE/TRANSFER' key
MUTE	DEFAULT MUTE OFF PRESS MEMO BUTTON TO TOGGLE THE MUTE.
20dB	CHG/PRG LED

2. RF TEST MODE (CONFERENCE TEST)

SET THE BASE UNIT TO CHARGE MODE

Press and hold the '5', '.' key and then put the power jack into the base unit.

3. DTMF test

SET THE RINGER SWITCH TO THE RING_OFF POSITION

Press and hold the '5', '.' key and then put the power jack into the base unit.

AT FIRST LINE 2 IS SEIZED.

TO CHANGE THE LINE TO LINE1, SET THE RINGER SWITCH TO ON POSITION.

PRESS AND HOLD THE DIAL BUTTON TO OUTPUT DTMF.

HANDSET

Press and hold the '5', '0' key and put the battery into the handset.

Default channel	CHANNEL 20
Channel select	Press 2 digits channel numbers using 1 ~ 0 key For example, '4','0' for CH 40.
Deviation test	Press and hold 'SCAN' key
MUTE	DEFAULT IS MUTE OFF. Press 'MEMO' key TO TOGGLE MUTE.
20dB	INUSE LED