


Tune-Up Procedure


Programming of this product's transmit frequencies and power can be performed Only by the manufacturer or by service or maintenance personnel. The operator can not program transmit frequencies and power using the equipment's external operation.

The following procedure is applied to tune this device into maximum power 46dBm +/- 0.5dB.


1. connected notebook & EUT by USB Cable
2. open software SDR Programming
3. click F2 Reading the radio file

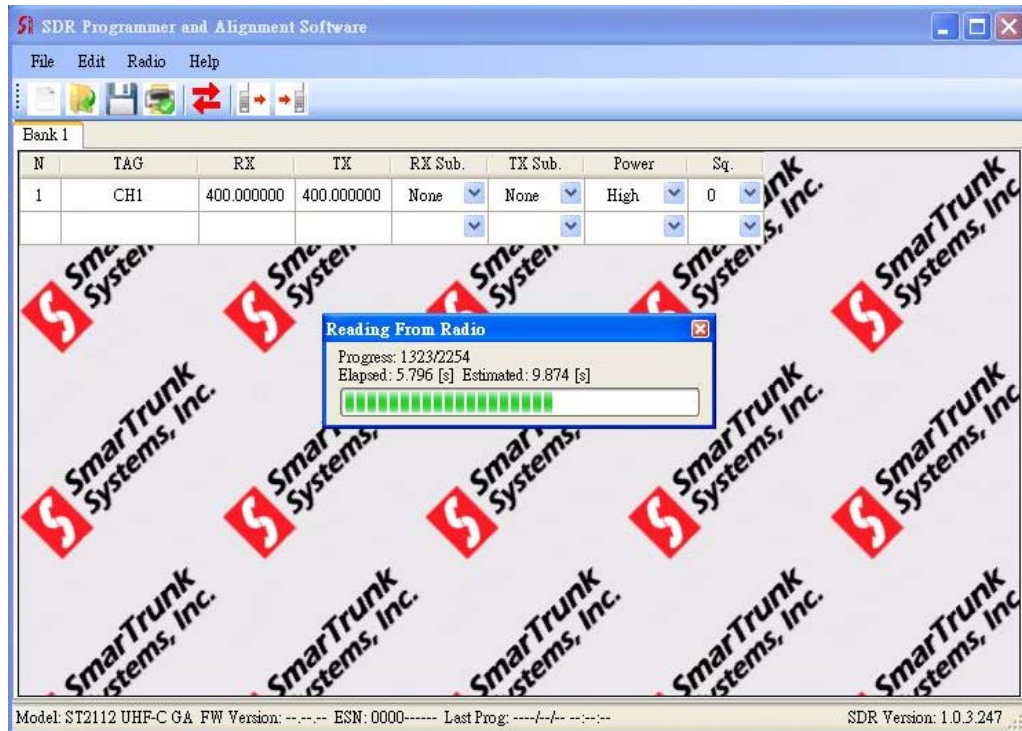


4. Select Alignment

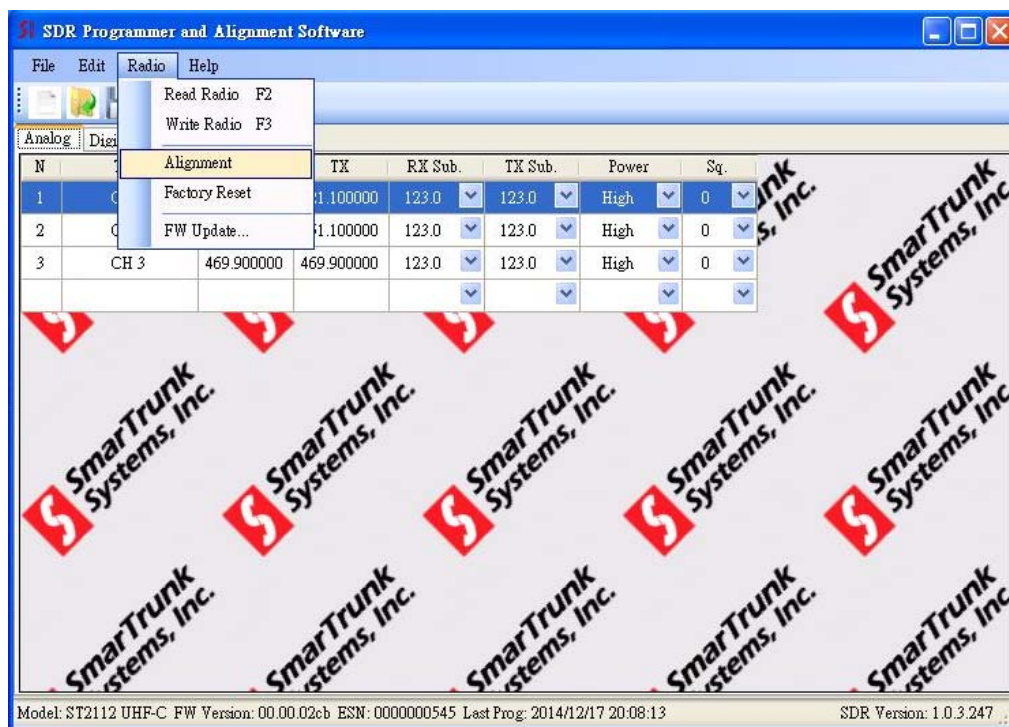

5. Select Power High Level and choice frequency range, then click Start.

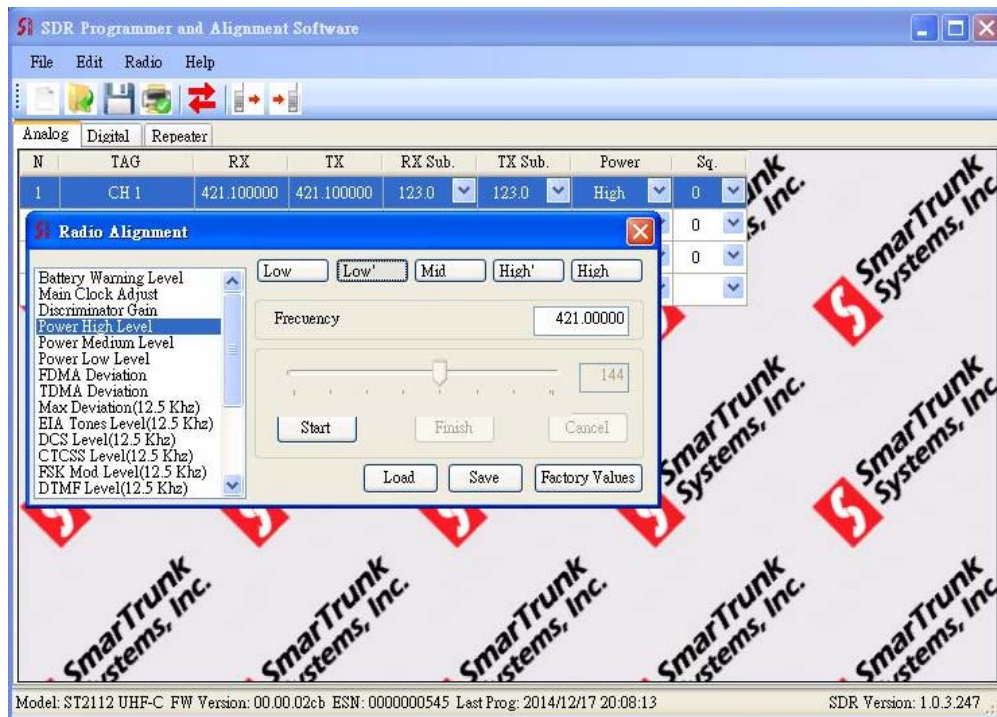

6. Modify Power Bar to target power then click Finish.

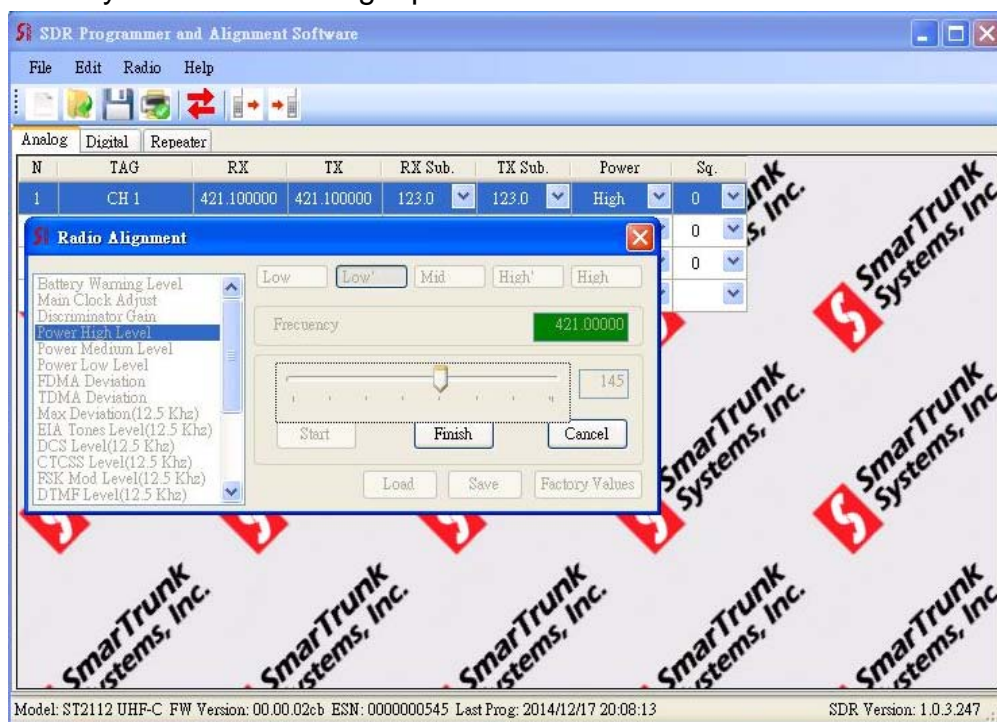

The index about 0.5dB by a step

7. when all channel (Low:450.1MHz Mid:481.1 High:511.9MHz) Modify finish click F3 Write to Radio

