



序號S/N:此次2K以 " 05 6 13 B 00001 " 為起始(至~"05 6 13 B 02000')

1. Serial Number on device

Digit 1&2: Week number

Digit 3: Day (1=Mon; 2=Tue; ...)

Digit 4&5: Year (10=2010; 11=2011; ...)

Digit 6: Supplier Code (one digit). The supplier code for Globalsat is "B"

Digit 7-11: Serial Number for the production lot start with 00001 onwards; 00001 for the first unit of that P.O..

For example, we will produce on May 31, 2010:

Therefore, the date code for the first 10000 units should be "22110B00001 to 22110B10000".