

**OZEO**



# Table of Contents



## Table of Contents 1

### Before first use 5

Your first call 5

Using the carousel 7

Examples 8

To adjust the contrast 8

Activate/deactivate a function 9

Using Names and other lists 9

Glossary 10

### Your phone 11

Description of the phone 11

Screen 12

### Initial start up procedure 13

Your PIN code and PUK code 13

The battery 13

Clipping on the battery 14

Removing the battery 14

Charging the battery 15

Making an emergency call 16

### Using your phone 17

Switching on 17

Idle screen 17

How to enter a text or a number 17

Events in idle screen 18

Making a call 18

Answering and Ending a call 19

Redial & Reply 20

Flash dial 21

During a Call... 21

Adjusting the Earpiece Volume 21

Mute the microphone 21

Unmute the microphone 22

Writing in the notepad 22

Consulting the Names List 22

Locking the keypad 22

Unlocking the keypad 23

Activate/deactivate the Silent Mode 23



<b>Activate/Deactivate the Vibrator</b>	<b>23</b>
<b>Reading your Phone Number</b>	<b>24</b>
<b>Text Input</b>	<b>24</b>
<b>T9 Text Input</b>	<b>24</b>
How to use T9 Text Input	24
Basic text input	25
<b>Using the Menus</b>	<b>27</b>
<b>Overview of menus</b>	<b>27</b>
<b>Names</b>	<b>29</b>
<New>	29
Select a name	29
Emergency	30
Own number	30
<b>Messages</b>	<b>30</b>
Send SMS or Reply	30
Read SMS	32
SMS settings	32
Mailboxes	33
<b>Call list</b>	<b>34</b>
<b>Organizer</b>	<b>34</b>
Events	34
Day view, Week view and Month view	35
<b>Extras</b>	<b>36</b>
Call counters	36
Brick Game	37
Calculator	38
Alarm clock	38
<b>Settings</b>	<b>39</b>
Sounds	40
Display	42
Security	42
Time and date	44
Language	45
Menu type	46
Hotkeys	46
Network	47
Call settings	48
<b>Quick settings</b>	<b>50</b>
The Quick settings:	50
Use of network services	52
<b>Query a voice server, a voice mailbox, a messaging service, etc. (DTMF tones)</b>	<b>52</b>
<b>Making a second call</b>	<b>53</b>
<b>Answering a second call</b>	<b>54</b>



<b>Answering a third call</b>	<b>54</b>
<b>Conference Call</b>	<b>55</b>
<b>Explicit Call Transfer</b>	<b>55</b>
<b>In-call symbols</b>	<b>56</b>
<b>Precautions</b>	<b>57</b>
<b>Radio wave safety</b>	<b>57</b>
<b>Your phone and its environment</b>	<b>57</b>
<b>Efficient use of your phone</b>	<b>57</b>
<b>Battery safety</b>	<b>58</b>
<b>Safety and security</b>	<b>58</b>
<b>Responsibility</b>	<b>58</b>
<b>Respect of local laws and regulations</b>	<b>58</b>
<b>Use while driving</b>	<b>59</b>
<b>Environmental care</b>	<b>59</b>
<b>Maintenance</b>	<b>60</b>
<b>Looking after your phone</b>	<b>60</b>
<b>Efficient use of your phone</b>	<b>60</b>
<b>Troubleshooting</b>	<b>61</b>
<b>Philips Authentic Accessories</b>	<b>64</b>
<b>Batteries</b>	<b>64</b>
<b>Chargers</b>	<b>64</b>
<b>Hands-free kit</b>	<b>65</b>
<b>Carry pouch with belt clip</b>	<b>65</b>
<b>Data Connect</b>	<b>65</b>
<b>Limited Product Warranty</b>	<b>67</b>
<b>IndexA</b>	<b>69</b>





 


## **Your first call**

 
Turn the phone face down

### 1 **Insert the battery**

For optimum performance follow the instructions on page 13. Place the battery on the back of the phone (battery connectors downward). Then push the battery into place in the direction of the antenna.

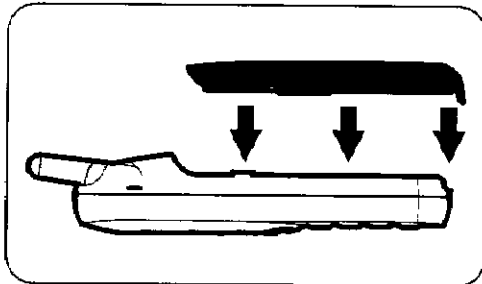

1

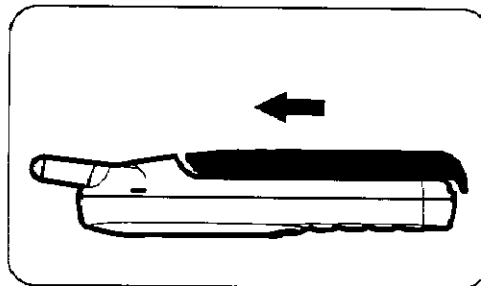


2

 
### **NOTE:**

A new battery is not completely charged, see "Charging the battery" on page 15.

Turn the phone face up

 

### **To switch on the phone.**

 
Press and hold the  key.

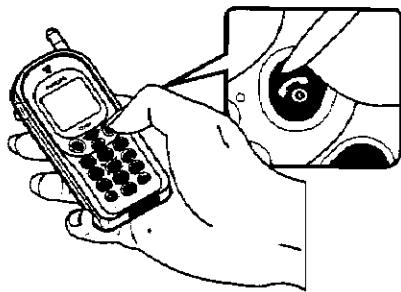

 
Note: For the Pilot Key, see "Description of the phone" on page 11.

### **Enter your PIN code if asked (see page 13).**


Then confirm by pressing the Pilot Key  or the  key.

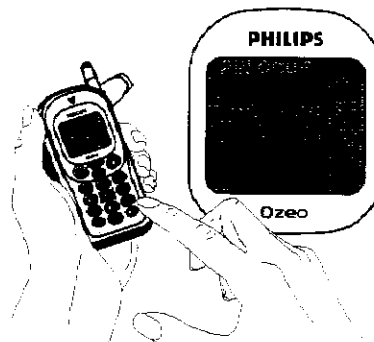

 
- 1 Wait for the 2 beeps.**  
The connection is established. The screen looks like this:

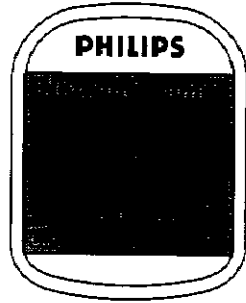

To set the time and date, see page 44.

- 3 Press** .
- 4** Once connected, your phone emits two beeps.

- 2 Enter the phone number.**  
If you make a mistake press .

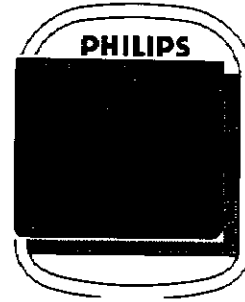

 
 
- 5 After the call press** .



 


# Using the carousel

The carousel is a circular loop of icons displayed on the screen. These icons provide access to the different menus and sub menus used to operate your phone.

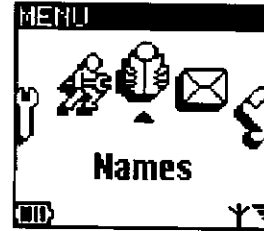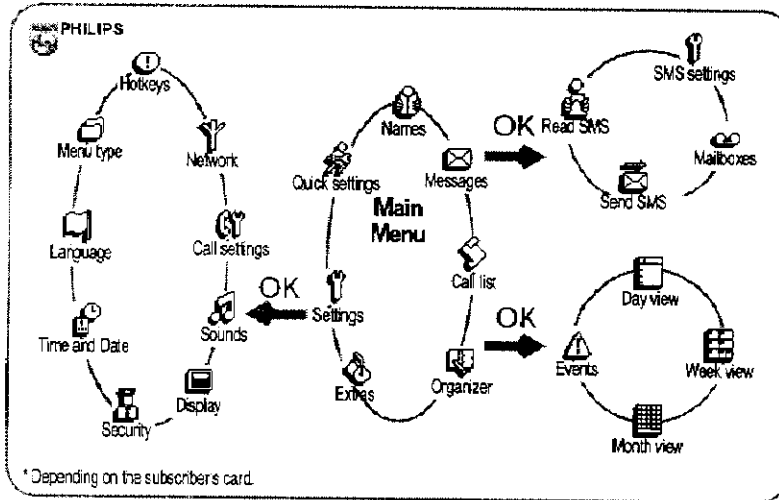

## You can use the Pilot Key in 3 ways:

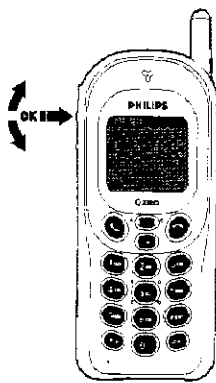

- By moving it upwards ↑
- By moving it downwards ↓
- By pressing it in →

When you switch on your phone, the idle screen appears.


To access the main menu, press the Pilot Key →.

**When you move the Pilot Key the carousel moves across the screen:**

- upwards ↑ the icons scroll clockwise.
- downwards ↓ the icons scroll anti clockwise.

The Pilot Key → provides access to all the menus used to operate your phone. To select a function, place the icon above the cursor and press the Pilot Key →.

 
- With the Pilot Key → you can select or adjust all the functions of your phone

*Note: Depending on the function, you may use the  key in the same way as the press on the Pilot Key →.*



## To adjust the contrast

After switching the phone on, press the Pilot Key  $\rightarrow$  to access the main Menu:

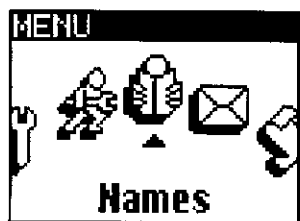

Move the Pilot Key  $\leftarrow$  or  $\rightarrow$  and position the icon above the cursor.



Then confirm by pressing the Pilot Key  $\rightarrow$ .

This gives you access to the Settings sub menu:

Move the Pilot Key ( $\leftarrow$  or  $\rightarrow$ ) and position the  icon above the cursor. Then confirm by pressing the Pilot Key  $\rightarrow$ .

You enter the Display menu.



Move the Pilot Key ( $\leftarrow$  or  $\rightarrow$ ) and position the  icon above the cursor. Then confirm by pressing the Pilot Key  $\rightarrow$ .



You enter the Contrast menu:

The active parameter appears **underlined** on the screen. In the above example it is **Level 3**.


Using the Pilot Key, adjust the contrast  $\leftarrow$  or  $\rightarrow$  and confirm by pressing the Pilot Key  $\rightarrow$ .

-  To return to the previous menu, press  $\odot$  or press and hold the Pilot Key  $\leftarrow$ .
-  To return to the idle screen, press and hold  $\odot$ .







## Activate/deactivate a function



Under the **D i s p l a y** menu go to **A n i m a t i o n** menu, select it and then, using the Pilot Key **←** , you can activate or deactivate some functions.

 


Move the Pilot Key **↑**  or **↓**  to select **O n** or **O f f**, then confirm.

## Using Names and other lists

You can also use your Names list using the Pilot Key.

In idle screen move the Pilot Key downwards **↓**  to access the Names list. By moving the Pilot Key down, you move **d o w n** into the Names list. Turning it upwards moves up the Names list. Confirm your selection by pressing on the Pilot Key **←** .

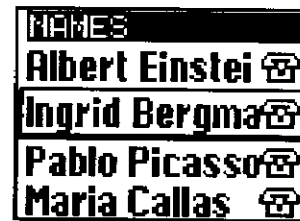



 
# Glossary






<b>DTMF</b>	Dual Tone Multi Frequency. The tones are transmitted by the phone to the network. They are used to interrogate answering machines and transmit codes.
<b>EFR</b>	Enhanced Full Rate. Standard for high quality sound .
<b>FDN</b>	Fixed Dialling Numbers. See also Public Names.
<b>Home network</b>	
<b>Home Zone</b>	A particular area within your home network. If this feature is provided by your home network, the home zone symbol is displayed indicating that you are currently within the home zone.
<b>Idle screen</b>	This is the screen which is displayed when your phone is on and ready to be used.
<b>Local network</b>	The network where you are making a call. This may be your home network or another network.
<b>Multi-call</b>	Two calls are in progress, one active and one on hold.
<b>PIN code</b>	Personal Identification Number.
<b>Public Names</b>	Function that allows you to restrict dialling to selected numbers
<b>Roaming</b>	Using your phone in a network other than your home network.
<b>SMS</b>	Short Message Service. This service provided by the operator allows you to send and receive short written messages.
<b>T9™ Text Input</b>	Very efficient method of text input that requires just one key press per letter.



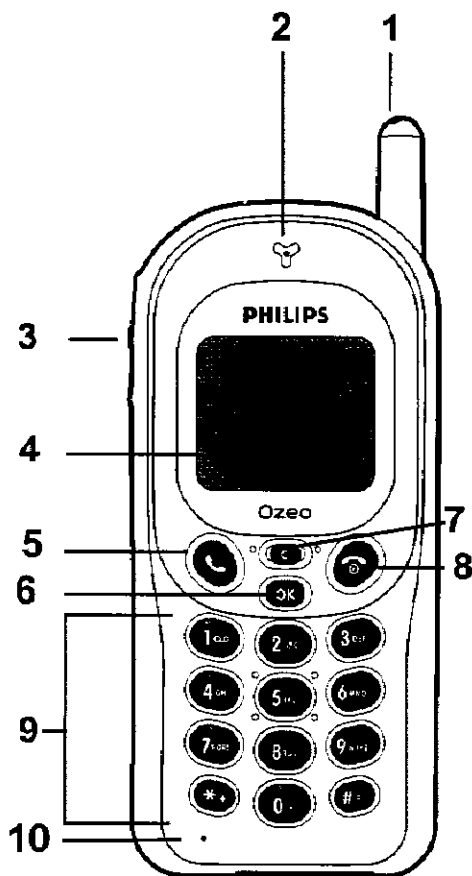

## Description of the phone

 


- 5 Green "Pick up" key**  symbol  
Press to accept a call or dial a number.
- 6 Ok key**   
Acts as the Pilot Key - ; access to the menu and confirm the choice.
- 7 Cancel key**   
Navigation mode:
  - Press this key to return to the previous menu.
  - Press and hold it to return to the idle screen.Edition mode:
  - Press this key to delete a character.
  - Press and hold it to delete all the characters.
- 8 Red "Hang up"  and "On / Off" key symbol**  
Press to switch your phone on, press and hold to turn your phone off.  
Press to end a call.
- 9 Alphanumeric keypad**  
Standard phone keypad. It can also be used for entering alphabetic characters and activating hotkeys.
- 10 Microphone**  
It allows you to talk.

### **1 Antenna**

### **2 Earpiece**

### **3 Pilot Key**

It allows fast and easy access to the different menus and confirms your choice - .

•During a call, it controls the volume.

•In the Names list, menus or lists it scrolls up or down.

•When entering a name or number, it is used to move the cursor left or right.

•To return to the previous menu by pressing and holding it.

### **4 Graphic display**



# Screen






## Carousel:

 
 
 
A loop of icons on your display which provides access to the menu of your choice.

## Date and time



 


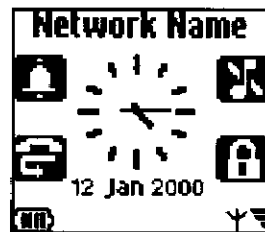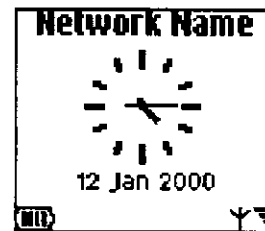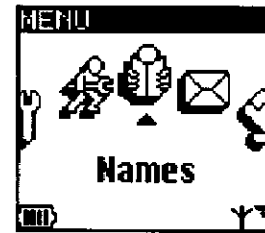


Displayed in idle screen. To set the date and time, see "Settings" page 39.

## Indicators

-  **Alarm clock**  
Indicates that the alarm is activated.
-  **Silent**  
Indicates that the ringer is turned off. The phone will not ring. It can still receive calls.
-  **Keypad Lock**  
Protects the keys from being pressed accidentally.
-  **Call forward unconditional to number**  
Indicates that the Call forward unconditional to a number is set.
-  **Call forward unconditional to voice mailbox**  
Indicates that the Call forward unconditional to a voice mailbox number is set.



## Symbols

-  **Battery charge**  
If the first block is dark, the battery holds a 25% charge. Each bar represents approximately 25% of the maximum charge.
-  **SMS message**
  - *Symbol only* - You have received a new message.
  - *Flashing symbol* - The message memory is full and cannot hold more messages. Delete one or more message to liberate memory.
-  **Voice mail**  
Indicates that you have received at least one new voice mail (Network dependent).
-  **Roaming**
-  **Network**  
Indicates that you are using a network other than your home network.
-  **Network**  
The phone is connected to a network. If the icon flashes the phone is trying to connect.
-  **Reception quality**  
4 reception bars indicate optimum quality.
-  **Home zone**  
Indicates that you are currently within the home zone. It is displayed depending on the network you have subscribed.



 


## Your PIN code and PUK code

When you switch on the phone, it asks you for the PIN code. .




If you enter a wrong PIN code, you can try again. If you enter a wrong PIN code 3 times, your phone is blocked.

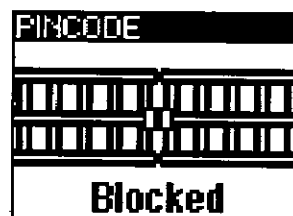

You must then enter your PUK code to unblock the phone. This code will be given to you by your service provider. If you enter an incorrect PUK code ten times in a row the card will completely be blocked and unusable. If this happens contact your service provider.

## The battery

Your phone is powered by a rechargeable battery. A new battery is not fully charged. Charge it by following the procedure on page 15.

The  icon shows the level of charge in the battery. Each bar represents approximately 25% of the maximum charge.


If the phone emits a warning signal and the display shows **Battery Low**, you should recharge the battery.

The battery, attached to the phone or not, should not be exposed to temperatures exceeding 60°C (e.g. behind glass in direct sunlight).

We advise you to keep the battery attached to the phone, even when discharged. The backup battery for the clock (inside the phone) will last longer.

We do not recommend to remove the battery when the phone is switched on: you may lose all your personal settings.

 Please refer to the information on battery safety, page 58.

 Press the locking button located on the battery cover, press it while pushing the battery in the direction of the arrow as shown on the drawing

 


## Clipping on the battery

See page 5.

## Removing the battery

- Press the locking button located on the battery cover, press it while pushing the battery in the direction of the arrow as shown on the drawing.

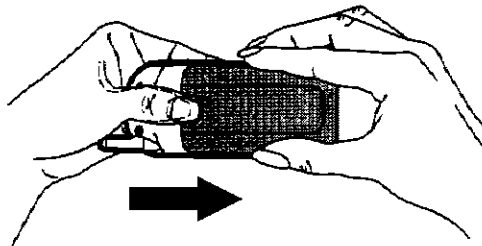

- Remove the battery.

 




## **Charging the battery**

A charger is supplied with the phone, in the box.

- **Clip the battery on the phone.**
- **Plug the charger into the phone connector.**

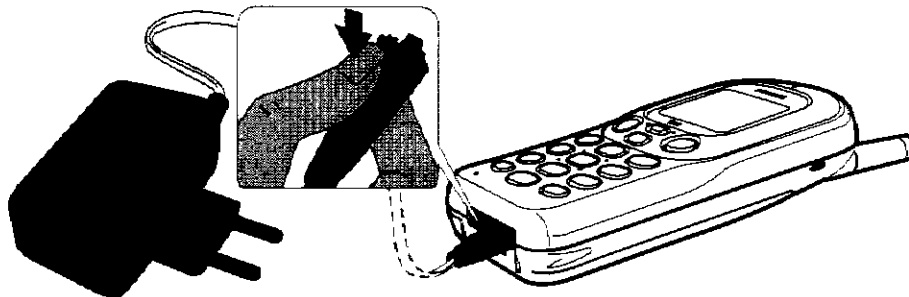

- **Plug the transformer unit into a mains AC power socket.**

The  symbol indicates the state of charge:

- During charging the 4 charge indicators change. If the first bar is dark, the battery already has a 25% charge.
- The bars darken one after another during charging.
- When all 4 bars are dark the battery is fully charged. A minimum of 2 hours charging is required to obtain a 90% charge with the provided battery. For the maximum charge continue charging.
- When the battery is charged, remove the connector by pressing the release button on top of the connector.
- Recharge the battery before it is totally flat.




### **NOTES:**


1. You can turn your phone on and use it while it is charging.
2. The only way to turn the battery charger off is to unplug it from the mains outlet; for this reason use a mains outlet with easy access.
3. If the battery is completely flat, the battery icon will only reappear after 2 or 3 minutes of charging.



## **Making an emergency call**

Key in the emergency number for your present location. Emergency numbers vary depending on the location.


 
- **Switch on the phone.**  
The display shows the welcome screen.  
Even if you are asked for your PIN code, your phone will function without it.
- **Enter the emergency number or press  if pin code is asked.**
- **Press .**  
The phone dials the number.
- **After the call, press .**


 *You can also enter the emergency number using the keypad, even when the keypad is locked.*





 
 
## Switching on

- Press and hold the  key.
- Enter your PIN code if asked and press the Pilot Key .


 The PIN code requirement is a security feature that you can switch on and off using the "PIN protection\*" menu (see page 44).

## Idle screen

After switching on (and entering the PIN code), your phone displays the idle screen which means that the phone is ready to use. At the same time:

- the  icon is displayed, this indicates that the phone is connected to the network. The network name appears on the screen.
- the  symbol is displayed, indicating the quality of reception (when all 4 bars appear, the audio quality is at its best).



 
 


If the  symbol and the network name are not displayed, the network is not currently available. You may be in a bad reception area (perhaps in a tunnel or between tall buildings).

If possible, move to a different location.

If you navigate into the menus or the Names list, the phone automatically returns to idle screen if a key is not pressed for 2 minutes. During this period of time you can still receive a call.


## How to enter a text or a number

Characters and numbers are located on each keys as follow:



Key Label	Upper case alphanumeric	Lower case alphanumeric
	space 1 @ # = < > ( ) & £ \$ ¥	space 1 @ # = < > ( ) & £ \$ ¥
2ABC	A B C 2 A Å Ä Æ Ç	a b c 2 à ä å æ ç
3DEF	D E F 3 È É Δ Φ	d e f 3 è é è Δ Φ
4GHI	G H I 4 Γ I	g h i 4 Γ i
5JKL	J K L 5 Λ	j k l 5 Λ
6MNO	M N O 6 Ñ Ò Ó Ø	m n o 6 ñ ó ø ø
7PQRS	P Q R S 7 β Π Θ Σ	p q r s 7 β Π Θ Σ
8TUV	T U V 8 Ù Ú	t u v 8 ù ù
9WXYZ	W X Y Z 9 Ω Ξ Ψ	w x y z 9 Ω Ξ Ψ
	.0" ? ! , ; : ; * + - / %	.0" ? ! , ; : ; * + - / %
	Toggles between the different Text Input mode	Toggles between the different Text Input mode
	Upper case	Lower case



 **NOTES:**

1. A number can contain a maximum of 40 digits.
2. It is a good idea to enter all numbers, even local ones, with their international prefix, country code and area code. Thus you can dial all numbers from any location.
3. The '+' character can only be inserted at the beginning of a number.
4. To correct mistakes, press  and release to delete one digit.
5. For an efficient text editing you may use the T9™ Text Input (see page 24).



 



## Events in idle screen

Some events may modify the idle screen (missed call, new message, reminder from the organiser, etc.). In this context, press the Pilot Key  to access a contextual menu or press on the  key to go back to idle.



## Making a call

In idle screen :

- **Enter the phone number using the keypad.**  
To correct an error, press . To move through numbers move the Pilot Key upwards or downwards ( or ).  
For an international call, you can enter the "+" key instead of the usual international prefix. To do this press and hold .
- **Press .**  
The phone dials the number.
- **After the call, press  to hang up.**

 **Note:**

1. You can also make a call from the **Names list** (see page 22).
2. If a number has been programmed on a direct access key, you can call this number by pressing and holding the key (see "Flash dial" on page 21).
3. If the called number is in the Names list, the corresponding name will be displayed instead of the number.





# Answering and Ending a call

When receiving a call, the phone rings, the animation and Incoming call appear on the display. Depending on your subscription, the caller's number may be displayed, if your correspondent has enabled this information to be transmitted. If this number is in the Names list, the corresponding name shall be displayed instead of the number.

• **To answer the call you can either:**

- Press .
- Press the Pilot Key - , the carousel with the following option appears:

- Silent ringer

The ringer volume of this incoming call is set to silent and the phone returns to the incoming call screen.

- Accept call

- Reject call

• **To hang up a call you can either:**

- Press .
- Press the Pilot Key - , the carousel with the following option appears:

- Select End Call and confirm.

• **If you want to reject the call, press .**

The phone returns to idle screen and the caller hears the busy tone.

If you have activated "Call forward when busy" (see page 48), the call is diverted to the selected number (your voice mailbox, for example).

**NOTES:**






1. The phone will not ring if the ringer is deactivated (see page 23).
2. If you have selected Any Key Answer (see page 49), you can accept a call by pressing any key (except ) or by pressing the Pilot Key - .





## Redial & Reply

The phone stores internally the last 30 numbers (called or received). You can redial or reply to any of these numbers and dial it directly. The most recent is displayed first.

In idle screen:

- **Press the Pilot Key**  **to access the main Menu.**  
Select **Call List**. This displays a chronological list of the last calls either received or dialed.  
If a number is in your Names list, the corresponding name is displayed.
- **Move the Pilot Key up or down** ( & ) **to select the number you want to redial or reply.**
- **Press** .
- **After the call, press**  **to hang up.**


 You can directly access the Call list by moving up the Pilot Key. You can directly access the last dialling number by pressing the Pick up Key .




## **Flash dial**

You can associate any of the keys **2** to **9** with a Names list entry to give you direct access, through a single long key press, to a frequently used phone number (Key **0** and **1** are defined and cannot be changed).

In idle screen:

- **Press and hold a key between 2 and 9 to dial the associated entry.**  
The connection is established.
- **After the call press  to hang up.**

You can use your  as a redialling key, indeed, a first press on this key displays the last number dialled (or name if the number is in the Names list), a second press on the same key dials the number. The hotkey option is still available to redial the last number.



## **During a Call...**

You can:

- Adjust the earpiece volume (see page 21)
- Mute or unmute the microphone (see page 21)
- Write a number on the notepad (see page 22)
- Consult the Names list (see page 22)
- Add a name to the Names list (see page 29)
- Write and send a message via the Names list (see page 29) or the Notepad (see page 22)
- Check a voice mailbox or access a voice server via the Notepad (see page 22)
- Make a second call (see page 53)
- Consult your Organizer (see page 34)
- Consult your Call list (see page 34)
- Transmit DTMF tones to answering machines and other devices.

## **Adjusting the Earpiece Volume**

 

During a call:

- **Move the Pilot Key up  to increase the volume or down  to decrease it.**

## **Mute the microphone**

You can mute the microphone so that your correspondent cannot hear you.

During a call:

- **Press the Pilot Key –  and select Mute.**  
**Confirm by pressing the Pilot Key – .**  
The microphone is muted.



## Unmute the microphone

If the microphone is muted.


- **Press the Pilot Key – [ ] and move the Pilot Key until Unmute is displayed. Confirm by pressing the Pilot Key – [ ].**  
The microphone is unmuted.

## Writing in the notepad

The notepad is a temporary memory in which you can note down a number during a call.

During a call:

- **Press the Pilot Key – [ ]**
- **Move the Pilot Key up [ ] , or down [ ] , to select notepad, then press the Pilot Key – [ ] .**
- **Enter the number you want.**
- **Press the pilot key – [ ] to access the call option menu and then select either call, send SMS or store function.**
- **In case of SMS, then the user is requested to enter a standard message or a new one (see "Send SMS", page 29).**

 You can also just enter the number during the call and it will re-appear when the call ends.

## Consulting the Names List

During a call:

- **Press the Pilot Key – [ ] .**
- **Move the Pilot Key to select Names, then confirm by pressing the Pilot Key – [ ] .**
- **In the NAMES menu, scroll through the entries by moving the Pilot Key.**
- **Press [C] to return to the In-call screen.**

## Locking the keypad

You can lock the keypad to protect the keys from being pressed accidentally (for example, when the phone is in your pocket).

In idle screen:

- **In the Settings menu, select Security, Keypad Lock. Move the Pilot Key to select immediate or delayed lock.**
- **Or with a long press on the [C] key, you can activate the keypad lock.**

A  will appear on your screen when keypad lock is activated.

 **NOTES:**




1. The emergency number is available even when the keypad is locked and you can still receive calls.
2. To switch the phone off, you must first unlock the keypad.
3. Immediate keypad lock can be assigned to a corresponding Hotkey.





## Unlocking the keypad

With the keypad locked:

- **Move the Pilot Key upwards**  **then downwards** .
- The keypad is unlocked.
- **Or with a long press on the  key, you can deactivate the keypad lock.**


### NOTES:

1. It is possible to accept or reject a call even when the keypad is locked. The keypad is unlocked automatically when the phone receives a call, and then re-locks again once the call is finished.
2. If you choose to lock the keypad with a delay, it will be permanently locked (after that delay). If you choose the 'unlock now' setting, it will be temporarily unlocked until you finish the action.





## Activate/deactivate the Silent Mode

If you do not want your phone to ring when you receive a call, activate the silent ringer.

If you receive a call while the silent mode is activated,  the symbol flashes, and the display shows **Incoming call**, but the phone does not ring.

In idle screen:

- **Press the Pilot Key** , **select the Settings menu, Sounds, Ringer volume and move the Pilot Key to silent.**  
**Press the Pilot Key**  **to confirm.**  
The ringer is deactivated. To reactivate the ringer, repeat the above sequence and select the required volume.

 *Silent mode can be assigned to a hotkey.*





## Activate/Deactivate the Vibrator

If you have set the function, your phone vibrates when you receive an incoming call.

Using the Vibrator doesn't mute the ringer. If you want to mute it and keep only the vibrator function active, set the quick setting **Silence**.

In idle screen:

- **Press the Pilot Key** , **select Settings. Select Sounds (confirm) then select Vibrator.**  
Move the Pilot Key to select **On** or **Off** and press to confirm.


 *The Vibra Setting is independent from the ringer. You can activate both at the same time.*



# Reading your Phone Number

In idle screen:

- Press the Pilot Key – .
- In the Names menu, move the Pilot Key until you reach Own Number.

 If your own number has been stored in the Names list, you can read it during a call. See "Consulting the Names list" page 22.

## Text Input

The phone provides you four different modes for the text input:

- The T9™ Text Input,
- a Basic text input,
- a mode for numbers,
- a mode for punctuation marks and symbols.

To access one of these modes press .












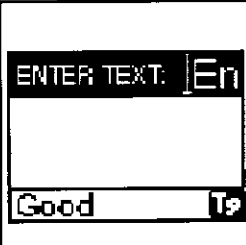

Depending on the selected language, the T9 Text Input is proposed by default to write SMS and names in the Names List.

### T9 Text Input


T9 Text Input is an intelligent input for SMS & phonebook that analyses keystrokes to come up with the right word. It is a fast and simple way to enter information on the phone. It is a very efficient method of text input that requires just one key press per letter; other methods (Multi-Tap) requires the user to press a key the number of times corresponding to the ordinal position of the character on the key. For example, entering the English word "easy" requires only 4 key presses with T9 Text Input, but as many as 10 key presses with using a Multi-Tap technology, therefore, a significant productivity advantage exists with T9 Text Input.

### How to use T9 Text Input

Please select T9 Text Input using the key . While in this mode, the alphabets and symbols represented by each key are:

	 Confirm	 ABC	 DEF
	 GHI	 JKL	 MNO
	 PQRS	 TUV	 WXYZ
	 Typing mode	 Scroll	 Shift

The sequence for T9 Text Input is:

- 1 Key in alphabets using  to ,  to clear
- 2 Select word using 
- 3 Confirm word 

Please follow the above sequence. You need to press the key for the corresponding alphabet only once. You do not have to consider the order of the alphabets indicated on the keys, as the T9 Text Input will form the words automatically and all possible word combinations of the key presses will be available for your selection.

After you have entered all the alphabets, the screen will show the most probable and most commonly used English word for your consideration. If that is not the desired word, you can press **0** to select the next English word, until the desired word appears on screen. Press **1** to confirm, the desired word will be entered and a space will appear automatically after the word to facilitate your entering of the next word.

For example, to enter "Home", please key in **4 6 6 3**.

The screen will first show the word "Good", to select "Home" press **0** to scroll to the word and then press to confirm your selection.

You can also use **1** to key in punctuation as shown in the above sequence.

You may also have the punctuation keys by pressing **\*** three times. Then on your screen you see all the punctuation mark you may enter. Press then one key, and your punctuation mark will be automatically added to the text you were typing. To return to alphanumeric entry, press **\*** once, and you will be able to continue on typing with T9™ Text Input.

After you have edited the names for the telephone book or short messages, press the Pilot Key **]** to confirm the completion of the editing.

## Basic text input

Please select "ABC" basic text input. While in this mode, the alphabets and symbols associated to each key are presented in the table page 17.

Please follow the sequence and press the key with the required alphabets, press once to select the first alphabet of the key, twice to select the second alphabet of the key . . . , so on and so forth.

Take the example of **2**, press once to select A. If this is not the desired alphabet, press again quickly to select B, press again the third time to select C.


For example, to enter "Love", you have to press **5** thrice, press **6** thrice, press **8** thrice and press **3** twice. The word "Love" will appear on the screen.



After you have edited the names for the telephone book or the short messages, press the Pilot Key **]** to confirm the completion of the editing.








































Easy to find and simple to use in either Advanced menu or Simple menu mode via the Pilot Key – , the menus contain all your phone functions. All the menus have icons with scrollable lists and are used in the same way. The messages displayed on the screen explain what you have to do.

When turning on your phone the Simple navigation mode is proposed. To access the Advanced mode offering the maximum number of options, select and confirm  in the  from the main menu.

## Overview of menus


 
 <b>Names</b>	<b>29</b>	 <b>Call counters</b>	<b>36</b>
 <b>Messages</b>	<b>30</b>	<i>Accumulated call timers</i>	
 <b>Send SMS or Reply</b>	<b>30</b>	<i>Accumulated cost</i>	
 <b>Read SMS</b>	<b>32</b>	<i>Info at call end</i>	
 <b>SMS settings</b>	<b>32</b>	<i>Last call information</i>	
SMS Center		 <b>Brick Game</b>	<b>37</b>
Signature		 <b>Calculator</b>	<b>38</b>
Validity period		 <b>Alarm clock</b>	<b>38</b>
Reply path		 <b>Settings</b>	<b>39</b>
Delivery report		 <b>Sounds</b>	<b>40</b>
Auto save SMS		<i>Ringer volume</i>	
 <b>Mailboxes</b>	<b>33</b>	<i>Ringer</i>	
 <b>Call list</b>	<b>34</b>	<i>Key tones</i>	
 <b>Organizer</b>	<b>34</b>	<i>Minute beep</i>	
 <b>Events</b>	<b>34</b>	<i>Organizer alerts</i>	
 <b>Day view</b>	<b>35</b>	<i>Battery low alert</i>	
 <b>Week view</b>	<b>35</b>	<i>New SMS tone</i>	
 <b>Month view</b>	<b>35</b>	<i>Vibrator</i>	
 <b>Extras</b>	<b>36</b>	 <b>Display</b>	<b>42</b>
		<i>Zoom on/off</i>	
		<i>Backlight</i>	
		<i>Animation*</i>	
		<i>Contrast</i>	
		 <b>Security</b>	<b>42</b>
		<i>Keypad lock</i>	





Public names*		<b>Call settings</b>	<b>48</b>
Call barring*		Call forward	
Change codes		Autoredial*	
PIN protection		Any key answer*	
 <b>Time and date</b>	<b>44</b>	Call waiting	
Clock display		Caller ID	
Set date		<b>Quick settings</b>	<b>50</b>
Set time		 <b>Personal</b>	<b>50</b>
 <b>Language</b>	<b>45</b>	 <b>Silence</b>	<b>50</b>
 <b>Menu type</b>	<b>46</b>	 <b>Autonomy</b>	<b>50</b>
Simple menu		 <b>Outdoors</b>	<b>50</b>
Advanced menu		 <b>Meeting</b>	<b>50</b>
 <b>Hotkeys*</b>	<b>46</b>		
 <b>Network</b>	<b>47</b>		
 <b>Network</b>	<b>47</b>		
Register again			
Preferred list			
 <b>* In advanced mode only.</b>			



# Names

The  **Names** menu allows you to consult the list of your correspondents, add new names, write and send messages. The names are listed in alphabetical order. You can scroll through the list using the Pilot Key  or by entering the first letter of the name. In the list you can choose from the following:


 You can directly access the names list by moving the Pilot Key downwards .

## <New>

This menu allows you to enter the name and phone number of a new correspondent. In Advanced mode, you can select the type of number allocated to the name: phone, fax or data.



## Select a name

By selecting a name, you display the associated number. A second press on the Pilot Key  allows you to:

- call
- flash dial
- send message
- delete
- associate a voice dial
- change






You can directly access the first letter of your correspondent's name in the Names List by pressing the right alphanumeric key. For example, if you want to access the letter 'U', just press the key number '8' twice.

## Send SMS

See page 30 and 31 to: Send now, Add icon and Save.

## Flash dial


The  **Flash dial** menu provides you with direct access to the phone numbers that you use most frequently. This is done by linking them to the keys from  to .




## Delete

The  menu allows you to delete the number and selected name.

## Change

The  menu allows you to modify the selected name, number and determine whether it is a fax, phone or data transmission number.


## Emergency

The selection displays the emergency call number. Press  to dial.

## Own number

Depending on your subscription, selecting **Own num.** displays your own phone number(s).

## Messages

The  menu allows you to manage the messages in your voice mailbox, messages to be sent, messages to be read, your message settings and broadcast messages.



## Send SMS or Reply

The  allows you to:

- send it to a correspondent in your Names list,
- write a new message or select a standard one.


The Standard SMS messages are displayed one after another:

- Please call me back at for example allows you to compose automatically a message including your own number.

Once your text is written, you can link an emotion icon to it, send the message and save it.



## Send now

The  option allows you to send the current message.





## Add icon







 




 








 







The  option allows you to send an emotion icon together with your message. To see the image, the receiver needs a mobile phone which supports emotion icons ). Otherwise the equivalent Internet translation code will be displayed at the end of the receiver's message.


Image		Code sent
<b>Emoticon</b>		
	Smile	:)
	Wink	;-)
	Cool	B-)
	Tongue	:-P
	Sad	:-(
	Angry	:-/
	Heart	(O)
	Broken heart	(X)
	Yo!	Yo!
	Well done!	==b
	BOOM!	>*<
	Deadly	%-
	Magic	=:
<b>Animals</b>		
	Meow!	:<*
	Woof!	:>#
	Teddy	8<)
<b>Sports</b>		
	Ball	( )
<b>Events</b>		
	Party	o<
	Cake	iii
	Gift	[i]
	Drink	>
	Coffee	I D
	Holidays	-Y-
	Cloudy	:::
	Sunny	>o<
	Flower	@ >-

## Save





The  option allows you to store the current message and its associated icon if there is any.



## Read SMS

The  **Read SMS** menu allows you to consult the list of SMS you have saved, and received. By using carousel items, you can also delete, reply, re-send or forward these messages.

### Saved Messages

The messages you sent are labelled with  in normal mode or with  in Auto save SMS mode (page 33). Select the message you want and press the Pilot Key  $\rightarrow$   to read it. When displayed, press the Pilot Key  $\rightarrow$   to access the following options:







#### Send SMS

Allows you to modify the content and the addressee of the message, add or change the icon, send it and save it (see also above to: Send SMS, Add icon and Save).

#### Delete

Allows you to delete the selected message.

### Received Messages selection

The messages you received and already read are labelled with . The messages you received but not yet read are labelled with . Select the message you want and press the Pilot Key  $\rightarrow$   to read it. When displayed, press the Pilot Key  $\rightarrow$   to access the following options :



#### Reply

Allows you to reply to the sender. You can either write a new message or select a standard one. Once the message is defined, you can link it with an emotion icon, send it and save it.

#### Forward to

Allows you to forward the selected message. You can either choose the addressee in the Names list or enter his phone number manually.


#### Delete

Allows you to delete the selected message.


## SMS settings

The  **Settings** menu allows you to customise your SMS via the following options:

### SMS Center


The  **SMS centre** option allows you to select your default SMS centre. |

### Signature

The  **Signature** option allows you to send a signature together with your SMS. This signature consists of a series of characters showing your default account number and name. This forms a signature that is transmitted at the end of your message. The length of the message is consequently reduced. You can edit this signature, modify it and save it.




## Validity period

The  option allows you to select the length of time your message is to be stored in your SMS centre. This is useful when your correspondent is not connected to the network.


## Reply path

Depending on your network.

You can activate or deactivate the  option (in Advanced menu mode only). This option transmits your SMS message centre number with the message. Your correspondent can then reply using your own SMS centre and not his. This speeds up the rate of transmission.

## Delivery report


Depending on your network.

You can activate or deactivate the  option which informs you via a written message that your SMS was received or not (Advanced menu mode only).

## Auto save SMS


 
The  option activates or deactivates the automatic saving of messages sent.


## Mailboxes


The  menu allows you to call your voice mailbox. .




## **Call list**

The  menu provides you with the list of calls you have received and given, as well as attempts at auto redial and details of voice messages. The calls are displayed in chronological order with the most recent first. When the Call List is empty the screen displays **List empty**. Otherwise for any selected call you can, by pressing the Pilot Key , consult the date, time, number, call status and whether it was sent or received.

A second press on the Pilot Key  gives access to this following carousel which allows to send a SMS, delete the selected call, phone this number or store this number by entering the associated name (if not present in your phonebook).


Select a record in the Call list and press the  to dial the corresponding number.

### **Note:**

You can directly access to the Call list by moving the Pilot Key upwards .




## **Organizer**

The  menu allows you to manage up to 40 events.

Those events appear in the lists in a chronological order, using start times and dates, with the most recent one on top. When memory is full the message "Memory full" appears. Before being able to add a new event you have to delete in past day view, week view or month view.



## **Events**


The  menu is a list which enables you to consult, modify and add new events.

### **Add a New event**


This provides access to four different types of events: Meeting, To Do, Quick Settings, Holidays. Select one to create a new event.




### **Meeting**

The  menu allows you to enter a date, a start and end time, the main details, and an alert. The event may be repeated (in Advanced mode only).


### **To Do**

The  menu allows you to enter a date, a time, general details, and an alert. The event may be repeated (in Advanced mode only).

## Quick Settings

The  menu allows you to program the activation of a specific Quick Setting. Select a date and time, and the Quick Setting to be activated (see page 50). The event may be repeated (in Advanced mode only).

## Holiday


The  menu allows you to enter events relating to your Holidays, with start and end dates. The event may be repeated (in Advanced mode only).

## Select an event

By selecting an event, you can be reminded of the details of an event existing in the list. You may change its details, set a reminder, repeat it at a selected frequency. You can also delete it.




## Set reminder

The  menu reminds you of events via alerts triggered at times you have chosen in the carousel (in Advanced mode). Only for Meeting and To do events.




## Repeat events


The  menu allows you to repeat events at a frequency you have chosen in the carousel.







 

## Change

The  menu allows you to modify dates, times and the type of event. In advanced mode you can also modify the reminder and repeat option.

## Delete


The  menu allows you to delete the event. It is better to remove the past events.

## Day view, Week view and Month view

In each organiser view  Day view,  Week view,  Month view moving the Pilot Key upwards or downwards (  or  ) allows you to display the next or the previous day, week and month. Once you have selected the day, the week or the month, press the Pilot Key  to display the list of corresponding events.



## **Extras**


The  menu enables you to manage the Call counters, Euro converter, Voice memo, Alarm clock, Calculator and game.

 
### **Call counters**

The  menu allows you to handle the cost and duration of your calls.




### **Accumulated call timers**

The  menu allows you to check the duration of both incoming and outgoing calls and to set the counters to zero.

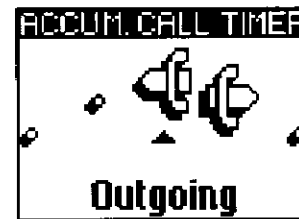


### **Accumulated cost**


The  menu allows you to display the accumulated cost and to set the counter to zero. It may be protected by PIN or PIN2 codes (depending on your subscription).




#### **Show**

The  menu shows you how much has been spent after having established the charge rate.


#### **Reset**

The  menu allows you to reset the current accumulated cost to 0; requires your PIN2 code.



#### **Show balance**

The  menu allows you to check the remaining credit (compared with your previously set limit).


#### **Cancel cost limit**

The  menu allows you to cancel the cost limit. It may be protected by PIN or PIN2 codes (depending on your subscription).

#### **Cost limit**


The  menu allows you to enter the cost limit used in the  menu.

#### **Charge rate**


The  menu allows you to set or change the rate per unit. First enter the currency used (three characters maximum) then enter the cost per unit.

### **Info at call end**




The  **Info** menu enables you to activate or deactivate the systematic display of the length and/or cost of each call (depending on your subscription).

## Last call information

The  **Last call info** menu allows you to display the duration and/or cost (depending on your subscription) of your last calls.

 


## Brick Game

The  **Brick Game** consists in breaking a complete set of bricks with a ball and a racket. When you have broken all of them, you play with a new set of bricks (new level).

### Game principle:

- the ball is moving through the screen, rebounding on different elements. When it hits a brick, the brick disappears and your performance increases.
- the racket moves horizontally at the bottom of the screen. When the ball reaches the bottom of the screen, you must hit it.
- into the second level, some special bricks need to be hit twice to be broken (the black ones), and some other are indestructible (the empty ones).
- if the ball hits the floor, you lose a credit.
- when you have lost all your credits, the 3 best scores and the corresponding players' names are displayed on the screen. If your score is greater than the last one ranked, you are asked to enter your name.
- You score extra credit every three level.

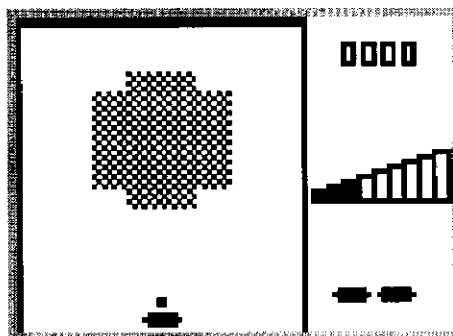

 
Keys used :

- (4) and (6) to go left and right  
(\*) and (#) to throw the ball left and right  
(0) to do a break

## Calculator


The  menu provides the following functions:


- Addition by pressing the (\*) key  
Substraction by pressing the (\*) key twice  
Multiplication by pressing the (\*) key three times  
Division by pressing the (\*) key four times  
Equals by pressing the (#) key

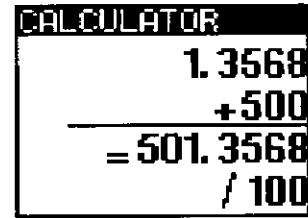



The figures are entered using the keypad. Calculator accuracy is to 2 decimal places and is rounded up to the higher decimal figure. Press (C) to correct the numbers. Press and hold 0 to get the dot. Press and hold (C) to return to the idle screen.

## Alarm clock

The  menu allows you to activate, deactivate and set the alarm function of your phone.

 : activates the alarm at a set hour on a set day.

 : activates the alarm at a set hour every day of the week.


 : activates the alarm at a set hour on weekdays only.

To stop the alarm when ringing press the Pilot Key — [ ].





# Settings

The  menu allows you to customise your phone.



Sounds

To select the different ringer melodies and alert beeps.



Display

To set the display parameters: contrast, animation, backlighting and zoom



Security

To manage security: PIN codes, keypad lock, restrictions, etc.



Time and date

To set the time and date, change the clock display mode.



Language

To set the language used by your phone.



Menu type

To select the Navigation mode: Simple or Advanced.



Hotkeys

To program direct access to a function via a single key press.



Network

To handle the connection between the phone and the network.




Call settings

To set the call options (Call Forward, call Waiting, Caller Identifier, ...).




## Sounds



The  menu allows you to select the different ringer melodies and alert.













## Ringer volume

The  option allows you to set the volume of your ringer: it may be Increasing, High, Medium, Low or Silent. You can use a Hotkey to activate the silent mode (see page 50). By default the ringer volume is set to 'Medium'.

## Ringer

The  option enables you to select the ringer type from among 19 melodies. Scroll through the list and wait for two seconds to hear the highlighted melody played. Confirm your choice of melody by . This menu also enables you to create the 20<sup>th</sup> melody.

### Creating a 20<sup>th</sup> melody: Own melody

This option allows you to compose a melody with up to 32 notes. You select the required notes on the keys from  to  and the rests with  and . The default note is B. With  or  you can change the notes up or down in semitones. You can change notes to flats by the  key or to sharps by the  key. Each time you press another key than a digital one, you will hear the note and the corresponding effect. Press other digital keys from  to  to obtain new notes with the following values:

TYPES	LENGTH/SHARP	KEYS
Semi quaver	1/4	1
Quaver	1/2	2
Dotted quaver	3/4	3
Sharp	1	4
Dotted sharp	3/2	5
Minim	2	6
Dotted minim	3	7
Whole note	4	8
Quaver rest	1/2	9
Crotchet rest	1	0




## Example




## How to obtain such a melody

NOTES	LENGTHS		HEIGHTS		
	TYPE	KEY	VALUE	. []	' []
1 <sup>st</sup> note	Minim	6	E	4 times	
2 <sup>nd</sup> note	Dotted minim	7	B	3 times	
3 <sup>rd</sup> note	Sharp	4	B-flat		7 times and *
4 <sup>th</sup> note	Dotted quaver	3	B-sharp		6 times

## Key tones

This  **Key tones** menu allows you to activate or deactivate the key tones. If you press an unvalid key the phone emits an error beep. Even if Key Tones are set Off, DTMF are "played" during calls.


## Minute beep

The  **Minute beep** menu allows you to activate or deactivate a beep every minute during a call. It is only available in Advanced menu mode (the beep cannot be heard by your correspondent). Each beep is emitted 15 s before the end of each minute of communication. This allows you to manage as efficiently as possible the duration of your calls.


## Organizer alerts

The  **Organiser alert** menu allows you to activate or deactivate an alert when an event is due.


## Battery low alert

The  **Battery low alert** menu allows you to activate or deactivate an alert which informs you that the battery is low and requires recharging.

## New SMS tone


The  **New SMS tone** menu allows you to activate or deactivate an alert tone each time you receive a SMS.

## Vibrator


The  **Vibrator** function allows you to activate or deactivate the vibrating alert when receiving a call.

 


## Display


The  **Display** menu allows you to set the zoom, the backlight, the contrast and screen animation (only in Advanced mode).

### Zoom on/off

The  **Zoom** menu allows you to activate or deactivate the zoom function. It enlarges the size of text used in the menus, the Names list, and the dialling number.

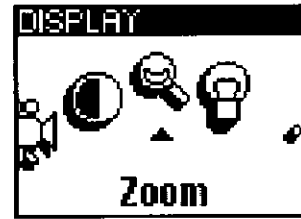


### Backlight

The  **Backlight** menu allows you to select the backlight duration:

- no backlight
- 10 seconds backlight
- 30 seconds backlight
- 1 minute backlight

 
The backlight will be activated when receiving incoming calls, messages, etc.

### Animation


The  **Animation** menu allows you to activate or deactivate the animation in different menus (only in Advanced menu). Deactivating this function increases the autonomy of your phone.

### Contrast

The  **Contrast** menu allows you to choose among 5 levels of contrast.

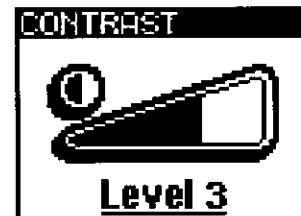


### Security

The  **Security** menu ensures the security of your phone by locking the keypad, limiting calls to public numbers, prohibiting specific incoming and outgoing calls, activating security via PIN codes and changing those PIN codes.




### Keypad lock

The  **Keypad lock** menu allows you to activate or deactivate the keypad lock. The keypad automatically unlocks when you receive a call. When your keypad is locked, you can unlock it by moving up and down the Pilot Key (↑ & ↓) or via a long press on the (C) key.




## Public names


The  **Public names** menu allows you to lend your phone with your subscriber card. It allows you to restrict calls to numbers that you have previously defined in your Public Names list. This function may depend on your subscription (in **Advanced mode** only).



### Call restriction

The  **Call restriction** menu allows you to activate or deactivate the call restriction to the Public Names list.


### Public names

The  **Public names** menu allows you to consult your Public Names list. You can also enter a new name, modify or delete a name in the list via PIN2 code.

- **<New>**

 
This menu allows you to enter the name and phone number of a new correspondent. In **Advanced mode**, you can select the type of number allocated to the name: phone, fax or data.

#### Change


The  **Change** menu allows you to modify the selected name, number and determine whether it is a fax, phone or data transmission number.



#### Delete

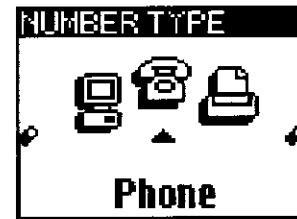The  **Delete** menu allows you to delete the number and selected name.








## Call barring









The  **Call barring** menu allows you to limit the use of your phone to specific calls. This function is network dependent and requires a call barring password supplied by your service provider.

This carousel allows you to bar  **Incoming** and  **Outgoing** calls.

### Outgoing

The  **Outgoing** menu allows you to select between  **AI**,  **International** calls and  **Inter. except home** (the latter allowing you to call your home country when you are abroad). You can also  **Cancel** the bans on outgoing calls.




 




The  **All**,  **International** and  **Inter. excap/home** menus enable you to  **bar** , ,  **Data calls** or  **Fax calls**.



### Incoming


The  **Incoming** menu allows you to select  **All** or  **When Roaming**. It also provides access to the  **Cancel** menu that removes bans on incoming calls.

The  **When Roaming** menu and the  **All** menu, allow you to select , ,  **Data calls** and  **Fax calls**.

### Status


The  **Status** menu allows you to know whether a type of call is barred or not.

### Change codes


The  **Change codes** menu allows you to change your PIN codes and call barring password.

 


### PIN protection


The  **Pin Protection** menu allows you to activate or deactivate the PIN protection when switching on your phone. This is carried out via the PIN code that puts your phone in service. If your PIN code is deactivated, you cannot change it.

### Time and date

The  **Time and date** menu allows you to set the time and date and choose the clock display format.

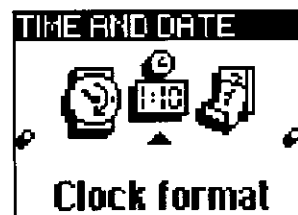


### Clock display


The  **Clock display** option allows you to select analogue or digital time formats.






### Analogue

The  **Analogue** option allows you to display the time on the idle screen using a clock face. Depending on the activated services, the clock display may automatically switch to the digital format.

## Digital




The  option allows you to display the time on the idle screen using a digital format.

## Set date

The  option allows you to set the date by pressing the respective keys. You can also set the date by moving up  or down  the Pilot Key:





## Set time

The  option allows you to set the time. You can set the time by keying it in the keypad. Moving up  or down  the Pilot Key increases or decreases the time minute by minute.



## Language


The  menu allows you to select a language for the texts displayed in the menus. A long press on  when in the idle screen, provides you with a shortcut to this menu.




## Menu type

This menu allows you to choose between the following navigation modes:

### Simple menu


The  Simple menu mode provides you with a simplified access to the basic functions of your phone. You can make and receive calls, make emergency calls, consult the Names list, swap to Advanced mode etc.

### Advanced menu




 
The  Advanced menu mode provides you with access to all the features of your phone (see page 28).

Depending on your subscription, one of these menus is set by default.

### Hotkeys






 


 
The  Hotkeys menu allows to set a direct access to several functions through a simple long key press (in Advanced mode only).



To program a Hotkey, select a key in the list (from  to ), then select a function from a carousel displayed on the screen. The  key is reserved for direct access to the language menu and the  key to call your voice mailbox.

You can reprogram each key.

You can associate the Hotkeys to the following functions:

-  Flash dial: Quick dialling of a number stored in the Names list.
-  Keypad lock: Immediate access to keypad lock.
-  Activ. Silence: Immediate access for the silent feature (vibrator on, ringer volume off, etc.).
-  Activ. Car: Immediate access to the car quick setting (ringer volume high, zoom on and any key answer on).
-  Activ. Headset: Immediate access to the headset quick setting (ringer volume is set to medium and any key answer on).
-  Activ. Meeting: Activates the meeting quick setting (vibrator on, ringer and all keys set to silent).
-  Activ. Outdoors: Immediate access to the outdoors quick setting. The ringer volume is high and keypad lock is on with 1 minute delay.
-  Activ. Personal: Immediate access to the personal quick setting.
-  Activ. Autonomy: Immediate access to the autonomy quick setting. This extends the usable time of the phone's battery (animation off, Vibra on, backlight off, ringer volume





medium).



Direct access to the calculator.



Redials the last number **dialled**.



Redials the number of the last incoming call.



Immediate access to the zoom feature.



Dials the emergency call number.



Sends a message selected from the messages list.



Direct access to read the messages list.



Displays the remaining credit balance.



Displays the accumulated cost of outgoing calls.



Creates an event in the organiser menu.



Displays the event list in the menu.




Forwards all calls to the voice mailbox.



Direct access to Brick game.


 Depending on your subscription provider some Hotkeys can be predefined and locked.

## Network


The  menu allows manual registering of available networks and the management of your preferred networks.



## Register again

The  menu provides you with a list of the networks available in the area. Select the network you want to register on and press to confirm.

## Preferred list


The  menu allows you to build a network list in order of your preference. Once defined, the phone will try to register on a network, according to your preferences.

The following settings are available:

- show the list of preferred networks and:
  - either delete a network from the list,
  - or move a network to a different position in the list,
- add a network to the preferred list from the list of available networks,
- add a network to the preferred list from the list of known networks,
- add a network to the preferred list by entering the network code. This is a 5-digit code:
  - 3 digits for the country followed by 2 digits for the network (67844 for example).














## Call settings

The  **Call settings** menu allows you to set all the parameters linked to the calls (Call forward, Call waiting, etc.).



## Call forward

The  **Call forward** menu allows you to divert incoming voice, fax or data calls either to a number in your Names list or to your mailbox. Before activating the Call forward option, please enter your voice mailbox's number(s) (see "Mailboxes" on page 33).


		SIMPLE MODE  Simple menu	ADVANCED MODE  Advanced menu
CALL TYPE	 Voice calls	X	X
	 Fax calls		X
	 Data calls		X
FORWARD OPTION	 Unconditional	X	X
	 Conditional no reply or not reachable or busy	X	
	 No reply		X
	 No reachable		X
	 Busy		X

The « conditionnal call forward » option, in Simple mode, will divert incoming calls if you don't reply, if you are not reachable or if you are busy. In Advanced mode, you can set any of these options independently.

- **Deactivate**


The  **Deactivate** option allows you to deactivate the status of all call forwarding.

- **Status**

The  **Status** option allows you to display the status of all call forwarding.





## Autoredial

The  **Autoredial** menu allows you to activate or deactivate the Autoredial feature (in Advanced mode only).


If Autoredial is switched on and if the line is busy, your phone automatically continues to redial this number until a successful connection is made, or until the maximum number of attempts is reached (10). The time between the attempts increases in order to be more successful.

The phone shall emit one beep at the beginning of each attempt and one special beep if the connection is successful.

## Any key answer


The  **Any key answer** menu allows you to accept a call by pressing any key, except the . This key is used to reject a call (in Advanced mode only).

## Call waiting

The  **Call waiting** menu allows you to activate or deactivate an alert beep informing you that you have another incoming call (in Advanced mode only).




### All calls

Sets the alert beep for  All calls


### Voice calls

Sets the alert beep for  Voice calls


### Fax calls

Sets the alert beep for  Fax calls

### Data calls


Sets the alert beep for  Data calls

 
## Caller ID

The  **Caller ID** menu allows you to choose whether you want to show or hide your identity to your correspondent. The status option will inform you if this function is activated or not. This feature is only available if both the network and your subscription allow it.





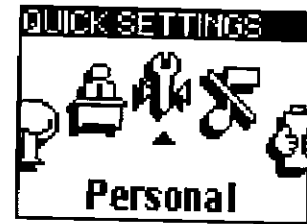


# Quick settings

The  **Quick settings** menu allows you to access a group of predefined settings. You can use these quick settings to adapt your phone to your environment. You can also associate a quick setting with a Hotkey (see Hotkeys, page 46).



## The Quick settings:

	 <b>Personal</b> **	 <b>Silence</b>	 <b>Autonomy</b>	 <b>Outdoors</b>	 <b>Meeting</b>
<b>Vibrator</b>	Active	Active	Inactive	<input type="checkbox"/>	Active
<b>Ring volume</b>	Medium	Silent	Medium	Loud	Silent
<b>Key tones</b>	Active	Inactive	<input type="checkbox"/>	<input type="checkbox"/>	Inactive
<b>Organiser alerts</b>	Active	Inactive	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<b>Battery low alert</b>	Active	Inactive	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<b>New SMS tone</b>	Active	Inactive	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<b>Alarm clock</b>	Inactive	Inactive	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<b>Keypad lock</b>	Inactive	<input type="checkbox"/>	<input type="checkbox"/>	1 minute	<input type="checkbox"/>
<b>Backlight</b>	10 seconds	<input type="checkbox"/>	Inactive	<input type="checkbox"/>	<input type="checkbox"/>
<b>Zoom</b>	Inactive	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<b>Any key answers</b>	Inactive	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<b>Animation</b>	Active	<input type="checkbox"/>	Inactive	<input type="checkbox"/>	<input type="checkbox"/>

The table above highlights the specificities of the Quick settings referred to.



 \*\* There are settings for the parameters when you first switch on the phone. You can

Setting identical to the one memorised in Quick Setting Personal.

update these parameters as all are user programmable



When using a headset or a car kit accessory the settings are modified in the following way:

	 Headset	 Car
Vibrator	<input type="checkbox"/>	Inactive
Ring volume	Medium	Loud
Key tones	<input type="checkbox"/>	Active
Organiser alerts	<input type="checkbox"/>	<input type="checkbox"/>
Battery low alert	<input type="checkbox"/>	<input type="checkbox"/>
New SMS tone	<input type="checkbox"/>	<input type="checkbox"/>
Alarm clock	<input type="checkbox"/>	<input type="checkbox"/>
Keypad lock	<input type="checkbox"/>	Inactive
Backlight	<input type="checkbox"/>	Permanent
Zoom	<input type="checkbox"/>	Active
Any key answers	Active	Active
Animation	<input type="checkbox"/>	<input type="checkbox"/>



*Setting identical to the previous one.*





### **Query a voice server, a voice mailbox, a messaging service, etc. (DTMF tones)**

Some phone services (such as phone answering machines and pagers) require your phone to transmit DTMF tones (Dual Tone MultiFrequency), also known as "touch tones". These are used to communicate passwords, callback numbers, caller choices, and so on.

You can send DTMF tones at any time during a call by pressing any of the keys **0** to **9**, **\*** and **#**.

You can also append a DTMF sequence to a phone number before dialling it (or storing it in the Names list). The phone number and the DTMF part must be separated by a wait character.

#### **Pause and wait characters**

To obtain a pause or wait character, press and hold **#**. The display shows **w** for a wait and **p** for a pause. The phone always interprets the first pause character as a wait character.

When you dial a number containing a wait character, your phone dials the first part (the phone number) and then waits for the call to be connected before sending the rest of the digits as DTMF tones.

Any subsequent pause character is an ordinary pause that generates a delay of 2.5 seconds.

To hear all messages (code 3, say) on your answering machine (password 8421) at phone number 12345678, you could call: 12345678w8421p3.

The phone dials 12345678 and waits for the call to connect. When connected, the phone transmits 8421 (the password), pauses 2.5 seconds, and then sends the last digit.

If you find that 2.5 seconds is not long enough for your needs, you can enter several pause characters one after the other to increase the pause time.








## Making a second call

You can make a second call during an active call or during a call on hold. You can switch between the two calls.

- **Dial a number then press**  .


 

The first call is placed on hold and the number is displayed at the bottom of the screen. The second number is then dialled.



- **To toggle between the two calls, press the Pilot Key** -  **then select Switch calls.**  
Each time that you toggle from one call to another, the active call is placed on hold and the call which was on hold is activated.
- **To hang up the active line, press**  .  
The active line is hung up and the call on hold remains on hold.
- **To end the call on hold, use Switch calls to reach it, then press**  .

### NOTES:

The second number can be dialled either from the keypad or from:

- the Names list, by pressing the Pilot Key -  then Names - 
- the Call list, by pressing the Pilot Key -  , then selecting Call list.


Depending on the subscriber's card.


\* Depending on the country (see "Charge rate" on page 36).



## Answering a second call



You are able to receive another call when already in communication (if this feature is available on your network). When you receive a second call the phone emits an alert beep and the screen displays **Call waiting** (see Call waiting menu, page 49).

• **If you receive a second call, press the Pilot Key - . By moving the Pilot Key, you can:**

- accept the second call, the first one is put on hold, the second one is active. If you want to toggle between the two calls, press the Pilot Key -  then select **Switch calls**. Each time you toggle from one call to another, the active call is put on hold and the call which was on hold is then activated.
- reject the second call.
- end the active call, then your incoming call is ringing.



 **NOTES:**

1. If you wish also to answer the incoming call, press  , to reject the incoming call, press .
2. If you have activated call forwarding 'If Busy' (see page 48), you will never receive second calls since they are always forwarded when the line is busy.

## Answering a third call


While in communication and one call being on hold, you may receive a third call (if this feature is available on your network).

The phone emits an alert beep. You must end one of the communications before being able to answer the third, or introduce the calling party into a conference (see "Conference Call" on page 55). This service is limited to two current communications (one active and one on hold).






## **Conference Call**



This feature depends on your network.

The user can activate the conference call by making consecutive outgoing calls, or create it from a multiparty call context. The user may have up to five members at the same time. He can end the conference with . At this point all calls are disconnected.

When making consecutive outgoing calls, initiate a normal call with the first number of the conference. Then when the first member is on line, initiate a second call as described in making a second call paragraph page 53.

When the second call is engaged, press the Pilot Key –  and select  . Repeat the above process up to five members.


If there is an incoming call during the conference call, and if there is less than the five members, this last correspondant is introduced to the conference by pressing the Pilot Key – .

You can accept the second call as described in paragraph answering a second call page 54, and by pressing the Pilot Key –  and selecting  you can also add this member to the conference call.

If there is an incoming call during a conference call and if five members are already connected, the incoming call is automatically rejected with a user Busy notification (there is no ringing screen).

## **Explicit Call Transfer**






This feature depends on your network.

You can connect an active call and a call on hold. You are disconnected when the transfer is complete. During a call press the Pilot Key – , select Transfer and confirm.



## **In-call symbols**

During calls, you have the following symbols:

	<b>Mute</b>
	<b>Call underway</b>
	<b>Active call placed on hold</b>
	<b>Incoming call</b>
	<b>Outgoing call</b>





## **Radio wave safety**


Your cellular phone is a radio transmitter/receiver. When it is switched on, it transmits and receives radio waves in the frequency range of 880MHz to 960MHz and 1710MHz to 1885MHz. The network controls the power at which the phone transmits. This varies between 0.02 watt and  $\times$  watts.

Public concern has been focused for some time on the possible health hazards for users of cellular phones. The current research on radio wave technology, has been reviewed and safety standards have been drawn up to ensure the protection from exposure to radio wave energy. Your cellular phone complies with all safety standards that are defined for it.

The CE mark affixed to your cellular phone means that it is compliant with the European directive on electromagnetic compatibility 89/336/EEC and the low voltage directive 73/23/EEC.

 
## **Your phone and its environment**

Inadequately protected or sensitive electronic equipment may be affected by radio energy. This interference can lead to accidents. Do not hesitate to ask whether or not your phone can affect surrounding equipment.

 **To avoid damaging your phone, it must not come in contact with sand or high levels of dust.**

## **Efficient use of your phone**

Using your phone in the most efficient manner will improve the performance of your phone, reduce radio energy emission (see "Radio wave safety" on page 57), and reduce battery consumption.

- For your own safety as well as for the optimal operation of the phone, it is advisable to use it only in the normal operating position: place the antenna up over your shoulder while holding the earpiece to your ear.
- For best performance, avoid touching the antenna while a call is in progress.
- Do not use your phone with a damaged antenna. If you touch a damaged antenna, you may suffer a minor skin burn. Have a damaged antenna replaced by a qualified technician. Make sure it is replaced with a genuine manufacturer's replacement part.
- Avoid low reception areas (in a tunnel or between tall buildings for example). In low reception areas the  symbol on the phone display shows less than the maximum of 4 bars. If possible, move to a different location.
- You should use only your phone manufacturer's accessories. The use of any other accessories makes all guarantees null and void. Your phone manufacturer will not be held liable for any damage resulting from the use of accessories, other than your phone manufacturer's accessories.
- Do not use battery chargers other than those specified in the manufacturer's catalogue. The use of another charger may be dangerous and will invalidate any type approval given to the phone.
- Under no circumstances should the removal plug section of the travel charger be connected to a main supply without the transformer attached. This applies to the travel charger bought as an accessory.



## **Battery safety**

- Use only batteries specified in your phone manufacturer's catalogue. The use of any other accessories makes all guarantees null and void. Your phone manufacturer will not be held liable for any damage resulting from the use of accessories, other than your phone manufacturer's accessories, with your phone.
- Do not allow metal objects (such as keys in your pocket) to short circuit the battery contacts.
- Do not deform or open the battery.
- Do not immerse the battery in water or dispose of the battery in a fire.
- Keep your battery attached to the phone even when discharged to avoid losing your personal settings, and your back up battery for the clock in the phone will last longer.
- The battery should be recharged at or near room temperature. If the temperature is lower than 0°C (32° F) or higher than 45°C (113° F), the battery icon flashes which means that the battery cannot be recharged.

## **Safety and security**

### **Responsibility**

You are responsible for your phone. Careless handling of the phone can result in harm to others and damage to the phone itself. To avoid such problems, read and follow all the security instructions presented here and make them known to anyone borrowing your phone.

To prevent unauthorised use of your phone:

- Keep your phone in a safe place and keep it out of small children's reach.
- Avoid writing down your PIN code. Try to remember it instead.
- Switch off the phone if you are going to leave it unused for a long time.
- Use the Security menu (see page 42) to change the security code after purchasing the phone and to activate call restriction options.

### **Children**

Your cellular phone is not a toy. Keep your phone in a safe place and keep it out of small children's reach. Children could hurt themselves or others and they may damage the phone.

### **Respect of local laws and regulations**


Cellular phones can interfere with their environment. Consequently, safety rules and regulations have been created. You should enquire about local regulations when you acquire a cellular phone, and if you wish to use your phone while travelling, you should find out what regulations apply in the state or country you are visiting.

- ⓘ *Regulations concerning vehicles and aircrafts are particularly stringent.*

## Use while driving

Using your phone and driving at the same time can be dangerous as it lowers your concentration.

- Avoid using your phone while driving, except in an emergency.
- In all cases, you should give your full attention to driving. Pull off the road and park before using the phone whenever possible.
- If you are allowed to use your phone while driving a vehicle, install the hands-free car kit which is designed for that purpose.
- Respect the local regulations in countries where you drive and use your cellular phone.
- Check with your car manufacturer that the electronic equipment used in your car will not be affected by the radio energy emitted by your phone.

 The use of an alarm system to operate a vehicle's light or horn to indicate incoming phone calls is prohibited on public roads in some countries. Check the local regulations.

## Environmental care

Please remember to observe the local regulations regarding the disposal of your packaging materials, exhausted batteries and old phone and where possible promote their recycling.

Philips has marked the battery and packaging with standard symbols designed to promote the recycling and appropriate disposal of your eventual waste.

Battery :

- the crossed-out dustbin signifies that the battery should not be disposed of with general household waste.

## Packaging:



- the mobius loop symbol signifies the labelled packaging material is recyclable.



- the green point symbol signifies that a financial contribution has been made to the associated national packaging recovery and recycling system (e.g. EcoEmballage in France).

- The chasing arrows symbol on the plastic tray and plastic bag indicate that the materials are recyclable and also identifies the plastic material.





**Your phone will give you years of trouble-free service if you give it a little care and attention.**

**Look after it carefully, keep it clean and dry, and regularly discharge and charge the batteries.**

## **Looking after your phone**

Your phone is a highly sophisticated electronic device. Treat it with care.

- Store it in a clean, dust free place. Its moving parts can be damaged by dust.
- Keep it out of hot areas. High temperatures can shorten the life of electronic components, or batteries, and warp or melt certain plastics.
- Do not try to open the phone. If it is not working properly, call the Helpline.
- Use only the recommended battery chargers.
- Only use the manufacturer's genuine accessories, batteries and chargers.
- Treat the phone gently and avoid dropping, knocking or shaking it.
- Keep the phone and accessories out of the reach of small children.
- Keep the phone dry and do not use harsh chemicals (such as solvents or detergents) to clean it. To clean the phone, wipe it with a soft cloth slightly dampened with a mild soap-and-water solution.
- In order to save battery capacity you shouldn't wait for an flat battery capacity to charge it again.
- If your mobile is damp, switch it off, remove the battery (see page 14) and let them dry during 24hrs before using it again.

## **Efficient use of your phone**









Your phone has been developed to provide you with outstanding battery performance, from 120 up to 300 minutes of talk time and approximately 300 hours of standby time with the Standard 670mAh battery.

Placing and receiving calls consumes the same amount of battery energy. However, the mobile consumes less energy in the idle screen when kept in the same place. When in idle screen and while you are moving, your phone consumes energy to transmit updated location information to the network. Setting the backlight for a shorter period of time as well as efficiently navigating (or avoiding unnecessary navigating) in the menus will also help to save the battery's energy for longer phoning and stand-by performances.



Fixed bars indicate an approximate level of usable energy already charged in the battery. The remaining bars that are not fully charged continue scrolling during the charge process.



# Troubleshooting




Problem		Solution
The display shows <b>BLOCKED</b> when you switch on.		Somebody tried to use your phone but didn't know the PIN code nor the <b>unlocking code (PUK)</b> . Contact your service provider.
The <b>Y</b> and <b>☰</b> symbols are not displayed.		The <b>network connection</b> is lost. Either you are in a <b>radio shadow</b> (in a tunnel or between tall buildings) or you are outside the <b>network coverage area</b> . Try from another place or contact your network operator for assistance or information about the network.
The display doesn't respond (or responds slowly) to key presses.		The display responds more slowly at very low temperatures. This is normal and does not affect the operating of the phone. Take the phone to a warmer place and try again.
Your phone does not go to idle screen.		<ul style="list-style-type: none"><li>• Either press and hold <b>Ⓞ</b>.</li><li>• Or switch off the phone, check that the <b>SIM card</b> and the battery are installed correctly, and switch it on again.</li></ul>
When charging your mobile phone, the battery icon is empty and flashing.		When your battery is too low or when the temperature is out of the range (0 to 45°C), the battery cannot be charged. Move your phone to a place where the temperature is in the range and wait a few minutes before re-charging. Clean up gently the contacts with a soft cloth.
Flashing of the backlight and the battery fixed icon. A continuous alert beep is emitted and the message <b>Accessory not compatible. Please unplug</b> is displayed on the screen.		Unplug the charger and use a <b>Philips Authentic Accessory</b> .
After switching on your phone, it displays permanently blocked.		Your phone is configured to work only with your service provider's SIM card. Please contact your service provider to get further informations.



Problem		Solution
Your phone does not work well in your car.	▶	A car contains some metallic parts that absorb electromagnetic waves which can affect the phone's performance. A car kit is available to enable you to phone without handling the handset. It is strongly advised, however, to check with local authorities if you are allowed to phone while driving.
Difference between a long press and a short press on numeric keypad.	▶	A short press displays the number written on the key. A long press (at least one second) could either activate a Hotkey (See Hotkeys page 46) or a special character (such as + for a long press on the  key).
The time and the date are reset.	▶	Your mobile phone contains a small battery called the « back up battery » which is charged by your main battery. If you unplug the main battery, the back-up battery can supply the clock with enough energy for approximately 7 hours, if it is fully charged. To set time and date, see page 44.
Your phone does not display the phone number of incoming calls.	▶	This feature is network dependent. The network, therefore, may not send the caller's number to your mobile and the phone will display Call 1. Please note that this feature is network or subscription dependent. Please contact your operator to get further information.
When attempting to use a feature in the menu, the mobile displays not allowed.	▶	Many features are network dependent. They are only available, therefore, if the network or your subscription supports them. Please contact your subscription provider for more information.
When trying to send a message.	▶	Some networks do not allow message exchanges with other networks. Please contact your subscription provider for more information.
Your phone does not switch on.	▶	Remove the battery (see page 14). Check that both the contacts of the phone and those of the battery are not damaged. Replug the battery, making sure that it is fitted securely (see page 5). Charge the mobile until the battery icon has stopped flashing. Then unplug from the charger and try to switch the mobile on.





Problem		Solution
You are uncertain that you are properly receiving calls on your mobile.	▶	<p>Make sure that none of the features « conditional call forward » or « unconditional call forward » as described on page 48 is activated if you wish to receive your calls. This network and subscription dependent feature may display the following icons in « unconditional call forward » mode:</p> <ul style="list-style-type: none"> <li> Call forward unconditional to number,</li> <li> Call forward unconditional to voice mailbox.</li> </ul>
The display shows SIM FAILURE.	▶	Your SIM card may be damaged. Please contact your network operator.
The display shows IMSI FAILURE.	▶	This problem is related to your subscription. Please contact your network operator.
The display shows insert SIM card.	▶	If the problem remains, your SIM card might be damaged. Please contact your network operator.





**AUTHENTIC  
ACCESSORIES**

**"When Performance Counts ...  
Philips Authentic Accessories are Designed to Maximize the  
Performance of Your Philips Phone."**

## Batteries

### Battery:

- A light weight power pack-easy to insert and go.
- Powerful NiMH battery delivers from 120 to 300 mins of talk time depending on the network and the battery type.
- The standby time is from 5 to 12 days whatever the mode you are.

BHK 207/P  
9911 240 31045



### Note

*Approximate times depending upon battery type and usage.*

## Chargers

### Cigarette Lighter Adapter 12-24V

- Charges the battery while you use the phone.
- Plugs into virtually any vehicle power outlet.

CKLR 12/P  
9911 240 34118



### Fast Travel Charger 90-240V

- Charges your battery wherever there is an AC outlet.
- Small enough to carry in a briefcase or handbag.
- Charging time between 75 and 120 minutes.

 
Europe :  
ACSR 12/P  
9911 240 30042

Taiwan/USA :  
ACTR 12/P  
9911 240 30043

UK :  
ACUB 12/P  
9911 240 30044

Australia :  
ACAR 12/P  
9911 240 30045

China :  
ACCR 12/P  
9911 240 30054

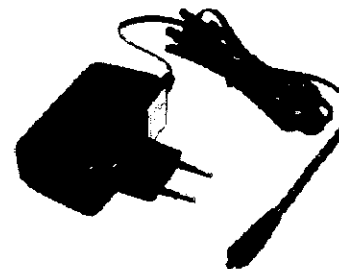

---

## Hands-free kit

---

 
### Compact Car Kit

CKSK 20/P  
9911 241 34306

- This very compact hands free solution offers incredibly high audio quality at a good price, while also charging your mobile .

**Note**

*In certain countries, telephoning while driving is prohibited. For safe and trouble free installation, we recommend that specialized technicians install Hands-Free Car Kits.*

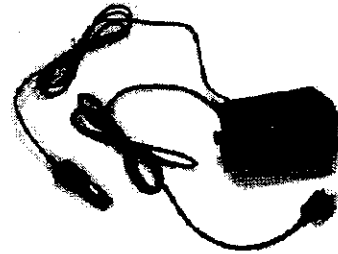

### Hands-Free Headset

HSSR 12/P  
9911 241 30017

- Use your phone under almost any condition with this hands-free very mobile solution.
- You can talk hands-free whether you're at home, in the office or on the move.



### Deluxe Hands-Free Headset

HSSX 15/P  
9911 241 30018

- Provides the same features as the Hands-Free Headset.
- Additional In line answer button offers you a simplified alternative to searching for the phone keypad : you answer an incoming call just by pressing the button and in idle mode a long press on it activates the voice dial.

---

## Carry pouch with belt clip

---

- Protects your phone from nicks and scratches.
- Click-Lock belt clip makes your phone secure and easy to carry.

LBBK 20/P  
9911 240 36027

---

## Data Connect

---

- When connected to a Philips mobile phone, a simple data cable allows you to send faxes, SMS messages and access data communications facilities on mobile and traditional fixed line phone networks.

DCAK 20/P  
9911 240 39214



To maximize the performance of your phone and not void the warranty, always purchase Philips Authentic Accessories that are specially designed for use with your phone. Philips Consumer Communications cannot be held liable for any damage due to use with non authorised accessories.

Ask for Philips Authentic Accessories where you purchased your Philips Phone.





# Limited Product Warranty



**BEFORE REQUESTING WARRANTY SERVICE**, please make sure you have consulted your owner's guide or the Philips Consumer Communications web site at <http://www.pcc.philips.com> for additional information.

- 1 **This limited warranty is granted to you in supplement to any warranty you might be entitled to from your carrier/dealer and/or under the laws of the country where you purchased the product, and is not intended to affect your statutory rights. Such entitlements may include rights that are more favorable to you than the warranty granted hereunder. This warranty shall not be construed as being cumulative to these entitlements.**
- 2 **Unless otherwise required by mandatory national law, the following Limited Warranty applies for Philips Consumer Communications products ("Product").**
- 3 **For a period of one (1) year from the date of purchase by you, Philips warrants that the Product, excluding Software and batteries, is guaranteed to operate, as put forth in the documentation enclosed with the Product, against defects due to faulty workmanship or materials.**
- 4 **For a period of ninety (90) days from the date of purchase by you, Philips warrants that the Software in the Product ROM shall function in substantial conformance with the performance requirements set forth in the end-user documentation under normal use.**
- 5 **Service under this Limited Warranty is provided only upon presentation of reasonable evidence (such as the original invoice or purchase receipt, indicating the date of purchase, carrier/dealer's name, and model and production number of the Product) that the date of the claim is within the Warranty period.**
- 6 **This Limited Warranty is provided only to the original purchaser of the Product. It is not transferable to any other person or entity.**
- 7 **Service under this Limited Warranty is only provided in countries where the Product is officially distributed by Philips, and is subject to Philips then current procedures for Product return, repair and/or replacement as existing in the country where you claim under warranty. For more information about these procedures, please contact your carrier/dealer or the local Philips organization. In countries where Philips does not officially distribute the Product, the local Philips service organization may be able to facilitate such service, although there may be substantial delays.**
- 8 **Repaired or replaced Product will be covered by this limited warranty for the greater of either (a) 30 days from the date the repaired or replacement Product is shipped back to the Consumer or (b) the time remaining under the original limited warranty.**
- 9 **If you deliver the Product for warranty repair or replacement and Philips repairs or replaces the Product, you agree that you will pay for the repair or replacement if Philips determines that the Product was not covered by this Limited Warranty.**
- 10 **Your sole and exclusive remedy in the event of a breach of this Limited Warranty shall be, at Philip's option, the replacement of the Product with a remanufactured or refurbished Product.**
- 11 **Unless modified by a written agreement signed by Philips, no person is authorized to modify this Limited Warranty or to make additional warranties. No action for any breach of this Limited Warranty may be commenced more than one (1) year following the expiration of the warranty period for the Product.**
- 12 **This Limited Warranty does not apply:**
  - a) To the product that has reception or operations problems caused by signal conditions, network reliability, or cable/antenna systems;
  - b) To the finish or cosmetic appearance of the Product;
  - c) If failure has resulted from accident, abuse, misuse or misapplication, or neglect (Without limiting the foregoing, battery leakage, a bent unit, a broken display or any cracks in the display will be presumed to have resulted from misuse or abuse);
  - d) If the Product was exposed to humidity or extreme temperature, or if it was damaged by liquids;
  - e) If repairs or Product modifications and alterations have been made by persons or organizations not authorized by Philips;



- f) If the defect is due to operation in, or Product modification for, any country other than the country for which it was designed, manufactured, approved and/or authorized;
- g) If information on the type label has been altered, deleted, removed or made illegible;
- h) If the purchase receipt has been altered or made illegible in any way;
- i) If the Product has been used in conjunction with accessories not approved by Philips for use with the Product;
- j) If fraudulent or negligent information has been provided to the help desk.

### **Warranty Disclaimer/Limitation of Liability**

THE FOREGOING LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES. EXCEPT AS SPECIFICALLY SET FORTH ABOVE, PHILIPS DISCLAIMS ALL WARRANTIES, INCLUDING WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

PHILIPS SHALL NOT BE LIABLE FOR ANY LOSS OF USE, DAMAGES RESULTING FROM MATHEMATICAL INACCURACY, LOSS OF STORED DATA, OR INDIRECT OR CONSEQUENTIAL DAMAGES ARISING OUT OF, OR IN CONNECTION WITH, THE USE OF, OR INABILITY TO USE, THE PRODUCT OR ANY SOFTWARE, EVEN IF PHILIPS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT SHALL PHILIPS' LIABILITY EXCEED THE COST OF THE PRODUCT, WHETHER YOUR CLAIM IS BASED ON CONTRACT, TORT, WARRANTY, OR ANY OTHER LEGAL THEORY. SOME STATES OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF IMPLIED WARRANTIES, OR LIMITATION OF IMPLIED WARRANTIES, OR LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. IF IMPLIED WARRANTIES MAY NOT BE DISCLAIMED UNDER APPLICABLE LAW, THEN ANY SUCH IMPLIED WARRANTIES ARE LIMITED IN DURATION TO NINETY (90) CALENDAR DAYS AFTER THE DATE OF YOUR PURCHASE OF THE PRODUCT.

**U.S. Government. Restricted Rights.** Pursuant to DFARS 227.7202 and FAR 12.212, the Software is subject to, and restricted by, this Agreement. Use, duplication, or disclosure by the United States Government is governed solely by the terms and conditions contained herein.

**Law and severability:** Whenever possible, each provision of this Limited Warranty shall be interpreted in such manner as to be effective and valid under the law of the country where the Product was purchased. In the event that any provision of this Limited Warranty shall finally be determined to be unlawful or unenforceable, such provision shall be deemed severed from this Warranty, but every other provision of this Warranty shall remain in full force and effect, and in substitution for any such provision held unlawful or unenforceable, there shall be substituted a provision of similar import reflecting the original intent of the Warranty to the extent permissible under applicable law.

As regards Products purchased within the U.S.A., this Limited Warranty shall be governed and construed under the laws of the State of California, except those portions pertaining to conflicts of law. You consent to the exclusive jurisdiction of the state and federal courts sitting in the State of California.



**A**

activating network services	47
advanced menu	27
alarm clock	12
animation	42
answering a call	19
answering a second call	54
answering a third call	54, 55
antenna	11
any key answer	49
auto redial option	49
auto save option	33
autonomy quick setting	50

**B**

backlight setting	42
battery	64
charging	15
fitting	5
low alert	41
removing	14
safety	58
blasting areas	60
broadcast reception option	33

**C**

C key	6, 11
calculator	38
call barring	43
call counters	36
call forwarding	48
call restriction	43
call waiting	49
caller identification option	28, 49
calling	
from the Call list	34
from the keypad	18
from the Names list	9
car quick setting	51
carry pouch	65
changing a Names list entry	30
character entry	11, 24
character table	17
charge rate	36
cigarette lighter adapter	64



compact car kit	65
<b>D</b>	
date setting	6, 45
day view	35
deleting a message	32
deleting Names list entries	30
deluxe headset	65
dialling restrictions (call restriction)	43
diverting calls (call forward)	48
driving a vehicle	59
DTMF tones	10, 52
<b>E</b>	
earpiece	11
earpiece volume	21
emergency call	16
emotion icons	31
ending a call	19
entering characters	11, 24
entering phone numbers	6
extra options menu	36
<b>F</b>	
FDN	10
flash dialling	29
forwarding calls (call forward)	48
<b>G</b>	
game	37
<b>H</b>	
headset quick setting	51
holding a call	53
home network	10
hotkeys	
functions	46
programming	46
how to enter a text or a number	17, 24, 25
<b>I</b>	
icons	12, 31
idle screen	17
in-call options	21, 56
in-call symbols	56
incoming call	19
international dialling	18
<b>K</b>	
key tones setting	41
keypad description	11
keypad lock	22
keypad unlock	23
<b>L</b>	
language setting	45





last call info	27, 37
leather pouch	65
local laws and regulations	58
locking the keypad	22
low battery alert	27, 41
lower case	17

## **M**

mailbox number	33, 52
maintenance	60
making a call	18
making a second call	53
medical equipment	57
meeting quick setting	50
menu navigation	27
menu type	
advanced	46
simple	46
messages (SMS)	
add icon	31
auto save	33
cell broadcast	33
centre	32
delivery report	33
forward	32
reading	32
replying	30
save	31
sending	30
signature	32
standard	30
storing	33
validity period	33
writing	30
microphone	11
missed call	18
mobile number (own number)	30
modifying the PIN code	42
modifying the PIN2 code	42
month view	35
muting a call	21

## **N**

### Names list

add a flash dial	29
adding an entry (New)	29
calling from	9
changing an entry	30
consulting	29
copying from the call list	34



deleting an entry	30
finding an entry	30
sending a SMS from	29
network menu	47
network registration	47
New Name	29
notepad	22
<b>O</b>	
on/off button	11
organiser	
adding events	34
day	35
deleting an entry	35
events	34
modifying events	35
month	35
week	35
outdoors quick setting	50
own number	24
<b>P</b>	
pause characters	52
personal quick setting	50
personalise your phone (settings)	39
Pilot Key	7
PIN code	5
PIN code modifying	42
PIN code protection option	44
PIN2 code modifying	42
preferred networks list	47
programming Hotkeys	46
public names option	43
<b>Q</b>	
quick settings	
autonomy	50
car	51
headset	51
meeting	50
outdoors	50
personal	50
silence	50
<b>R</b>	
radio wave safety	57
reading your messages	32
redial from Call list	20
redialling last number	20
reminder	35
repeat option	35
reply from Call list	20



replying to a message	32
Ringer	23
ringer type setting	40
ringer volume setting	40
roaming	10

## **S**

safety information	58
screen animation	42
security in general	58
security menu	42
semitones	40
sending a message	30
settings menu	39
shortcuts	
to the Names list	29
silence quick setting	50
silent ringer	23
SMS	10, 30
SOS call	30
storing a message	33
storing a name	29
storing a number	29
storing a number from the Call list	34
switching on/off	5
symbols	12

## **T**

T9TM Text Input	24
table of characters	17
table of emotion icons	31
text entry	17, 24
time and date	6, 44
time setting	39, 45
timers	36
to do	34
troubleshooting	61

## **U**

unlocking the keypad	23
unmuting a call	22
upper case	17

## **V**

voice dialling	21
voice mail messages	33
volume control	
earpiece	21
ringer	40
volume keys	11

## **W**

wait characters	52
-----------------	----



week view	35
writing a message	24, 30
<b>Z</b>	
zoom	39

