

IMPORTANT SAFETY PRECAUTIONS

* **WARNING:** To avoid electrical shock, be sure that electricity has been turned off at the circuit breaker or fuse box before wiring.

* All wiring must be in accordance with the National Electrical Code and local electrical codes. A qualified electrician should perform electrical installation.

* **ONLY** the wall remote control unit should change the fan speeds. Do not use the pull chain to change fan speeds after installation, as damage could result to your remote control or ceiling fan.

INSTALLATION AND WIRING

WARNING: To avoid electrical shock, be sure that electricity has been turned off at the circuit breaker or fuse box before wiring.

IMPORTANT: Follow these steps to insure proper installation and operation installing Receiver

1. Install your ceiling fan by the wiring diagram provided with the fan without the receiver in place.

2. Turn on electrical power at the circuit breaker or fuse box.

3. Turn wall switch "ON".



FIG. 1

4. Set your ceiling fan to HIGH speed with its pull chain control. **DO NOT** adjust the ceiling fan pull chain after this step.

5. Turn on light kit (if present).

6. Turn wall switch "OFF".

7. Turn off electrical power at the circuit breaker or fuse box.

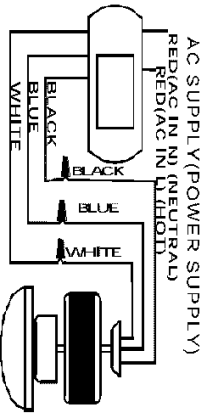
Connecting the Receiver

FIG. 2

1. Disconnect the wires from the ceiling to the fan.

2. Install the receiver to the ceiling fan according to your mounting type (Figure 1). Be sure the antenna is positioned so it is exposed when canopy is attached. Do not modify the antenna wire as control performance may be reduced.

3. Use the two larger wire nuts supplied to connect the receiver and house electric supply wiring; then use the three small wire nuts supplied to connect the receiver and ceiling fan wiring (Figure 2).

Connect To

Green Ground Wire	Grounded Supply
Red Receiver Wire (AC in L) Hot	Black Supply Wire
Red Receiver Wire (AC in N) Neutral	White Supply Wire
White Receiver Wire (TO MOTOR N)	White Fan Wire
Black Receiver Wire (TO MOTOR L)	Black Fan Wire
Blue Receiver Wire	Blue Fan/Light

NOTE: If any fan or ceiling supply wire colors are different, contact a licensed electrician.

4. Push all connected wires into junction box.

5. Complete ceiling fan installation and assembly according to its provided instructions.

REMOTE TRANSMITTER OPERATION:

HIGH, MED, LOW, STOP to set the fan speeds.

Light: fast press, to set the light power ON/OFF; Press and hold to set the light power rating.

If any change of the fan speeds or light power state. The transmitter will echo a short beep.

Caution: If the low battery icon on the led is displayed. Please change battery as soon as possible.

 
Change the security code.

1. If the remote controller has interference by another appliance or interferes to another appliance, you may change the security to avoid it.

2. Change the Dip switch to another code. You can find the DIP in the transmitter side when you opening the battery cover.

4. Find a small slide switch that on the side of receiver. Slide it to the other side. The receiver will go to the learning mode.

6. If the receiver is in the learning mode. (A long beeps at beginning, after



it a short beep in each second.) Press any key of the transmitter. If the receiver receiver an effective code. It will echo a series of short beeps. After it you can use the new code.

120V/60Hz FAN:85W/Max LIGH T:300W/Max