

PATTON®

REMOTE CONTROL HIGH VELOCITY AIR CIRCULATOR INSTRUCTIONS:

READ AND SAVE THESE IMPORTANT INSTRUCTIONS

Your High Velocity Air Circulator has been designed and manufactured using the latest in technology. With normal care and use it should provide many years of satisfactory performance. As with all small appliances, it is recommended that you note the following:

- ALWAYS unplug unit for cleaning.
- ALWAYS unplug unit when not in use.
- ALWAYS unplug when moving blower from one location to the next.
- DO NOT use an extension cord. Plug the unit directly into an electrical outlet of the correct voltage.
- DO NOT plug foreign objects through guard into the blade.
- DO NOT allow to become wet or damp.
- WARNING: To reduce the risk of fire or electric shock, DO NOT use this fan with any solid state speed control device.

Uniquely engineered

PATTON AIR CIRCULATORS

provide superior safety and performance

High Velocity Commercial Grade Motors

High velocity commercial grade motors with self-aligning bearings for long life and durability. Precision crafted heavy duty fan blades.

Precision Balanced Aluminum Blades

Highly durable, performance and safety.

All Metal Construction

Frame, cage and fan blades.

10 Year Limited Warranty*

The highest motor to propeller warranty in the industry.

Patton Air Circulators, Inc.

Engineering high quality
products for over 50 years



OPERATING INSTRUCTIONS & IMPORTANT INFORMATION

Plug cord into any standard 120V AC outlet.

Our high quality fan features a radio frequency remote control, which allows you to operate the fan from distances up to 30 feet away from your fan in any direction.

NOTE - Batteries not included with this remote

To turn the fan on press the Power/Speed button on the remote control or on the back of the fan itself.

Our fan has 3 speed settings HIGH (III), MED (II) and LOW (I). The very first time you turn on your fan from the back, it will start on the High setting. The buttons on the remote and the Power/Speed button located on the back of the fan will turn the fan on, off and cycle through the speeds. As long as the fan remains plugged into a power source, the control board will remember the last speed setting set before it was turned off and will automatically start from that same speed when turned back on. If unplugged, the fan will start on the High speed setting when turned on again.

To turn the fan off, press and hold the Power/Speed button, which is located on the rear of the fan. By pressing and holding this button for 3 seconds the fan will shut off or simply press the Off (O) button on the remote.

Our air circulators can be used alone or in conjunction with an air conditioning unit to circulate the cooled air or to force it into other rooms. During summer days, the portable Air Circulator can be used as a hassock fan to pick up cool air and circulate it through the entire room.

It is normal for the motor to feel warm to the touch during operation. The motor is thermally protected and will automatically shut off should it overheat. If this happens immediately disconnect the fan from the power outlet.

Our motor bearings are permanently lubricated at the factory and do not require any additional lubrication.

CLEANING INSTRUCTIONS

To remove the front grill, pull each of the clips around the circumference of the grill "out" approximately 90°.

Then gently pull front grill up to remove.

Use a normal household cleaner to clean the blades and grills, being careful not to get the motor or cord wet.

FAN SERVICE INSTRUCTIONS

Do NOT attempt to repair or adjust any electrical or mechanical functions on this unit.

If you need to exchange the unit, please return it in its original carton, with a sales receipt, to the store where you purchased it.

If you have any other questions or comments visit our website at www.pattonproducts.com

or write to our Consumer Service Department address below:

The Holmes Group, Inc.
Consumer Service Department
P.O. Box 769
Millford, MA 01757-0769

TEN (10) YEAR LIMITED WARRANTY SAVE THIS WARRANTY INFORMATION

- A. The quality controls used in the manufacture of this PATTON product are to ensure your satisfaction.
- B. The Warranty Registration Card enclosed with this product must be completed and returned within 10 days of purchase for your Warranty to be effective. This Warranty applies only to the original purchase of this product.
- C. This Warranty applies ONLY to repair or replacement of any supplied or manufactured parts of this product that, upon inspection by PATTON authorized personnel, proves to have failed in normal use due to defects in material or workmanship. PATTON will determine whether to repair or replace the unit. This Warranty does not apply to installation expenses.
- D. Operating this unit under conditions other than those recommended or at voltages other than the voltage indicated on the unit, or attempting to service or modify the unit, will render this WARRANTY VOID.
- E. Unless otherwise proscribed by law, PATTON shall not be liable for any personal injury, property or any incidental or consequential damages of any kind (including water damage) resulting from malfunctions, defects, misuse, improper installation or alteration of this product.
- F. All parts of this PATTON product, excluding the remote control beyond 90 days are guaranteed for a period of 10 years as follows:
 1. Within the first 30 days from date of purchase, the store from which you purchased your PATTON product should replace this product if it is defective in material or workmanship (provided the store has in-stock replacement.)
 2. Within the first one hundred and twenty months from date of purchase, subject to the conditions in paragraph H, PATTON will repair or replace the product if it is defective in material or workmanship providing it is returned to PATTON, freight prepaid, with PROOF OF PURCHASE date, together with \$12.50 for return shipping and handling charges.
 3. To replace or order an additional remote control, please include a check for \$10.00 per remote which includes shipping and handling and mail to PATTON at the address noted below.
- G. If you have any problem with this product, please write to our Consumer Service Dept.
- H. **IMPORTANT RETURN INSTRUCTIONS** Your warranty depends on your following these instructions if you are returning the unit more than 30 days after the date of purchase:
 1. Carefully pack the item in its original carton or other suitable box to avoid damage in shipping.
 2. Before packing your unit for return; be sure to enclose:
 - a) your name, full address with zip code and telephone number,
 - b) a dated sales receipt or PROOF OF PURCHASE,
 - c) your \$12.50 check for return shipping and handling, and
 - d) the model number of the unit and the problem you are having. (Enclose in an envelope and tape directly to the unit before the box is sealed.)
 3. PATTON recommends you ship the package UPS ground service for tracking purposes.
 4. All shipping charges must be prepaid by you (as noted in paragraph F).
 5. Ship to: PATTON
THE HOLMES GROUP, INC.
CONSUMER RETURNS
32B SPUR DRIVE
EL PASO, TX 79906
SHIPPING AND HANDLING CHARGES: \$12.50

This warranty gives you specific legal rights, and you may have other rights which vary from state to state. The provisions of this warranty are in addition to, and not a modification of, or subtraction from, the statutory warranties and other rights and remedies contained in any applicable legislation. To the extent that any provision of this warranty is inconsistent with any applicable law, such provision shall be deemed voided or amended, as necessary, to comply with such law.