



DOGDirector700
remote e-collar trainer
With SmartLED
Owner's Manual



IMPORTANT NOTE:

Please read this owner's manual in its entirety before operating this unit. Should you have any questions about our collars or their operation please contact our Customer Service department (see back page for address, phone number, and email information).

NOTICE!

According to how you use your transmitter, the transmitting range might be much different.

You will have more range if you use your transmitter apart from your body as follows:



Maximum

Typical Range

Minimum Range

TABLE OF CONTENTS

• Table of Contents.....	3
• Introduction	4
• Package Contents.....	5
• Model Features	5
• Transmitter Parts & Functions.....	6-7
• Installing Transmitter 9V Battery	8
• Training MODES & Button Functions.....	9
• Collar Unit Parts & Functions	10
• SmartLED	12
• Charging the Batteries	13
• Turning ON and OFF	14
• Programming JUMP & Testing Unit	15
• Programming the Collar	16
• Properly Fitting the Collar.....	17
• Setting the Intensity Level	18
• Maintenance	19
• Important Safety Notes	20
• Warranty	21
• FCC/IC/CE Compliance	22
• Contact Information.....	24

INTRODUCTION

Congratulations, and thank you for purchasing our **DOGDIRECTOR700** remote training collar.

The **DOGDIRECTOR700** features a 700 yard range made possible by our exclusive MAXX-Range 360 technology to ensure positive FM signal reception, no matter the terrain.

The **DOGDIRECTOR700** is fully waterproof and offers our quick charge Li-Poly batteries with our SmartLED light that lets you know when charging is complete and how much charge is left during use.

NOTE: 9v battery needed for remote, with optional rechargeable battery pack sold separately.

The E-Stim feature (with 10 levels of Nick and Continuous stimulation) easily adjusts at your fingertips and always ensures the proper setting for your dog's unique personality, and our "Jump" feature is user programmable to any e-stim level.

Alternative training selections feature our Vibration Assist and a beeping tone for no e-stim alternative training options.

The new **DOGDIRECTOR700** is the result of over 30 years of experience researching, producing, and field testing the best E-collars in the business.

DT Systems...Dog Training Freedom at your Fingertips!


PACKAGE CONTENTS

- Transmitter with Compact Antenna and Lanyard
(9V battery not included)
- Collar Receiver with Rechargeable Li-Poly Battery (already installed)
- Battery Charger (for collar battery)
- Test Light
- Owner's and Training Manuals

MODEL FEATURES

- Small, Compact, Lightweight design
- 700 Yard range MAXX-Range™ 360
- 10 levels of E-Stim
- Nick Stimulation (1/2 Second e-Stim)
- Continuous Stimulation (up to 8 Second e-Stim)
- Vibration Assist™ Technology
- Beeping Training Tone
- “Jump” feature-User programmable e-stim option
- 100% Waterproof Collar & Remote
- Quick Charge rechargeable Li POLY collar battery
- SmartLED™ Battery Charge Status indicator lights
- Waterproof Transmitter (9V battery not included)
- Magnetic ON/OFF activation
- Collar adjusts from 7" to 22" in ½" increments
- Expandable to 3-dog system
- DT Systems 1-year Warranty

TRANSMITTER PARTS & FUNCTIONS

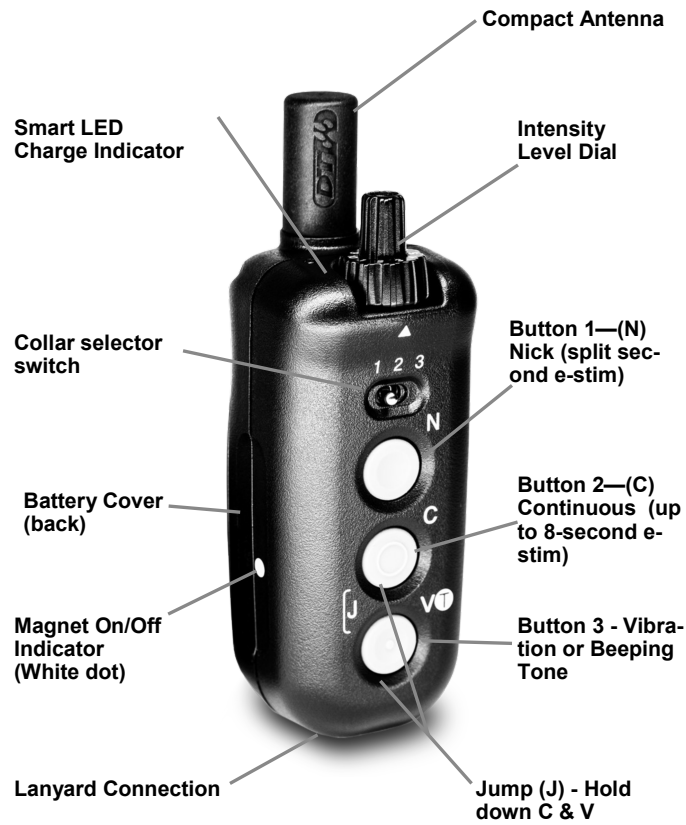

Transmitter Specifications

Unit	Dimensions	Weight
Transmitter	4 3/4" x 2" x 1 3/8"	2.5 oz. (without battery)

TRANSMITTER PARTS & FUNCTIONS

Compact Transmitter Antenna - Always check that the Antenna is securely fastened to the transmitter. ***Hand tighten only. Use caution when attaching Antenna as over-tightening may cause damage to the Antenna or antenna mount.***

LED Indicator Light - The LED lights up while pressing any of the Transmitter buttons. ***LED flashes rapidly after pressing buttons if battery is low.***



Intensity Selection Dial - The Intensity Selection Dial increases/decreases the e-stim level and can be set from levels 1-10. For tips on finding the best E-Stim level for your dog, (see *page 18*).



Collar Selector Dial - Switching between Collars can be controlled by toggling the Collar Selector Dial to the desired collar.

Vibrate/Tone Button - This button makes the collar emit an audible beeping tone or a Vibrating option. *See pg.9 for full instructions on Vibe/Tone selection.*

Nick (N) Stimulation Button - Pressing this button makes the collar emit a quick, split-second stimulation.

Continuous (C) Stimulation Button - Pressing this button emits a continuous stimulation while the button is being pressed (up to 8 seconds).

Jump (J) Button - Jump functions just like Continuous button but Jump can be programmed to any level from 1-10. Hold down C + V Button to activate.

Magnet Indicator - White dot on Transmitter indicates location of Collar Unit ON/OFF switch.

TRANSMITTER PARTS & FUNCTIONS

Lanyard Connection - Attachment point for lanyard.

Battery Cover (Back of Transmitter) - Covers battery and battery compartment. Held by 2 small Phillips screws. Make sure battery is inserted properly with +/- poles lined up with diagram. Do not over-tighten the screws or you may crack the plastic.

INSTALLING TRANSMITTER 9V BATTERY

The **DOGDirector700** transmitter uses a 9-volt battery (not included). We recommend using a Duracell or Energizer Lithium battery. **The Transmitter may not operate properly with a generic battery.** *Rechargeable battery may be purchased separately.*

Battery Installation Procedure

1. *Make sure the Collar Unit is not on the dog.*
2. Remove the two screws holding the Battery Cover with a small Phillips screwdriver to remove the cover.
3. Remove the depleted battery.
4. Insert the new battery in the proper direction, paying attention to diagram in the battery compartment.
5. Make sure the rubber seal is properly in place and replace the Battery Cover and screws. Properly tighten and seal for waterproofing. Do not over-tighten the screws as it may crack the plastic.



CAUTION - Remove battery with prolonged storage of unit.

TRAINING MODES & BUTTON FUNCTIONS

Nick MODE:
(Denoted by letter “N”)

Pressing makes the collar emit a split second e-stim based on current e-stim level selection (from 1-10)

Cont. Mode:
(Denoted by letter “C”)

Pressing makes the collar emit up to an 8 second e-stim based on current e-stim level selection (from 1-10) as long as button is held down.

“Jump” Mode:
(Denoted by letter “J”)
Hold down C & V buttons
NOTE: To program JUMP button, See P. 15

User can program this button for any e-stim level from 1-10 for immediate use independent of the current Nick and Cont e-stim levels.

VIBE/Tone Mode:
(Denoted by V/T)
User can use this button to program the collar to emit a beeping “Tone” or to Vibrate
NOTE: unit comes from the factory default prog. to Vibe

To select Vibrate or Tone :
1.) Turn Transmitter intensity dial to #1. (See FIG. 1)
2.) Press the V/T button 2 times quickly in succession holding the button down on the second press (for 3 sec.).
This changes the programming from the factory default Vibe—to Tone. (See FIG. 2)
4.) Repeat the above process to go back to Vibe.

NOTE: LED light on Remote will be Red for Vibration mode, and Green for Tone mode.



FIG. 1—Turn Dial to #1



FIG. 2 –Press V/T 2 times- Holding 3 Sec. on 2nd press