


RFID Reader

<Only for model with RFID Reader>

You can read the data RFID (Radio Frequency Identification) tags.

NOTE

- This sensor is typically used with specialized applications. For further information, ask the system administrator.
- It is necessary to equip the computer with the hand strap and the large corner guards. About the equipment, contact Panasonic Technical Support.

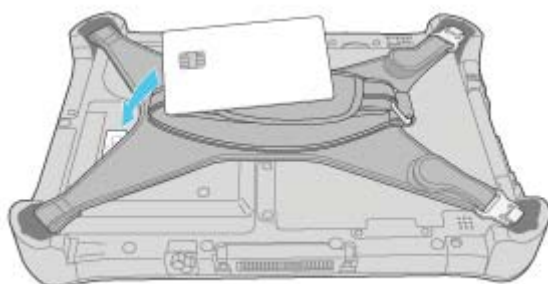

1. Align the RFID device with the (A) mark and wave the RFID device.
 - Continue operation by using the specialized applications.

NOTE

- Operation distance depends on RFID tag.