

User manual

DENON

Envaya

DSB-200

WIRELESS MUSIC SYSTEM

Owner's Manual

You can print more than one page of a PDF onto a single sheet of paper.



Contents

Preparation

Accessories	<u>4</u>
Features	<u>5</u>
High Sound Quality	<u>5</u>
Good Design	<u>5</u>
Simple Operation	<u>5</u>
Part names and functions	<u>6</u>
Opening the Stand	<u>8</u>
Charging	<u>9</u>
Charging this Unit.....	<u>9</u>
Using this unit's power supply to charge a smartphone.....	<u>12</u>
Turn the power on	<u>13</u>
Switching the power to standby	<u>13</u>

Connections

Bluetooth Connection	<u>14</u>
Pairing	<u>14</u>
Three Bluetooth Connection Methods.....	<u>14</u>
Case 1: Pairing with this unit for the first time.....	<u>15</u>
Case 2: Connecting to a Bluetooth device that has already been paired	<u>17</u>
Case 3: NFC connection to a Bluetooth device equipped with the NFC function	<u>18</u>
Simultaneously connecting Bluetooth devices (Multipoint function)	<u>19</u>

Playback

Adjusting the volume	<u>20</u>
Turning off the sound temporarily (muting).....	<u>20</u>
Listening to music using a wired connection	<u>21</u>



Troubleshooting

Contents	<u>22</u>
Tips.....	<u>23</u>
Troubleshooting	<u>24</u>
Restarting the unit	<u>27</u>

Appendix

Replacing the grill net	<u>28</u>
Explanation of Terms	<u>29</u>
Trademark information.....	<u>30</u>
Specifications	<u>31</u>
Index	<u>33</u>




Thank you for purchasing this Denon product. To ensure proper operation, please read this owner's manual carefully before using the product. After reading this manual, be sure to keep it for future reference.


Accessories

Check the following parts before use.


① Quick Start Guide

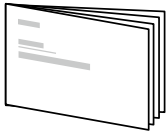

② Safety Instructions

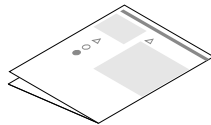


③ AC adapter

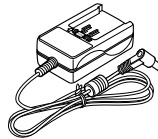


④ Replacement plug for AC adapter


For Europe

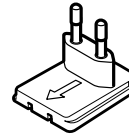


For U.K.

 

For North America/
Japan

 

⑤ Interchangeable nets
(3 colors)

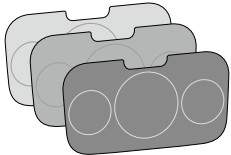

Features

High Sound Quality

- **Despite its compact size, this unit is equipped with two high sound quality full range speakers, and a passive radiator that utilizes double suspension to provide sound with a broad, overflowing presence and deep base tones.**
- **Compatible with the high sound quality aptX codec**
This unit is compatible with a wide range of codecs, including the high sound quality aptX, AAC and SBC. This unit automatically selects the optimum compatible codec for your smartphone or tablet so you can enjoy high-grade wireless sound.

Good Design


- **This unit is available in two colors. The white model features a high gloss finish that brings a touch of class to the room, and the black model features a soft feel finish that has a smooth, gentle texture.**
- **The speaker grill can be removed and the inside net changed between any of the four provided colors (orange, pink, blue or gray). This means you can color coordinate this unit with the decor in your room.**

Simple Operation

- **Smartphones that are equipped with the NFC function can be smoothly paired and connected with this unit simply by touching this unit with the smartphone.**
- **The power supply to this unit can be switched on by operating the smartphone or tablet. For example, you can switch the power supply to the unit on and listen to music straight after waking up and without getting out of bed, simply by operating your smartphone.**



Part names and functions

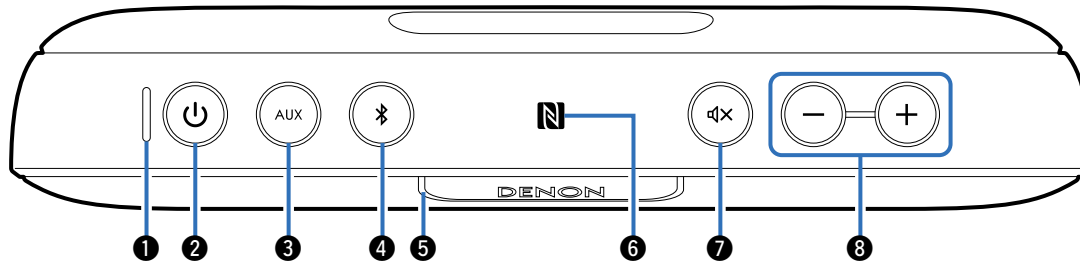

1 Battery Indicator (☞ [page 11](#))

2 Power operation button (⏻)

Turns the power supply to on/standby (☞ [page 13](#)).

3 AUX button

Switches input to a portable music player or other such devices connected by a cable.

4 Bluetooth button

Switches input to Bluetooth. Also, press this button when pairing with a device.

5 Illumination LED

This lights in the following way according to the power supply status.

- Power on (using the AC adapter): Lit
- Power on (using batteries): Lit

(turns off 5 seconds after the power is turned on.)

- Normal standby: Off
- Eco standby: Off
- Muted: Blinking

6 N mark

When pairing (registering) a Bluetooth device that is equipped with the NFC function, touch the Bluetooth device to this mark.


7 Mute button

Mutes the volume (☞ [page 20](#)).

8 Volume adjustment button (-,+)

Adjusts the volume.

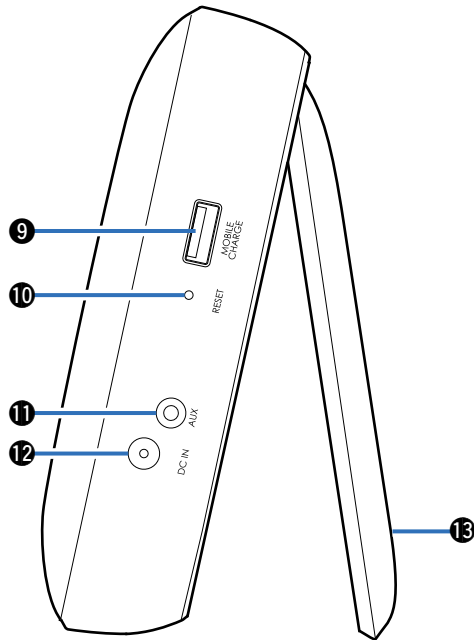

**9 Charging port**

Connect using a USB cable (sold separately) to recharge the smartphone or portable music player.

10 Reset button

Restarts this unit (see page 27).

11 AUX Input connector

Use a stereo mini cable (sold separately) to connect to the headphones jack of a portable music player, etc.

12 DC IN connector

Connect the supplied AC adapter.


13 Stand

Opening the Stand

While holding this unit with both hands, use one hand to squeeze the indentations in the stand to open it.

Note

- When standing this unit up for use, be sure to place it on a flat surface. Placing it on an unstable surface is dangerous because this unit may fall.

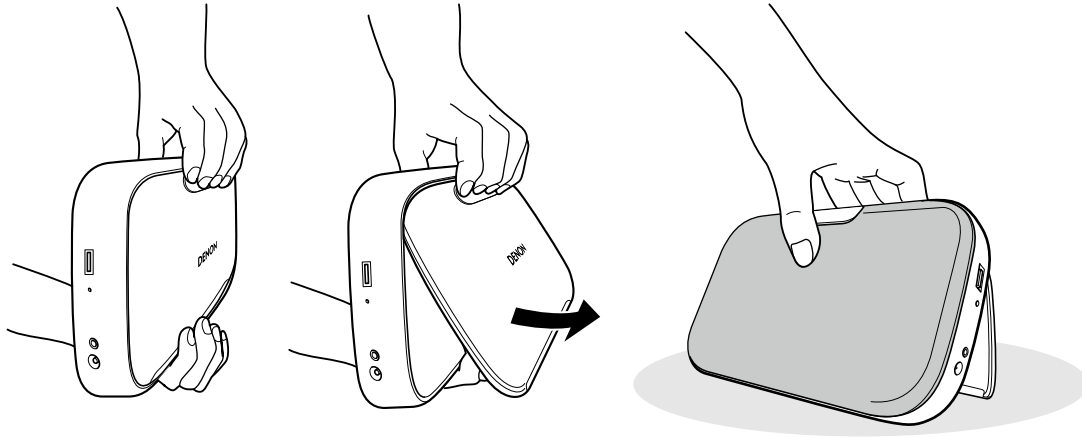

Charging

Charging this Unit

This unit can be charged for use. It can also be used with the supplied AC adapter connected to a wall socket. Before using for the first time, be sure to fully charge this unit.




- It takes approximately 0 hours to fully charge the battery when it is completely discharged.
- This unit can be used for approximately 0 hours when the battery is fully charged.

■ Replacing the AC Adapter Plug

Attach the adapter plug that fits the power socket in your region as shown in the figure.


[Attaching a replacement AC adapter plug]

Push in the direction of the arrow until a “click” sound is heard.

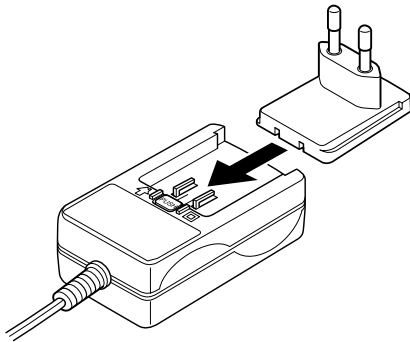

[Removing a replacement AC adapter plug]


While pressing the ① button, slide in the direction of the arrow to remove.

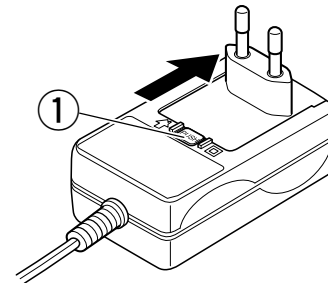

■ Connecting the AC Adapter

This unit automatically starts charging when the AC adapter is connected.

See “Remaining battery indicator” (☞ page 11) for details on the remaining battery indicator.

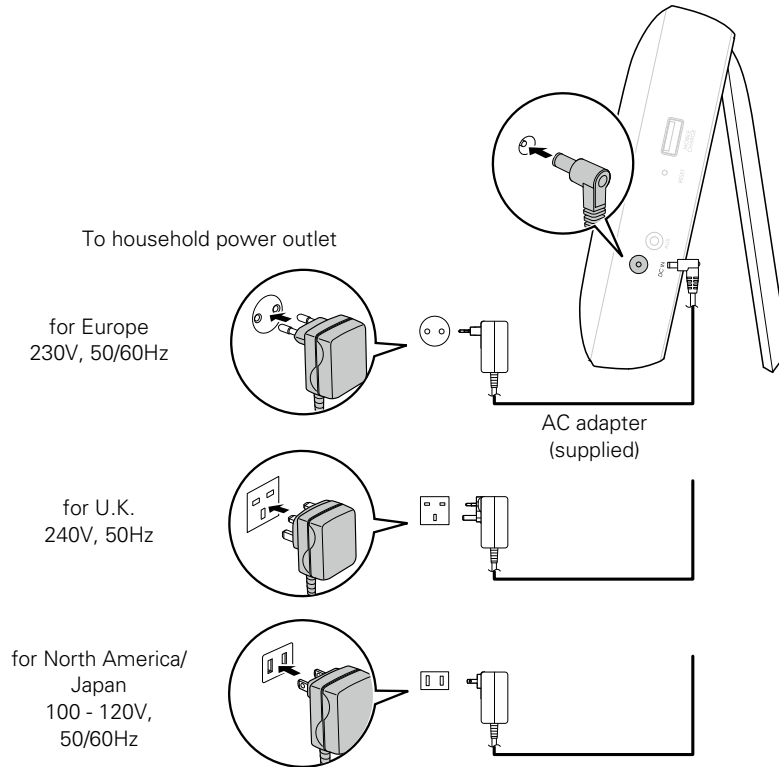


Note

- Only use the supplied AC adapter.




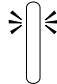
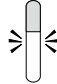
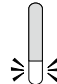
■ Remaining battery indicator

The remaining battery level when this unit is being charged or used on battery power is indicated as shown below.

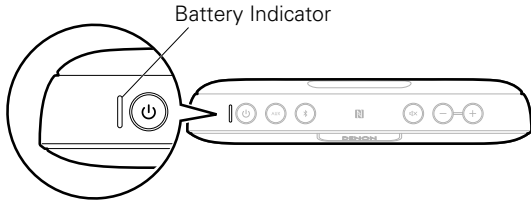





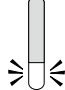
When connected to the AC adapter (charging)

The charging status is always indicated when charging.

Charging status	Battery Indicator
90 - 100%	Lit 
60 - 90%	Blinking 
30 - 60%	Blinking 
0 - 30%	Blinking 

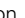When running on battery power

Press the  button to display the remaining battery when running on battery power. The remaining battery is displayed for approximately 5 seconds.

Remaining battery	Battery Indicator
60 - 100%	Lit 
30 - 60%	Lit 
5 - 30%	Lit 
0 - 5%	Blinking 





- When the remaining battery falls below 5%, connect the AC adapter and recharge this unit.



Using this unit's power supply to charge a smartphone

When a device such as a smartphone or portable music player, etc. is connected to this unit using a USB cable (sold separately), the connected device can be charged. This unit is designed to use its power supply to charge devices connected to it.

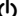- 1 Press and hold  until an electronic sound is heard.**
The illumination LED lights and the power supply switches on.

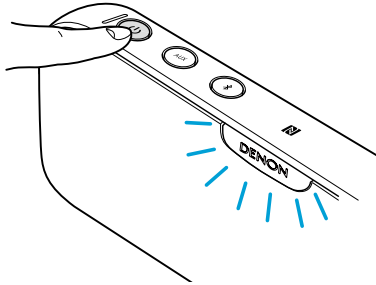


- When this unit is running on battery power, the illumination LED switches off after approximately 5 seconds.

- 2 Use a USB cable (sold separately) to connect a smartphone or portable music player etc. to this unit.**

The connected device starts charging.

- When this unit is running on battery power, power supply to the connected device is automatically stopped when the remaining battery falls below 5%.

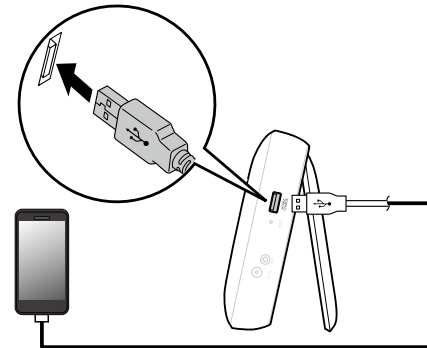


USB cable (sold separately)




- Charging of the connected device is stopped when the power supply for this unit is in standby.



Turn the power on

- Press and hold  until an electronic sound is heard.**
The illumination LED lights and the power supply switches on.

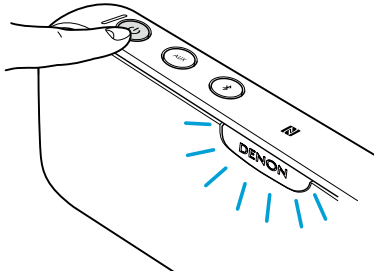


- When this unit is paired with a Bluetooth device, the power supply of this unit can be turned on by operating the paired Bluetooth device.
- When this unit is running on battery power, the illumination LED switches off after approximately 5 seconds.

Switching the power to standby

- Press and hold  for approx. 3 seconds.**
The LED of the Bluetooth button or AUX button goes out, and the power switches to standby.

■ Eco Standby Function

The power consumption in standby mode can be reduced to the minimum level by using the eco standby function. However, when the eco standby function is enabled, the power of this unit cannot be switched on by operating a Bluetooth device. When using the eco standby function, press the  button on this unit to turn the power on.
The eco standby function is turned off in the factory settings.

- Press and hold  for approx. 6 seconds.**
The power indicator blinks twice and this unit switches to eco standby.



Bluetooth Connection

You can enjoy listening to music wirelessly by connecting this unit to a Bluetooth compatible device.

Pairing

Pairing (registration) is an operation that is required in order to connect a Bluetooth device to this unit using Bluetooth. When paired, the devices authenticate each other and can connect without mistaken connections occurring.

When using Bluetooth connection for the first time, you need to pair this unit and the Bluetooth device to be connected.


This unit can store pairing information for a maximum of 8 devices.


Note


- Multiple Bluetooth devices cannot be played back at the same time.

Three Bluetooth Connection Methods

There are three methods for connecting with Bluetooth. Use the connection method for your particular circumstances.

Case 1 Pairing with this unit for the first time ( [page 15](#))

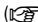Case 2 Connecting to a Bluetooth device that has already been paired ( [page 17](#))

Case 3 NFC connection to a Bluetooth device equipped with the NFC function ( [page 18](#))




Case 1: Pairing with this unit for the first time

1 Press and hold until an electronic sound is heard.


The illumination LED lights and the power supply switches on.

- This unit automatically enters pairing mode the first time the power is switched on after purchase. In this case, you do not need to perform the operations in step 2.

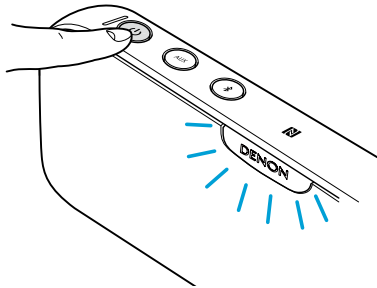

2 Press and hold the Bluetooth button for 3 seconds until an electronic sound is heard.

The Bluetooth button blinks rapidly and this unit enters pairing mode.

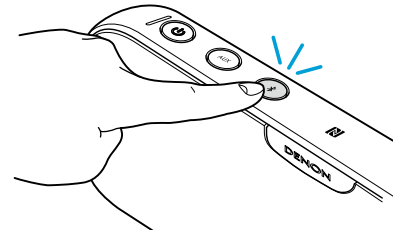

3 Turn the Bluetooth function of the Bluetooth device on.

- For details, see the Owner's Manual of the Bluetooth device.



4 Select "Envaya" from the list of devices displayed in the screen of the Bluetooth device.

When pairing is complete and the devices are connected by Bluetooth, an electronic sound is heard and the Bluetooth button changes from blinking to lit.



- If "Envaya" is not displayed in the screen of the Bluetooth device, search for devices on the Bluetooth device.
- If you are asked to enter a pass key in the Bluetooth device screen, enter "0000".

5 Playback music on the Bluetooth device.

The music played back on the Bluetooth device is output from this unit.



- If pairing fails, try again from step 2.
- If you want to pair other Bluetooth devices, repeat steps 2 to 5 for each of the devices that you want to pair.

Note

- This unit remains in the pairing mode for approximately 5 minutes. If the pairing mode of this unit is canceled before you have finished pairing, repeat the process again from step 2.
- This unit cannot pair with Bluetooth devices that have a pass key other than "0000".

■ Deleting Pairing Information

1 Press and hold the Bluetooth button for approx. 10 seconds until an electronic sound is heard.


All of the registered pairing information is deleted.

Note

- Even when an electronic sound is heard approximately 3 seconds after pressing and holding the Bluetooth button, continue holding down the button.




Case 2: Connecting to a Bluetooth device that has already been paired

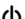- 1 Press and hold  until an electronic sound is heard.**

The illumination LED lights and the power supply switches on.

 - When the Bluetooth function of the device that was last connected is turned on, it automatically connects to this unit.
 - If the input on this unit is set to AUX, press the Bluetooth button to switch to Bluetooth input.
- 2 Turn the Bluetooth function of the Bluetooth device on.**
 - For details, see the Owner's Manual of the Bluetooth device.

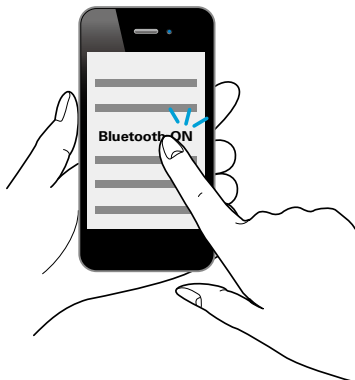

- 3 Select "Envaya" from the list of devices displayed in the screen of the Bluetooth device.**

When a device is connected by Bluetooth, an electronic sound is heard and the Bluetooth button changes from blinking to lit.



- 4 Playback music on the Bluetooth device.**

Music from the Bluetooth device is output from this unit.



Case 3: NFC connection to a Bluetooth device equipped with the NFC function

Simply touch this unit with the Bluetooth device. The power supply to this unit automatically turns on and the Bluetooth device can pair or connect to this unit.

1 Turn the NFC function of the Bluetooth device on.


- For details, see the Owner's Manual of the Bluetooth device.

2 Touch the NFC antenna section of the Bluetooth device onto the N mark on this unit.

The power supply to this unit turns on, the Bluetooth button blinks and the device starts to connect by Bluetooth.

When a device is connected by Bluetooth, an electronic sound is heard and the Bluetooth button changes from blinking to lit.

- Follow the Bluetooth device instructions to complete the operation.

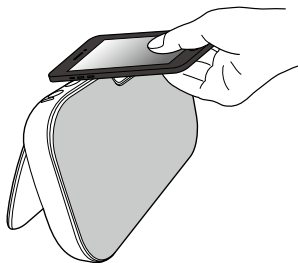

3 Playback music on the Bluetooth device.

Music from the Bluetooth device is output from this unit.



- When a Bluetooth device that is playing back music touches the N mark on this unit, the music starts being output from this unit.
- When the N mark is touched again during Bluetooth connection, the Bluetooth connection is disconnected.
- If a different Bluetooth device is touched to the N mark while this unit is connected to a Bluetooth device, playback from the previously connected Bluetooth device stops and this device connects to the most recently touched Bluetooth device.

Note

- When connecting using the NFC connection, release the lock function on the Bluetooth device.




Simultaneously connecting Bluetooth devices (Multipoint function)

Music can only be output from this unit from one Bluetooth device connected using Bluetooth, but three Bluetooth devices can be simultaneously connected to this unit (see page 14 "Bluetooth Connection").

It is convenient to connect devices that you use frequently so that you do not need to re-connect each time you want to switch playback devices.

Pair the devices that you want to connect in advance.

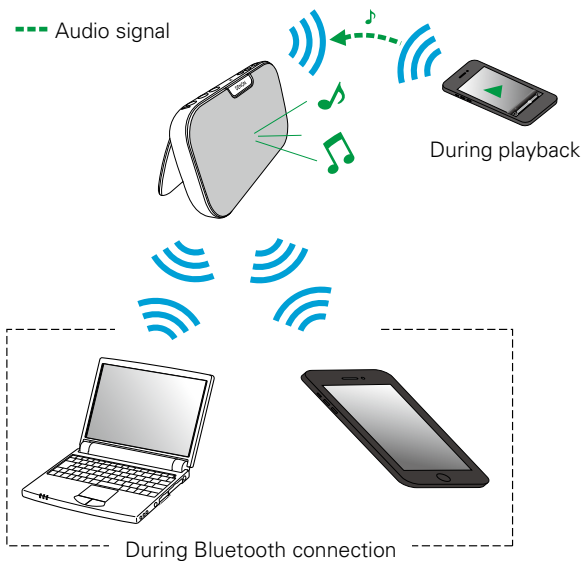


■ Switching playback devices

- 1 Stop or pause playback on the device that is currently playing back.
- 2 Playback the device that you want to playback.




Adjusting the volume


The volume of the music output from this unit can be adjusted both on the Bluetooth device and on this unit.

- 1 Connect this unit and a Bluetooth device.**
 - For details on how to connect, see “Bluetooth Connection” ( page 14).
- 2 Adjust the volume on this unit to a low volume.**
- 3 Check that the volume on the Bluetooth device is not too high, and start playback.**
 - For details, see the Owner’s Manual of the Bluetooth device.
- 4 Adjust to the desired volume using the volume adjustment button on this unit.**

Turning off the sound temporarily (muting)

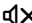- 1 Press .**


The illumination LED blinks and the music output from this unit stops.

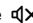 - To cancel muting, press the  button again. Muting can also be canceled by adjusting the volume while the sound is muted.




Listening to music using a wired connection

You can enjoy listening to music from this unit by connecting a portable music player, etc. to this unit using a stereo mini cable (sold separately).

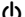- 1 Press and hold  until an electronic sound is heard.**
The illumination LED lights and the power supply switches on.

- 2 Connect the AUX input connector on this unit to the headphones jack of the portable music player using a stereo mini cable (sold separately).**


- When a stereo mini cable is connected to the AUX input connector of this unit, the input of this unit automatically switches to AUX.

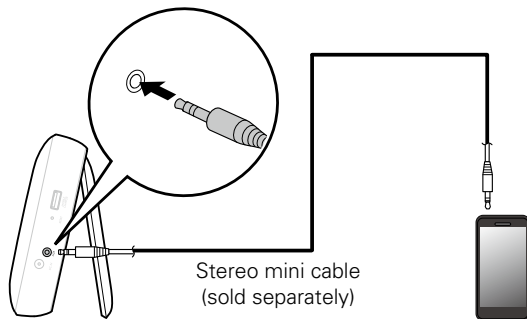

- 3 Playback the portable music player and adjust the volume.**

Note

- Use a stereo mini cable that has 3-pole plugs.

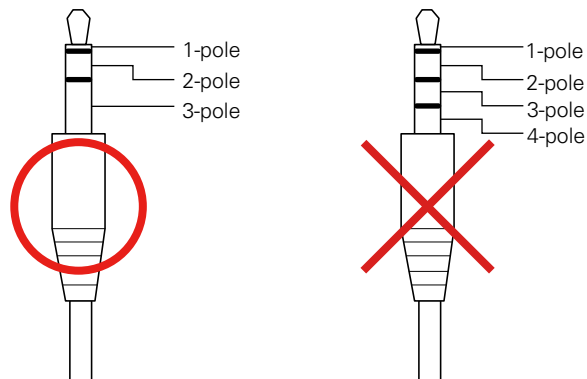


Contents

■ Tips	(22)	■ Troubleshooting	(22)
I want to charge a Bluetooth device.....	(23)	Power does not turn on.....	(22)
I want to replace the net in the unit	(23)	No sound comes out	(25)
I want to connect multiple Bluetooth devices and switch easily between them.....	(23)	Sound is distorted, interrupted or noise occurs	(25)
I want to connect an NFC compatible device using NFC	(23)	Cannot pair devices	(26)
I want to turn this unit's power on by operating a Bluetooth device.....	(23)	Cannot connect using NFC.....	(26)
I want to reduce the power consumption to the minimum during standby	(23)	Power is turned off.....	(26)




Tips


I want to charge a Bluetooth device

- Use a USB cable (sold separately) to connect the Bluetooth device to this unit ( [page 12](#)).


I want to replace the net in the unit

- Remove the grill and attach one of the supplied interchangeable nets ( [page 28](#)).


I want to connect multiple Bluetooth devices and switch easily between them

- Music can only be output from this unit from one Bluetooth device connected using Bluetooth, but three Bluetooth devices can be simultaneously connected to this unit. To switch easily between connections, connect Bluetooth devices that you use frequently to this unit. To switch playback to a different Bluetooth device when multiple Bluetooth devices are connected, stop playback on the device that is currently playing back, and then start playback on a different Bluetooth device ( [page 19](#)).


I want to connect an NFC compatible device using NFC

- Enable the NFC function on the NFC compatible device, and touch the NFC device to the N mark on this unit ( [page 18](#)).

I want to turn this unit's power on by operating a Bluetooth device

- Playback music on a Bluetooth device that is connected using Bluetooth to this unit. In this case, turn this unit's eco standby mode off ( [page 13](#)).

I want to reduce the power consumption to the minimum during standby

- Turn the eco standby function on ( [page 13](#)). When this function is turned on, you cannot turn the power supply to this unit on by operating a Bluetooth device.



Troubleshooting

1. Are the connections correct?

2. Is the set being operated as described in the owner's manual?

If this unit does not operate properly, check the items listed in the table below. Should the problem persist, there may be a malfunction.

In this case, disconnect the power immediately and contact your store of purchase.

■ Power does not turn on

Symptom	Cause/Solution	Page
Power does not turn on (When AC adapter is connected).	<ul style="list-style-type: none"> • Check whether the AC adapter is connected correctly. • Check that the power plug is inserted correctly into the power outlet. • Check that the replacement AC adapter plug is correctly attached to the AC adapter. 	10 10 9
Power does not turn on (When AC adapter is not connected).	<ul style="list-style-type: none"> • If this unit is not used for a long period of time (approximately 14 days), the power supply from the battery will be automatically switched off in order to protect the battery (battery protection function). The battery protection function is canceled when the AC adapter is connected. • Battery has completely discharged. Connect the AC adapter and recharge the battery. 	10 10



■ No sound comes out

Symptom	Cause/Solution	Page
No sound comes out.	• Check that the power supply to this unit and connected devices is on.	<u>13</u>
	• Check that the volume control this unit and connected devices is adjusted to an appropriate level.	<u>20</u>
	• Pair a Bluetooth device with this unit.	<u>14</u>
	• When playing back music using a wired connection, check that the stereo mini cable is connected securely.	<u>21</u>
	• The AUX input connector of this unit is compatible with stereo mini cables that have 3-pole plugs. Some smartphones or portable music players are compatible with stereo mini cables that have 4-pole plugs. Be sure to prepare a connection cable that is compatible with the specifications of the device that you want to connect.	<u>21</u>
	• If this unit is in muting mode, cancel muting mode.	<u>20</u>

■ Sound is distorted, interrupted or noise occurs

Symptom	Cause/Solution	Page
Sound is distorted, interrupted or noise occurs.	• Check that the volume control this unit and connected devices is adjusted to an appropriate level.	<u>20</u>
	• Bring the connected device closer to this unit.	-
	• Move this unit away from appliances such as microwave ovens or wireless LAN devices.	-
	• Turn the power of the Bluetooth device off and on again.	-



■ Cannot pair devices

Symptom	Cause/Solution	Page
Cannot pair devices.	<ul style="list-style-type: none"> • Turn the power of this unit off and on again. • Move the Bluetooth device to within 1 meter of this unit and then try again. • Turn the power of the Bluetooth device off and on again. 	<p><u>13</u></p> <p>-</p> <p>-</p>

■ Cannot connect using NFC

Symptom	Cause/Solution	Page
Cannot connect using NFC.	<ul style="list-style-type: none"> • Check that the Bluetooth device is equipped with the NFC function. • Check the position of the NFC antenna on the Bluetooth device, and touch the N mark on this unit with the NFC antenna of the Bluetooth device. Keep the Bluetooth device in contact with this device until the Bluetooth device responds. 	<p>-</p> <p><u>18</u></p>


■ Power is turned off

Symptom	Cause/Solution	Page
Power is turned off.	<ul style="list-style-type: none"> • If the input of this unit is set to Bluetooth and no audio is played back for approximately 15 minutes, this unit automatically enters standby mode. Turn the power of this unit off and on again. • If the input of this unit is set to AUX and it is not operated for approximately 8 hours, this unit automatically enters standby mode. Turn the power of this unit off and on again (AUX auto standby function). To turn the AUX auto standby function off, press and hold the AUX button for approximately 3 seconds when the input of this unit is set to AUX. 	<p>-</p> <p>-</p>



Restarting the unit


If this unit does not operate correctly, use a pointed object such as a pin to press the reset button on the side of the unit.

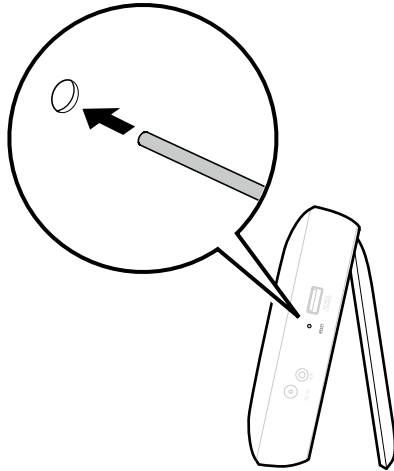


Replacing the grill net

You can replace the grill net with a different colored net.

- 1 Unhook the hook on the base of this unit with your finger.**

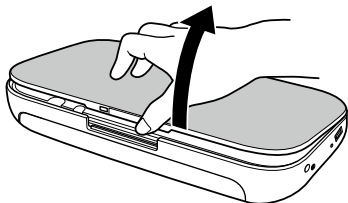


- 2 Unhook the grill net hook with your finger.**

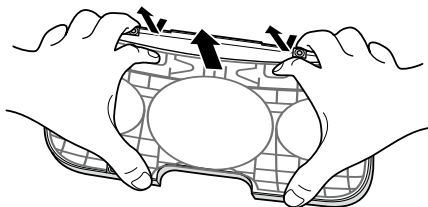


- 3 Attach one of the interchangeable nets.**

- As shown in the figure, align the net with the cutout side, and hook the other side onto the grill hooks.

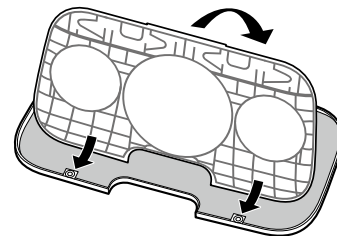

- 4 Attach the grill onto the unit.**

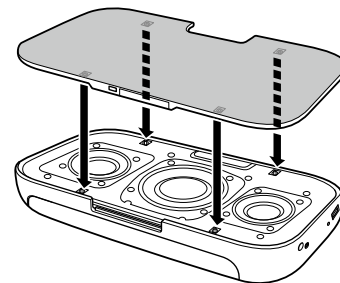

Explanation of Terms

N

NFC (Near Field Communication)

This is technology that enables wireless communication over a short range. Terminals that are equipped with the NFC function can be easily connected to this unit simply by touching.



Trademark information



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by D&M Holdings Inc. is under license. Other trademarks and trade names are those of their respective owners.



©2013 CSR plc and its group companies.
The aptX® mark and the aptX logo are trade marks of CSR plc or one of its group companies and may be registered in one or more jurisdictions.



The N mark is a trademark or registered trademark of NFC forum, Inc. in the United States and in other countries.



Specifications

■ Audio section

Rated output:

Maximum effective output power:

Frequency response:

Speaker driver:

Bluetooth standards:

Supported profiles:

Supported codecs:

~~125W+125W (Load 8Ω, 20Hz - 20kHz T.H.D 0.05%)
165W+165W (Load 6Ω, 1kHz T.H.D 0.7%)
195W+195W (Load 6Ω, 1kHz T.H.D 10% 2-channel driving JEITA)
235W (Load 6Ω, 1kHz T.H.D 10% 1-channel driving JEITA)
10Hz - 100kHz : +1, -3dB (in DIRECT mode)
76.00MHz - 90.00MHz
1.2μV (12.8dBf)
Mono: 2.8μV (20.2dBf)
Mono: 70dB (IHF-A, in DIRECT mode)
Stereo: 67dB (IHF-A, in DIRECT mode)~~

■ Bluetooth section

Communication system:

Maximum communication range:

Frequency band:

Modulation method:

Compatible Bluetooth profiles:

Supported Codecs:

Transmission range (A2DP):



■ General

Waterproofing:


IPX2 equivalent

AC adapter:

AC100 - 240V, 50/60Hz

■ Dimensions

Unit : mm

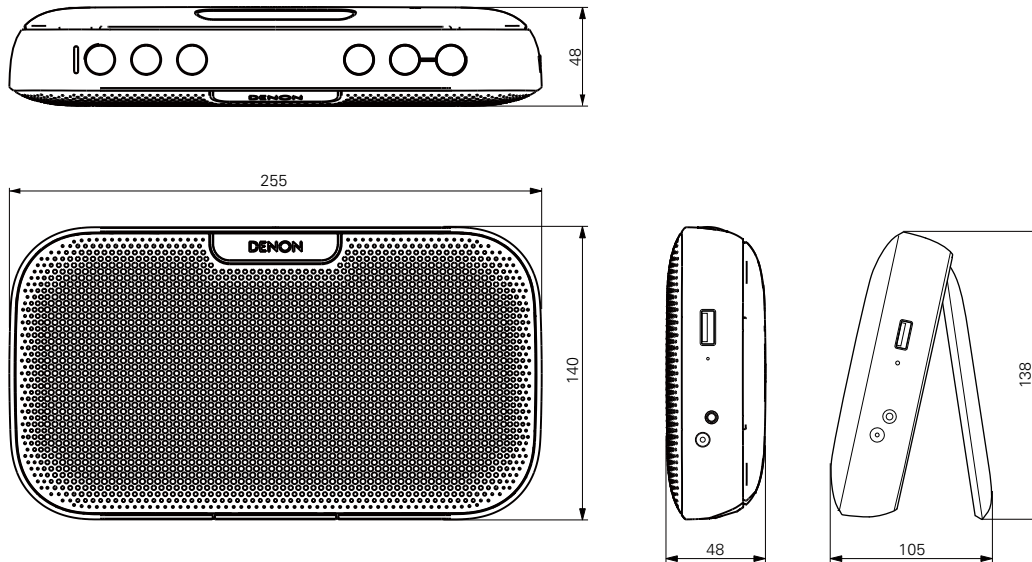







■ Weight : 1.3 kg

* For purposes of improvement, specifications and design are subject to change without notice.



Index

 A	
Accessories	4
 C	
Connections	
AC adapter	10
Bluetooth connection (Pairing)	14
USB Cable	12
 M	
Multipoint function	19
 N	
NFC Function	18 30
 P	
Pairing	14
Playback	
AUX (wired)	21
Bluetooth	20

 R	
Replacing the grill net	28
Return to the default settings	27

 T	
Tips	23
Troubleshooting	24
Turning the power on	13



Warning

This appliance and its antenna must not be co-located or operation in conjunction with any other antenna or transmitter. A minimum separation distance of 20 cm must be maintained between the antenna and the person for this appliance to satisfy the RF exposure requirements.

FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Users are not permitted to make changes or modify the device in any way.

Changes or modifications not expressly approved by Samsung will void the user's authority to operate the equipment.

IC

"This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. The user is cautioned that this device should be used only as specified within this manual to meet RF exposure requirements".

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

DENON

www.denon.com

D&M Holdings Inc.
3520 10324 00AD