

DENON[®]

envaya

DSB50BT, DSB150BT, DSB250BT

Owner's Manual



Preparation

| | |
|-------------------------------|-----------|
| Introduction | 3 |
| Unpacking | 4 |
| Overview | 5 |
| Sound Quality | 5 |
| Design | 5 |
| Operation | 5 |
| Features and functions | 6 |
| Charging | 8 |
| Turning the power on | 10 |
| Turning the power off | 10 |

Connections

| | |
|--|-----------|
| Bluetooth operation | 11 |
| Pairing | 11 |
| Connecting | 11 |
| 1: Connecting for the first time | 12 |
| 2: Reconnecting paired devices | 14 |
| Simultaneously connecting multiple Bluetooth devices (Multipoint function) | 15 |
| Stereo pairing | 16 |

Operation

| | |
|---|-----------|
| Adjusting the volume | 17 |
| Performing basic operations | 17 |
| Listening to music using a wired connection | 18 |
| Conducting hands-free phone calls using Envaya | 19 |

Troubleshooting

| | |
|---|-----------|
| Tips | 21 |
| Troubleshooting | 22 |
| Speaker does not turn on | 22 |
| Envaya cannot be charged | 22 |
| No sound from the speaker | 23 |
| Sound is distorted, noisy, or cuts in and out | 23 |
| Cannot pair a Bluetooth device with the speaker | 24 |
| Speaker is turning off automatically | 25 |
| Speaker is malfunctioning | 25 |
| Cannot conduct a call | 25 |
| Restarting the Envaya | 26 |

Appendix

| | |
|---|-----------|
| Playing back a Bluetooth device | 27 |
| Notes on splash-proof capabilities | 27 |
| Trademark information | 28 |
| Specifications | 29 |
| DSB-50BT | 29 |
| DSB-150BT | 31 |
| DSB-250BT | 33 |
| Index | 35 |

 


Introduction


This manual is for all three models.

For the purposes of this manual, the name “Envaya” is used to refer to the three products.


Their respective model names are used in the model-specific manuals.

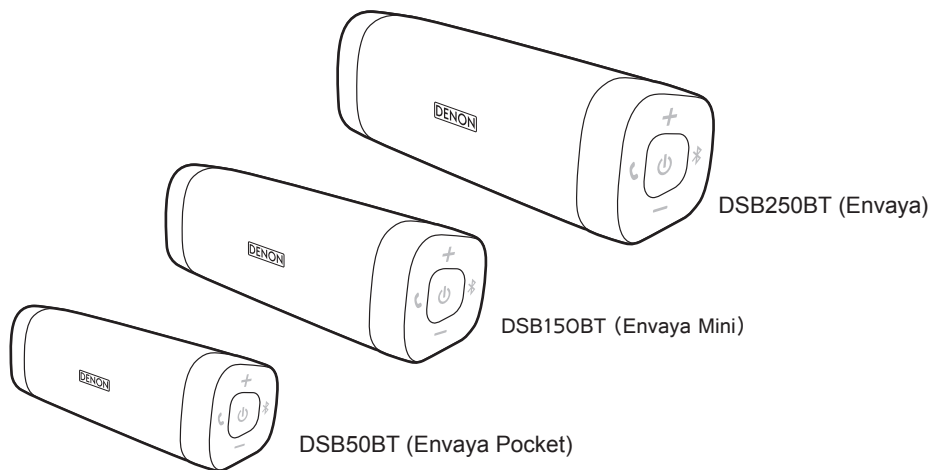


Unpacking

 


Quick Start Guide

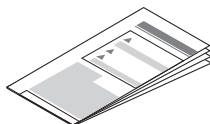 

Safety Instructions

 

USB Cable

 

Strap



- USB to AC power adapter not included.



Overview

Sound Quality

- Despite the compact size of Envaya, powerful playback sound is produced by using neodymium magnets in the magnetic circuit and utilizing an original surround shape in the passive radiator.
- Envaya is compatible with a wide range of codecs, including the high sound quality aptX, AAC and SBC. Envaya automatically selects the optimum compatible codec for your Bluetooth device (smartphone or tablet) so you can enjoy high-grade wireless sound. Additionally, aptX is Low Latency compatible so you can enjoy videos and gaming without audio lag.

Design

 
- Envaya has a slim stick design for easy carrying.
- Envaya has a waterproof and dustproof design to keep the unit safe if it gets wet or is exposed to dust clouds. This allows it to be used in a wider range of areas, such as by a pool or in dusty outdoor environments.

Operation

- Basic operations (Play/Pause/skipping) can be performed using the button on the Envaya.
- Hands-free phone calls can be conducted using Envaya by pairing with a Bluetooth-compatible mobile phone. Envaya is equipped with CVC (Clear Voice Capture) technology for low-noise calls with minimal echo.
- If you have two Envaya units*, you can make a stereo pair connection between them to create spatial stereo sound.
* The two units must be the same model.



Features and functions

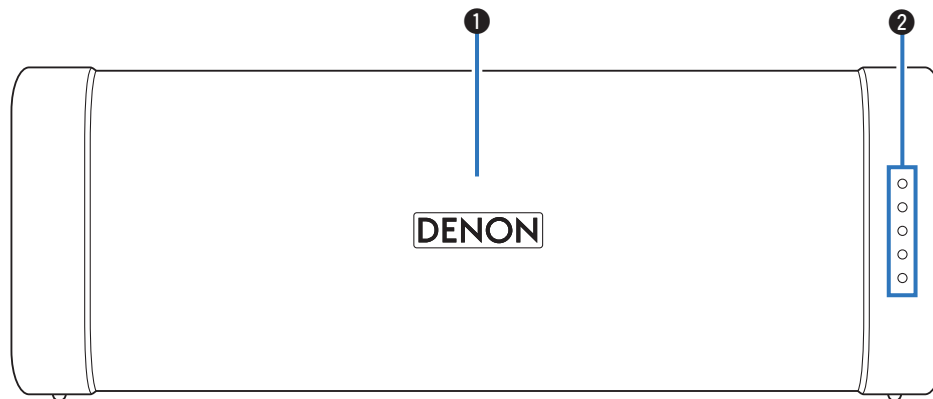

1 Microphone

This microphone is used when conducting hands-free phone calls.

(☞ p. 19)

 
2 Status Indicator

Lit when power is on.

Lit when charging. (☞ p. 9)

Lit when pairing. (☞ p. 12)



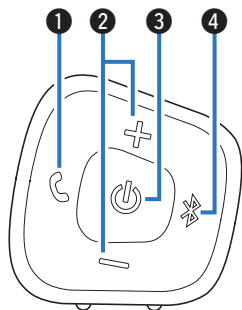

1 Call button (☎)

Press this to pair with a smartphone. (☞ p. 19)

2 Volume adjustment buttons (-,+)

 
Adjusts the volume up and down. (☞ p. 17)

3 Power button (⏻)

Turns the power on/off. (☞ p. 10)

4 Bluetooth button (📶)

Press this to start pairing. (☞ p. 11)

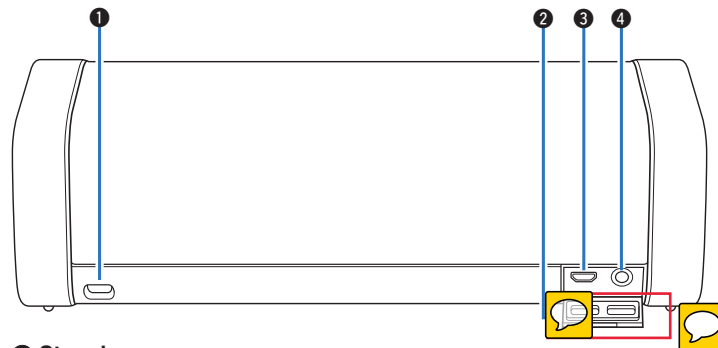

1 Strap loop

Attach the provided strap here.

2 Cap

Close this cap securely to ensure proper dustproof and waterproof performance.

3 Micro USB port

Connect Envaya to the USB to AC power adapter (not included) or the USB port of a computer using the supplied USB cable to charge this unit. (☞ p. 8)

4 AUX Input connector

Used to connect an external audio player with an analog output. (☞ p. 18)



Charging

Envaya can be charged and operated on battery power. It can also be operated from an AC power source by connecting it to the USB to AC power adapter (available commercially) or the USB port of a computer using the supplied USB cable.

Please make sure you charge the battery completely before listening on battery power.



- It takes at least 2.5 hours to fully charge the battery when it is completely discharged. (if using a USB to AC power adapter with an output of 2A or higher)
- Envaya can be used for approximately 10 hours when the battery is fully charged. (The playback time may differ depending on the ambient temperature, playback volume, and usage conditions)

NOTE

 
- Only use the supplied USB cable.
- We recommend using a USB to AC power adapter with an output of 2A or higher.
- The rating of adapter should be less than DC 5V, 2.4A.
- Must be used with an approved adapter suitable for the countries where the requirement will be applied.

■ Charging the speaker

- ① Open the cap on the rear side.
- ② Connect the small end of USB cable to the speaker.
- ③ Connect the large end of the USB cable to a USB to AC power adapter and a power source or the USB port on your computer.


NOTE

- Remove the USB cable and firmly close the cap when charging is completed.

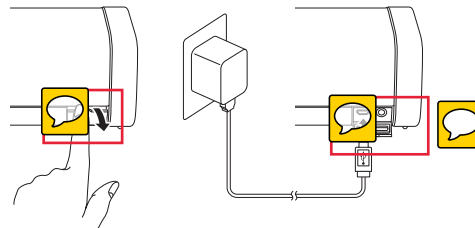

■ Battery indicator

 The battery indicator uses 3 LEDs to indicate the status of the charge process when connected to the USB to AC power adapter or the USB port of a computer.

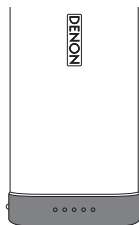

When connected to the USB to AC power adapter or the USB port of a computer (charging)

The battery indicator is always lit when charging.

The battery indicator turns off when charging is complete while the Envaya is in standby.


| Charging status (Approximate) | Status Indicator |
|-------------------------------|------------------|
| 70 - 99 % | |
| 31 - 70 % | |
| Less than 30 % | |



Turning the power on

1 Press and hold until a notification sound is heard.

 The status indicator illuminates and Envaya turns on.

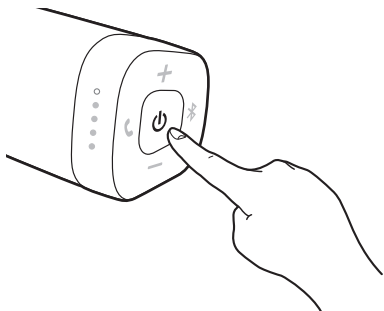

Turning the power off

1 Press and hold until a notification sound is heard.

The status indicator lights turn off and the speaker's power is turned off.



- Envaya automatically turns off when there is no audio output from a Bluetooth device for approximately 15 minutes and the unit is not operated during this time.
- If the stereo mini plug cable is connected to Envaya and Envaya is not operated for approximately 8 hours, Envaya automatically turns off (AUX auto off function).



Bluetooth operation

 
You can enjoy listening to music wirelessly by connecting Envaya to your Bluetooth device.

Pairing

Pairing (registration) is an operation that is required in order to connect a Bluetooth device to Envaya.

When using Bluetooth for the first time, you need to pair Envaya and your Bluetooth device so they can communicate with each other.

Envaya can store pairing information for up to 8 devices.

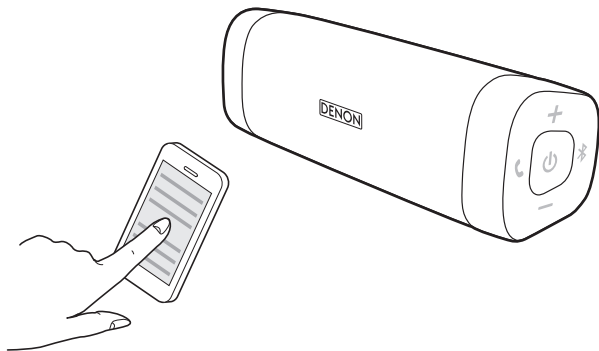

NOTE

- Multiple Bluetooth devices cannot be played back at the same time.

Connecting

There are two methods for connecting with Bluetooth devices:

1 Connecting for the first time (☞ p. 12)

 
2 Reconnecting paired devices (☞ p. 14)



1: Connecting for the first time

1 Turn on Bluetooth on your mobile device.

- For details, see the Owner's Manual of your Bluetooth device.

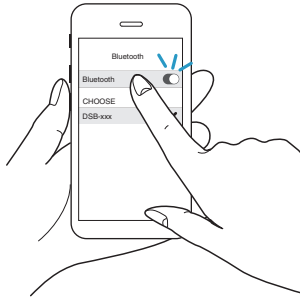


2 Press and hold until a notification sound is heard.

The status indicator illuminates and Envaya turns on.

- Envaya automatically enters pairing mode the first time the power is turned on after purchase. In this case, you do not need to perform step 3.


3 Press and hold the button for 3 seconds until a notification sound is heard.

 The status indicator blinks rapidly and Envaya enters pairing mode.

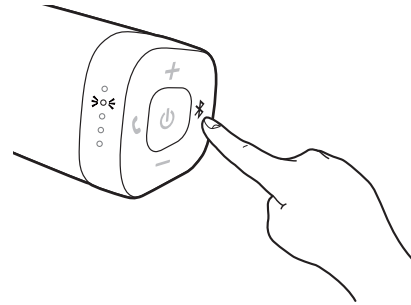

4 Select “Envaya xxx”^{*1} from the list of devices displayed on the screen of your Bluetooth device.

 When pairing is complete a notification sound is heard and the status indicator changes from blinking to on.

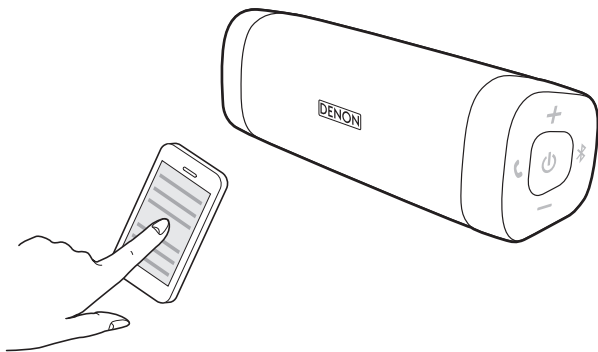

- If you are asked to enter a pass key in the Bluetooth device screen, enter “0000”.

NOTE

- ^{*1}: The name displayed depends on the model.
DSB-50BT: Envaya Pocket
DSB-150BT: Envaya Mini
DSB-250BT: Envaya

5 Listening to music.

Music played back on the Bluetooth device will now play through your Envaya speaker.



- Adjust the volume to an appropriate level.

NOTE

 
- Envaya remains in the pairing mode for approximately 5 minutes and then will exit pairing mode. If your device could not connect, please try again from step 3.
- Envaya cannot pair with Bluetooth devices that require a pass key other than “0000”.



2: Reconnecting paired devices

1 Turn on Bluetooth on your mobile device.

- For details, see the Owner's Manual of your Bluetooth device.

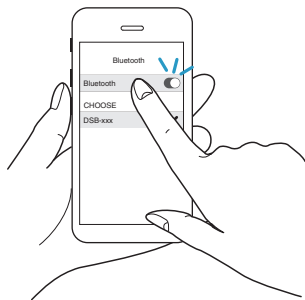


2 Press and hold until a notification sound is heard.

The status indicator illuminates and Envaya turns on.

- If the last device which was connected to Envaya is turned on, in range, and has Bluetooth enabled, it automatically connects to Envaya.
- If the stereo mini plug cable is connected to Envaya, remove the cable to switch to the Bluetooth input.

3 Select “Envaya xxx”^{*1} from the list of devices displayed on the screen of your Bluetooth device.

 When a device is connected by Bluetooth, a notification sound is heard and the status indicator changes from blinking to on.

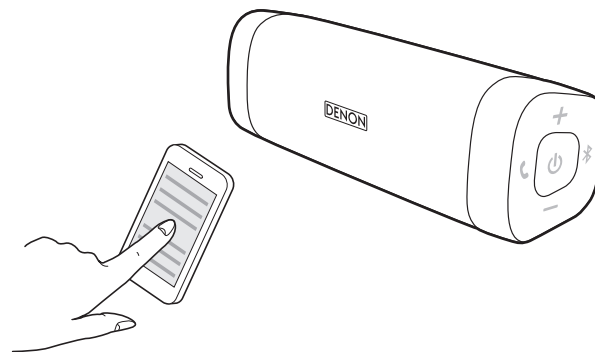

NOTE

- ^{*1}: The name displayed depends on the model.
DSB-50BT : Envaya Pocket
DSB-150BT : Envaya Mini
DSB-250BT : Envaya

4 Listening to music.

Music played back on the Bluetooth device will now play through your Envaya speaker.

 


Simultaneously connecting multiple Bluetooth devices (Multipoint function)

Two Bluetooth devices can be simultaneously connected to Envaya so you can easily switch between multiple Bluetooth audio sources without having to disconnect and reconnect each device. ("Bluetooth operation" (🔊 p. 11))

It is convenient to connect devices that you use frequently so that you do not need to re-connect each time you want to switch playback devices. Pair the devices that you want to connect in advance.

--- Audio signal

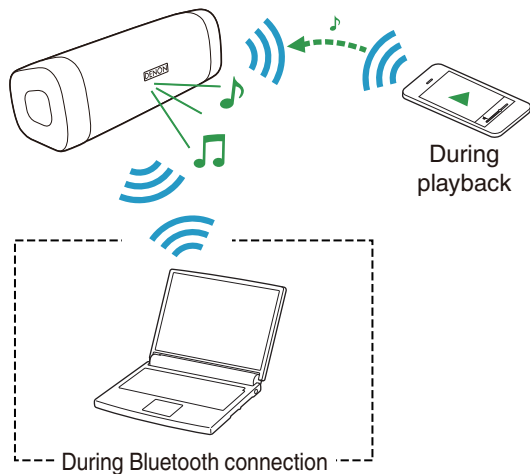

■ Switching playback devices

- 1 Stop or pause playback on the device that you are currently listening to.
- 2 Begin playback on the device that you want to listen to.

■ Disconnecting the bluetooth connection

Disconnect the Bluetooth connection by turning off the Bluetooth function of the Bluetooth device.



 
Stereo pairing

If you have two of the same speakers, you can use them as a pair of stereo speakers.

- 1** Connect each Envaya to the Bluetooth device.
- 2** Press and hold the Bluetooth button on the two Envaya at the same time until notification sound is heard.

NOTE


- The first connected Envaya is set to the right speaker, and the Envaya connected later is set to the left speaker.

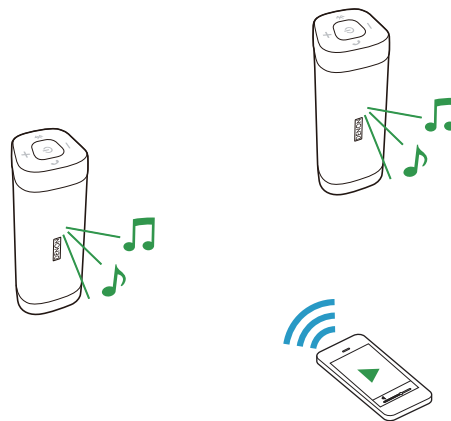

Adjusting the volume



 
1 While playing music, press the + button to increase the volume. Press the – button to decrease the volume.

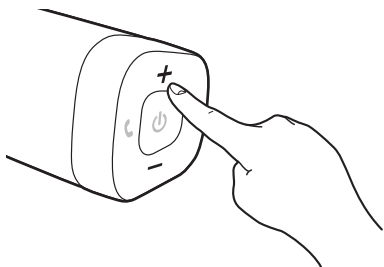- For the best signal to noise ratio, you may have to raise the volume of your connected music player up to an appropriate level then adjust the volume of the speaker up or down.



 
Performing basic operations

You can perform basic operations on a device connected by Bluetooth from Envaya.

- Start or pause playback: Press the  button.
- Skip to the next track: Press the  button twice consecutively.
- Skip to the previous track: Press the  button three times consecutively.



- This function is enabled when the device is compatible with AVRCP (Audio/Video Remote Control Profile).

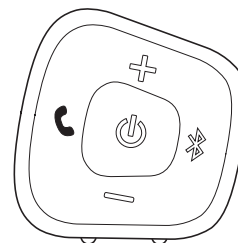

Listening to music using a wired connection

 
You can enjoy listening to music from devices that do not support Bluetooth audio by connecting to Envaya using a stereo mini plug cable (available commercially).

1 Press and hold until a notification sound is heard.

The status indicator illuminates and Envaya turns on.

2 Connect the AUX input connector on Envaya to the headphones jack of the portable music player using a stereo mini plug cable (available commercially).

- When a stereo mini plug cable is connected to the AUX input connector of Envaya, the input of Envaya automatically switches to AUX.

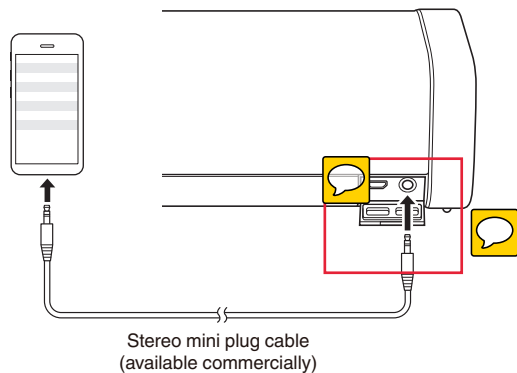


3 Start playing music from the device. You may need to adjust the volume up on the connected device, then adjust the volume on Envaya.

- Remove the stereo mini plug cable to switch to Bluetooth input.




Conducting hands-free phone calls using Envaya

 If your mobile phone supports the Hands-Free profile (HFP), you can answer incoming calls to your mobile phone from Envaya when the devices are connected by Bluetooth.

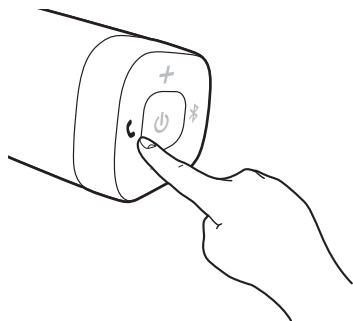


■ Answering an incoming call

If a mobile phone connected to Envaya receives an incoming call, the music being played is paused and Envaya plays a ring tone.


Press and release the  button on Envaya while the ring tone plays to answer an incoming call.

Speak into the microphone on Envaya.

■ Ending a call

Press the  button on Envaya while a call is in progress to end the call. If you were playing music before the call, playback of the music resumes.

■ Canceling an incoming call

Press and hold the  button on Envaya for approximately two seconds while the ring tone plays to cancel an incoming call.



Tips

| | |
|---|----|
| I want to perform basic operations for music playback from Envaya | 21 |
| I want to answer incoming calls to my mobile phone on Envaya | 21 |
| Connecting multiple Bluetooth devices and switching easily between them | 21 |

Troubleshooting

| | |
|---|----|
| Speaker does not turn on | 22 |
| Envaya cannot be charged | 22 |
| No sound from the speaker | 23 |
| Sound is distorted, noisy, or cuts in and out | 23 |
| Cannot pair a Bluetooth device with the speaker | 24 |
| Speaker is turning off automatically | 25 |
| Speaker is malfunctioning | 25 |
| Cannot conduct a call | 25 |




Tips

I want to perform basic operations for music playback from Envaya

- Basic operations for music playback (Play/Pause/skipping tracks) can be performed using the buttons on the Envaya. (👉 p. 17)

I want to answer incoming calls to my mobile phone on Envaya

- If a mobile phone connected by Bluetooth receives an incoming call, the music being played is paused and a ring tone plays. Press and release the  button on Envaya to answer the call. (👉 p. 19)

Connecting multiple Bluetooth devices and switching easily between them

- Music can only be output from Envaya from one Bluetooth device connected using Bluetooth, but two Bluetooth devices can be simultaneously connected to Envaya. To switch easily between connections, connect Bluetooth devices that you use frequently to Envaya. To switch playback to a different Bluetooth device when multiple Bluetooth devices are connected, stop playback on the device that is currently playing back, and then start playback on a different Bluetooth device. (👉 p. 15)



Troubleshooting

Check all connections.

If Envaya does not operate properly, check the items listed in the table below.

Should the problem persist, there may be a malfunction. In this case, disconnect the power immediately and contact your store of purchase.

* If you need additional help in solving problems, contact Denon customer service in your area.

For more information, visit www.denon.com.

Speaker does not turn on

Speaker does not turn on. (AC power)

- To turn on the speaker, press and hold the power button for 2 seconds. (👉 p. 10)

Speaker does not turn on. (Battery power)

- The battery is completely discharged. Connect Envaya to the USB to AC power adapter or the USB port of a computer to charge Envaya. (👉 p. 8)

Envaya cannot be charged

Envaya cannot be charged.

- The speaker is not connected to a USB to AC power adapter.
Make sure the USB to AC power adapter is connected to a working power source (AC wall outlet). (👉 p. 8)
- Make sure the supplied USB cable is correctly connected to Envaya. (👉 p. 8)
- If Envaya is connected to the USB port of a computer, make sure the computer is turned on.



No sound from the speaker

No sound from the speaker.

- The speaker is not connected to USB to AC power adapter or the battery is not charged. Connect power and turn on the speaker. (🔍 p. 10)
- The volume is too low on your connected device. Turn up the volume on your device to about 90 % and then adjust the volume on the speaker. (🔍 p. 17)
- There is no connected Bluetooth device. Pair and connect a Bluetooth device and try again. (🔍 p. 11)
- There is no connected AUX device. Connect an audio device to the AUX input using a stereo 3.5mm cable and make sure music playing music on your device. (🔍 p. 18)
- The AUX input connector of Envaya is compatible with stereo mini plug cables that have 3-conductor plugs. Be sure to use a 3-conductor stereo mini plug cable. (🔍 p. 18)

Sound is distorted, noisy, or cuts in and out

Sound is distorted, noisy, or cuts in and out.

- The volume is too low on your connected device. Turn up the volume on your device to about 90 % and then adjust the volume on the speaker. (🔍 p. 17)
- The Bluetooth device is out of range. Bring the Bluetooth device closer to the speaker.
- The Bluetooth connection is experiencing wireless interference. Move the speaker away from appliances such as microwave ovens and other wireless devices.
- The Bluetooth device is having connectivity issues. Cycle the power on the Bluetooth and reconnect to the speaker.
- Depending on the type of USB to AC power adapter connected to Envaya, a small amount of noise may occur during charging. This is not a malfunction.



Cannot pair a Bluetooth device with the speaker

Cannot pair a Bluetooth device with the speaker.

- Power On the speaker then press and hold the Φ button for 3 seconds until you hear a 3 tone beep. Make sure your mobile device has Bluetooth On and select "Envaya ****" from the list of Bluetooth devices.
- The Bluetooth connection is experiencing wireless interference.
Move the speaker away from appliances such as microwave ovens and other wireless devices.
- The Bluetooth device is out of range. Bring the Bluetooth device closer to the speaker.
- The Bluetooth device is malfunctioning. Power cycle the device and try again.
- The Bluetooth device is malfunctioning. Power cycle the device, remove the pairing information (Forget this Device on iOS and Unpair on Android) and re-pair the speaker to the device.
- Bluetooth is off on the device. Make sure Bluetooth is set to ON on your device.
- If the stereo mini plug cable is connected, remove the cable.



Speaker is turning off automatically

Speaker is turning off automatically.


- To save battery power, the speaker is designed to turn off when no audio is played via Bluetooth for approximately 15 minutes. Power on the speaker by pressing and holding the power button for 2 seconds. (🔍 p. 10)
- If the input of Envaya is set to AUX and it is not operated for approximately 8 hours, Envaya automatically turns off. Power on the speaker by pressing and holding the power button for 2 seconds. To turn the AUX Auto Off function on or off, press and hold the battery button for approximately three seconds while the input of this unit is set to AUX. (🔍 p. 10)

The power turns off quickly.

- If usage time is extremely short even when the battery has been fully charged, the battery may be near the end of its life. In this case, please contact Denon service center.

Speaker is malfunctioning

Speaker is malfunctioning.

- To reset the speaker, turn on the speaker then, press and hold the VOLUME+, VOLUME- and  button simultaneously for 5 seconds. Envaya is reset. (🔍 p. 26)


Cannot conduct a call

 
Cannot conduct a call

- Hands-free phone calls cannot be conducted when a cable is connected to the AUX input. Remove the cable and try again. (🔍 p. 11)
- Not all mobile phones and Apps support Hands-free phone calling.



Restarting the Envaya

To reset the speaker, turn on the speaker then, press and hold the VOLUME+, VOLUME- and  button simultaneously for 5 seconds. Envaya is reset.

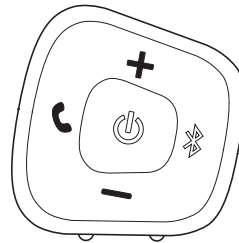

Playing back a Bluetooth device

Envaya supports the following Bluetooth profile.

- A2DP (Advanced Audio Distribution Profile):
When a Bluetooth device that supports this standard is connected, monaural and stereo sound data can be streamed at a high quality.
- AVRCP (Audio/Video Remote Control Profile):
When a Bluetooth device that supports this standard is connected, the Bluetooth device can be operated from Envaya.
- HFP (Hands-Free profile):
When a Bluetooth device that supports this standard is connected, hands-free calls can be conducted via Envaya.

■ About Bluetooth Communications

Radio waves broadcast from Envaya may interfere with the operation of medical devices. Make sure you turn off the power of Envaya and Bluetooth device in the following locations as radio wave interference may cause malfunctions.

- Hospitals, trains, aircraft, petrol kiosks and places where flammable gases are generated
- Near automatic doors and fire alarms

Notes on splash-proof capabilities



This unit is a splash-proof product equivalent to IPX4*.

Splashing this unit with water or handling it with wet hands will not cause problems in use. However, malfunctions may occur if this unit is left in a humid bathroom for long periods of time or comes into contact with water other than fresh water, such as sea water.

(* IPX4 is a standard of protection against splashing.

It refers to splashing from all angles at a volume of 0.07L/min from each splash port with no submergence.

- Do not splash with large volumes of water or place in water.
- Splash-proofing is not guaranteed when the cap is open.
- Changing the cap every year is recommended for satisfactory splash-proofing (charge applies).

For more information, contact Denon customer service."



Trademark information



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by D&M Holdings Inc. is under license. Other trademarks and trade names are those of their respective owners.



Qualcomm aptX is a product of Qualcomm Technologies International, Ltd. Qualcomm is a trademark of Qualcomm Incorporated, registered in the United States and other countries, used with permission. aptX is a trademark of Qualcomm Technologies International, Ltd., registered in the United States and other countries, used with permission.



Specifications

DSB50BT

■ Speaker section

| | |
|-------|---|
| Type: | 40 mm full range × 2 40 × 83 mm passive radiator × 1 |
|-------|---|

■ Bluetooth section

| | |
|--------------------------------|-------------------------------------|
| Communication system: | Bluetooth Specification version 4.1 |
| Compatible Bluetooth profiles: | A2DP/AVRCP/HFP |
| Supported codecs: | aptX Low Latency/AAC/SBC |
| Supported content protection: | SCMS-T method |


■ General

| | |
|-------------------------------|-----------------------------------|
| Input | 5 V $\overline{\text{---}}$ 2.1 A |
| Power consumption (power off) | 0.3 W |
| Battery | |
| Operating life | 10 hours |
| Charging time | 2.5 hours |
| Splash-proof specifications | Equivalent to IPX7 |

* For purposes of improvement, specifications and design are subject to change without notice.



 ■ Dimensions (Unit : mm)

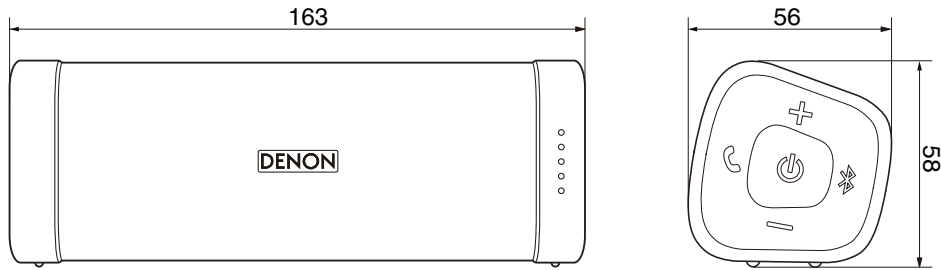

■ Weight: 393 g



DSB150BT

■ Speaker section

| | |
|-------|---|
| Type: | 40 mm full range × 2 40 × 83 mm passive radiator × 1 |
|-------|---|

■ Bluetooth section

| | |
|--------------------------------|-------------------------------------|
| Communication system: | Bluetooth Specification version 4.1 |
| Compatible Bluetooth profiles: | A2DP/AVRCP/HFP |
| Supported codecs: | aptX Low Latency/AAC/SBC |
| Supported content protection: | SCMS-T method |



■ General

| | |
|-------------------------------|-----------------------------------|
| Input | 5 V $\overline{\text{---}}$ 2.1 A |
| Power consumption (power off) | 0.3 W |
| Battery | |
| Operating life | 11 hours |
| Charging time | 3.0 hours |
| Splash-proof specifications | Equivalent to IPX7 |

* For purposes of improvement, specifications and design are subject to change without notice.



  ■ Dimensions (Unit : mm)

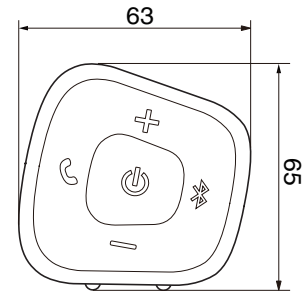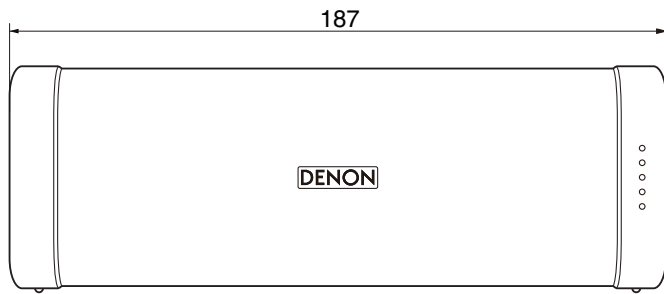

■ Weight: 530 g



DSB250BT

■ Speaker section

| | |
|-------|--|
| Type: | 40 mm full range × 2 53 × 135 mm passive radiator × 1 |
|-------|--|

■ Bluetooth section

| | |
|--------------------------------|-------------------------------------|
| Communication system: | Bluetooth Specification version 4.1 |
| Compatible Bluetooth profiles: | A2DP/AVRCP/HFP |
| Supported codecs: | aptX Low Latency/AAC/SBC |
| Supported content protection: | SCMS-T method |



■ General

| | |
|-------------------------------|-----------------------------------|
| Input | 5 V $\overline{\text{---}}$ 2.1 A |
| Power consumption (power off) | 0.3 W |
| Battery | |
| Operating life | 13 hours |
| Charging time | 3.5 hours |
| Splash-proof specifications | Equivalent to IPX7 |

* For purposes of improvement, specifications and design are subject to change without notice.



  ■ Dimensions (Unit : mm)

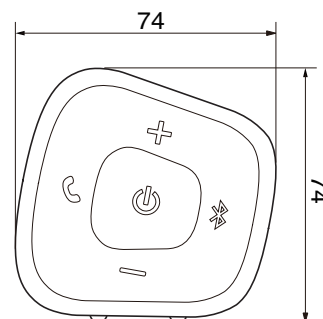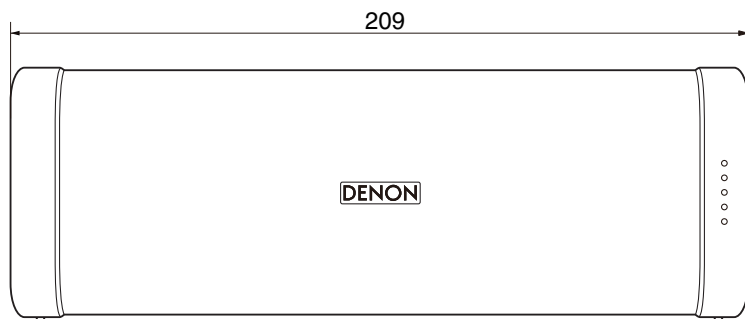

■ Weight: 740 g



Index

| | | | | | |
|------------------------------|----|-----------------------------------|----|------------------------------|----|
| A | | M | | T | |
| Accessories | 4 | Multipoint function | 15 | Troubleshooting | 22 |
| AUX auto off function | 10 | P | | Turning the power off | 10 |
| B | | Pairing | 11 | Turning the power on | 10 |
| Basic operations | 17 | Playback Bluetooth device | 11 | U | |
| C | | R | | USB Cable | 8 |
| Charging | 8 | Remaining battery indicator | 9 | V | |
| F | | Restarting the unit | 26 | Volume adjustment | 17 |
| Features and functions | 6 | S | | W | |
| H | | Stereo mini plug cable | 18 | Wired connection (AUX) | 18 |
| Hands-free function | 19 | | | | |



Safety Instructions (Read these safety instructions before operating the unit.)

DENON

SAFETY PRECAUTIONS



CAUTION:
TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings.
8. Install in accordance with the manufacturer's instructions.
9. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
10. Protect the USB cable from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/appliance combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled on or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Batteries shall not be exposed to excessive heat such as sunshine, fire, or the like.

WARNINGS

NOTES ON USE

- Avoid high temperatures.
- Keep the unit free from moisture, water, and dust.
- Do not let insecticides, benzene, and thinner come in contact with the unit.
- Never disassemble or modify the unit in any way.
- Naked flame sources such as lighted candles should not be placed on the unit.
- Do not expose the unit to dripping or splashing fluids.
- Do not place objects filled with liquids, such as vases, on the unit.
- When the switch is in the OFF (STANDBY) position, the equipment is not completely switched off from MAINS.
- Do not bend forcibly the plug on the equipment for the connection between the connector and micro USB/USB cable.

DECLARATION OF CONFORMITY

Our products following the provisions of ECEU directives, that as follows:
LV: 2014/35/EU
EMC: 2014/30/EU
RoHS: 2011/65/EU
RE: 2014/53/EU

Rechargeable battery precautions

- Do not toss the rechargeable battery into a fire, and do not heat up the battery. Doing so could cause battery heat generation, battery fires, and battery rupture.
- Do not subject the rechargeable battery to strong impact forces, such as stabbing it with sharp objects (a nail, etc.), tapping it with a hammer, or stepping on it. Doing so could cause battery heat generation, battery fires, and battery rupture.
- Do not place foreign objects inside this unit. Doing so could cause fires and electrical shocks.
- Do not charge, use, or place this unit in high-temperature locations such as near heaters and stove burners, in areas exposed to direct sunlight, or inside a car on a hot day. Doing so could cause battery heat generation, battery fires, and battery rupture.



Such actions could also affect the performance and shorten the life of the internal rechargeable battery.

• Stop using this unit immediately, and contact the sales outlet or DENON in the event that abnormal odors or heat generation occurs while using, charging, or storing this unit, or if other abnormalities such as discoloration, etc., are detected.

- Always observe the following precautions:
 - Do not place this unit in a microwave oven or in a high-pressure container.
 - Do not place this unit on top of an electromagnetic cooker.
 - Do not attempt to recharge the internal rechargeable battery by connecting it to a power outlet or a car's cigarette lighter socket.
- Strictly observe the recharging procedure and conditions specified by DENON.
- If fluid should leak from the rechargeable battery and get into the eyes, do not rub the eyes. Instead, rinse the eyes thoroughly with tap water, etc., and see a doctor without delay for treatment. Leaving the eyes untreated could cause vision impairment.
- Do not use this unit near medical devices, automatic doors, or fire alarms, etc. Signals from this unit could interfere with the operation of those devices, possibly causing malfunctions and accidents.
- If recharging fails to complete even though the prescribed recharging time period has elapsed, stop the recharging operation. Continuing to recharge the battery could cause battery heat generation, battery fires, and battery rupture.

NOTE ABOUT RECYCLING:

This product's packaging materials are recyclable and can be reused. Please dispose of any materials in accordance with the local recycling regulations.

When discarding the unit, comply with local rules or regulations. Batteries should never be thrown away or incinerated but disposed of in accordance with the local regulations concerning battery disposal.

This product and the supplied accessories, excluding the batteries, constitute the applicable product according to the WEEE directive.



Pb

WARNHINWEISE

HINWEISE ZUM GEBRAUCH

- Vermeiden Sie hohe Temperaturen.
- Halten Sie das Gerät von Feuchtigkeit, Wasser und Staub fern.
- Lassen Sie das Gerät nicht mit Insektiziden, Benzin oder Verdünnungsmitteln in Berührung kommen.
- Versuchen Sie niemals das Gerät auseinander zu nehmen oder zu verändern.
- Auf dem Gerät sollten keinerlei direkte Feuerquellen wie beispielsweise angezündete Kerzen aufgestellt werden.
- Das Gerät sollte keiner tropfenden oder spritzenden Flüssigkeit ausgesetzt werden.
- Auf dem Gerät sollten keine mit Flüssigkeit gefüllten Behälter wie beispielsweise Vasen aufgestellt werden.
- Wenn der Schalter ausgeschaltet ist (OFF (STANDBY)-Position), ist das Gerät nicht vollständig vom Stromnetz (MAINS) abgetrennt.
- Der Stecker am Gerät darf beim Anschließen des Anschlusses und Micro-USB/USB-Kabels nicht mit Gewalt gebogen werden.

ÜBEREINSTIMMUNGSERKLÄRUNG

Unsere Produkte unterliegen den Bestimmungen der folgenden ECEU-Richtlinien:
LV: 2014/35/EU
EMC: 2014/30/EU
RoHS: 2011/65/EU
RE: 2014/53/EU

AVVERTIMENTI

OSSERVAZIONI RELATIVE ALL'UTILIZZAZIONE

- Evitare delle temperature elevate.
- Protegga l'appareil contre l'humidité, l'eau et la poussière.
- Ne pas mettre en contact des insecticides, du benzène et un diluant avec l'appareil.
- Ne jamais démonter ou modifier l'appareil d'une manière ou d'une autre.
- Ne jamais placer de flamme nue sur l'appareil, notamment des bougies allumées.
- L'appareil ne doit pas être exposé à l'eau ou à l'humidité.
- Ne pas poser d'objet contenant du liquide, par exemple un vase, sur l'appareil.
- Lorsque l'interrupteur est sur la position OFF (STANDBY), l'appareil n'est pas complètement déconnecté du SECTEUR (MAINS).
- Ne pliez pas la fiche sur l'appareil en forçant pour connecter la borne au câble micro USB/USB.

DECLARAZIONE DI CONFORMITÀ

Nos produits sont conformes aux dispositions des directives CE/UE suivantes:
LV: 2014/35/EU
EMC: 2014/30/EU
RoHS: 2011/65/EU
RE: 2014/53/EU

AVVERTENZE

NOTE SULL'USO

- Evitare di esporre l'unità a temperature elevate.
- Teneva l'unità lontana dall'umidità, dall'acqua e dalla polvere.
- Assicurarsi che l'unità non entri in contatto con insetticidi, benzolo o solventi.
- Non smontare né modificare l'unità in alcun modo.
- Non posizionare sull'unità fi amme libere, come ad esempio candele accese.
- L'apparecchiatura non deve essere esposta a goccioli o spruzzi.
- Non posizionare sull'unità alcun oggetto contenente liquidi, come ad esempio i vasi.
- Quando l'interruttore è nella posizione OFF (STANDBY), l'apparecchiatura non è completamente scollegata da MAINS.
- Non piegare con forza lo spinotto sull'apparecchio per effettuare il collegamento tra il connettore e il cavo micro USB/USB.

DICHIARAZIONE DI CONFORMITÀ

I nostri prodotti sono conformi a quanto previsto dalle direttive ECEU, come specificato di seguito:
LV: 2014/35/EU
EMC: 2014/30/EU
RoHS: 2011/65/EU
RE: 2014/53/EU

ADVERTENCIAS

NOTAS SOBRE EL USO

- Evite altas temperaturas.
- Mantenga el equipo libre de humedad, agua y polvo.
- No permita el contacto de insecticidas, gasolina y diluyentes con el equipo.
- Nunca desarme o modifique el equipo de ninguna manera.
- No deberá colocarse sobre el aparato fuentes inflamables sin protección, como velas encendidas.
- No exponer el aparato al goteo o salpicaduras cuando se utilice.
- No colocar sobre el aparato objetos llenos de líquido, como jarras.
- Cuando el interruptor está en la posición OFF (STANDBY), el equipo no está completamente desconectado de la alimentación MAINS.
- No doble a la fuerza la clavija del equipo para la conexión entre el conector y el cable micro USB/USB.

DECLARACIÓN DE CONFORMIDAD

Nuestros productos cumplen las disposiciones de las directivas de la CE/UE siguientes:
LV: 2014/35/EU
EMC: 2014/30/EU
RoHS: 2011/65/EU
RE: 2014/53/EU

WAARSCHUWINGEN

ALVORENS TE GEBRUIKEN

- Vermijd hoge temperaturen.
- Laat geen vochtigheid, water of stof in het apparaat binnendringen.
- Voorkom dat insecticiden, benzene of verdunder met het toestel in contact komen.
- Dit toestel mag niet gedomonteerd of aangepast worden.
- Plaats geen open vlammen, bijvoorbeeld een brandende kaars, op het apparaat.
- Stel het apparaat niet bloot aan druppels of spatten.
- Plaats geen voorwerpen gevuld met water, bijvoorbeeld een vaas, op het apparaat.
- Als de schakelaar op OFF (STANDBY) staat, is het apparaat niet volledig losgekoppeld van de netspanning (MAINS).
- Buig de stekker op het apparaat niet geforceerd voor de verbinding tussen de aansluiting van de micro-USB/USB-kabel.

EENVORMIGHEIDSVERKLARING

I nostri prodotti sono conformi alle disposizioni delle direttive ECEU, come specificato di seguito:
LV: 2014/35/EU
EMC: 2014/30/EU
RoHS: 2011/65/EU
RE: 2014/53/EU

VARNINGAR

OBSERVERA ANGÅENDE ANVÄNDNINGEN

- Undvik höga temperaturer.
- Utsätt inte apparaten för fukt, vatten och damm.
- Se till att inte insektmedel på spraybråk, bensin och thinner kommer i kontakt med apparatens hölje.
- Ta inte isär apparaten och försök inte bygga om den.
- Placera inte öppen eld, t.ex. tända ljus, på apparaten.
- Apparaten får inte utsättas för vätska.
- Placera inte föremål fyllda med vätska, t.ex. vasar, på apparaten.
- Även om strömbrytaren står i ett avstängd läge OFF (STANDBY), så är utrustningen inte helt bortkopplad från det elektriska nätet (MAINS).
- Böj inte kontakten på anslutningsutrustningen för mycket när du ansluter den med USB/USB-kabeln med mikrokontakt.

ÖVERENSSTÄMMELESINTYG

Våra produkter uppfyller följande föreskrifter i EC/ EU-direktiv:
LV: 2014/35/EU
EMC: 2014/30/EU
RoHS: 2011/65/EU
RE: 2014/53/EU

ПРЕДОСТЕРЕЖЕНИЕ

ЗАМЕЧАНИЯ ПО ЭКСПЛУАТАЦИИ

- Избегайте высоких температур.
- Не подвергайте устройство воздействию влаги, воды и пыли.
- Предотвращайте попадание на устройство аэрозолей, бензина и растворителей.
- Никогда не разбирайте и не модифицируйте устройство.
- Не размещайте на поверхности аппарата источники открытого огня, например свечи.
- Следите, чтобы на устройство не проливалась вода.
- Не размещайте устройства, в которых содержится вода, на устройстве.
- Когда переключатель находится в положении OFF (STANDBY), оборудование не полностью отключено от MAINS (электрической сети).
- Не сгибайте вилку оборудования с усилием для подключения разъема и кабеля micro USB/USB.

СЕРТИФИКАТ СОТВЕТСТВИЯ

Наша продукция соответствует следующим положениям директивы ЕАС:
TR CU 004/2011
TR CU 02/2011



Меры предосторожности при обращении с аккумуляторной батареей

• Не бросайте аккумуляторную батарею в огонь и не нагревайте аккумулятор. Это может привести к генерации тепла в аккумуляторной батарее, взгоранию или разрыву аккумуляторной батареи.

• Не подвергайте аккумуляторную батарею сильным ударам, таким как прокалывание острыми предметами (газдами и т.д.) с помощью молотка или настилом на нее. Это может вызвать генерацию тепла в аккумуляторной батарее, взгоранию или разрыву.

• Не кладите посторонние предметы в данное устройство. Это может привести к взгоранию и поражению электрическим током.

• Не разбирайте, не используйте и не помещайте данное устройство в условия высокой температуры, например, возле обогревателей и газовых горелок, в места, подверженные воздействию прямого солнечного света, или в автомобиль в жаркий день. Это может привести к генерации тепла в аккумуляторной батарее, взгоранию или разрыву аккумуляторной аккумулятора.

• Немедленно прекратите использование данного устройства и обратитесь в торговую точку или DENON в случае появления запахов или чрезмерного нагрева при использовании, зарядке или хранении данного устройства, или если обнаружены другие признаки отклонения от нормы, например, обесцвечивание и т.п.

• Всегда соблюдайте следующие меры предосторожности:

- Не кладите данное устройство в микроволновую печь или в контейнер высокого давления.
- Не кладите данное устройство на электромагнитную плитку.

• Если электролит вытек из аккумуляторной батареи и попал в глаза, не трите их. Вместо этого тщательно промойте глаза большим количеством воды и немедленно обратитесь к врачу за медицинской помощью. Если этого не сделать, может произойти ухудшение зрения.

• Не используйте данное устройство вблизи медицинских устройств, автоматических дверей или пожарной сигнализации и др. Сигналы через данное устройство могут влиять на работу этих устройств, что может стать причиной несчастий и несчастных случаев.

• Если зарядка не завершена даже при завершении заданного времени зарядки, прекратите зарядку. Попытка продолжить зарядку батареи может привести к генерации тепла в батарее, взгоранию или разрыву.

ПРИМЕЧАНИЕ О ПЕРЕРАБОТКЕ:

Упаковочный материал данного продукта может быть переработан и повторно использован. Пожалуйста, сортируйте материалы в соответствии с местными требованиями переработки. При утилизации отдельных блоков соблюдайте местные правила утилизации.

Наше устройство не содержит батарей, и не содержит местные правила утилизации химических отходов.

Данный продукт и аксессуары в упаковке соответствуют директиве WEEE, исключая батареи.

OSTRZEŻENIE

 
WSKAZÓWKI DOTYCZĄCE OBSŁUGI

- Unikaj wysokich temperatur.
- Chroni urządzenie przed wilgocią, wodą i pyłem.
- Chroni urządzenie przed kontaktem z brokami owaodobojnymi, benzyną oraz rozpuszczalnikami.
- Nie rozbiiraj urządzenia oraz nie dokonuj w nim żadnych modyfikacji.
- Na urządzeniu nie wolno stawiać żadnych źródeł otwartego ognia, np. zapalonych świec.
- Chroni urządzenie przez zachlapianiem lub kapaniem wszelkiej cieczy.
- Nie stawiaj na urządzeniu żadnych przedmiotów napełnionych wodą, np. wazonów.
- Gdy wyłącznik znajduje się w położeniu OFF (STANDBY), urządzenie nie jest całkowicie odłączone od MAINS (zasilania).
- Nie zgijaj na siłę wtyczki w urządzeniu, gdy podłączasz przewód micro USB/USB do złącza.

DEKLARACJA ZGODNOŚCI

Nasze produkty zgodnie z postanowieniami KE/UE, tj.
LV: 2014/35/EU
EMC: 2014/30/EU
RoHS: 2011/65/EU
RE: 2014/53/EU

LOCATION : BOTTOM
位置 : 底面
位置 : 底面

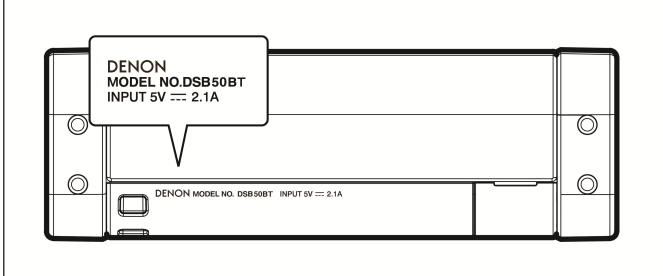

Radio Specification (for Europe model)

| Type | Frequency Range | Max. RF Power |
|-----------|-------------------|---------------|
| Bluetooth | 2,402 ~ 2,480 MHz | 20 dBm |

* Note: The above specifications is based on the RE Directive. There is a possibility to varies by countries.

D&M Europe B.V.
Beemdsstraat 11, 5653 MA Eindhoven, The Netherlands
EU declaration of conformity URL:
<http://manuals.denon.com/CEdeclaration>

D&M Holdings Inc.
5431 10560 00AD

DENON®
www.denon.com

D&M Holdings Inc.
3520 10564 00AD