

### **Operational Description for SCR331-DI:**

The SCR331-DI USB smart card reader connects to the host through the USB port. The reader can read all ISO7816 compliant smart cards and also ISO14443 compliant cards. To install the device, plug the device into the USB port of the host system. The plug-n-play manager shall come up requesting for drivers. Point it to the location where the drivers have been unzipped (after download) or to pick drivers off Windows Update. Windows shall prompt you with message on successful installation of device. To read an ISO7816 compliant smart card, insert card into the reader slot with the contacts facing up. The reader shall automatically reset the card. Subsequent communication is initiated by the software running on the host PC. To read an ISO14443 compliant card, place the card on top of the reader. The reader shall detect the card in range and start communicating with it.