



## User Manual

# uTrust TS Contact WallMount Reader 8116 Version 1.0

**Confidential**

<b>Author</b>	Sixtus Stanly
<b>Version</b>	1.0
<b>Date</b>	11-Aug-2020
<b>Document no</b>	811601_UM

# Document History

<b>Version</b>	<b>Date</b>	<b>Description of Change</b>	<b>Author</b>
1.0	11-Aug-2020	Initial Release	Sixtus Stanly

# uTrust TS Contact Wallmount Reader

## Contents

<b>1.0</b>	<b>Introduction .....</b>	<b>4</b>
<b>2.0</b>	<b>Reader .....</b>	<b>4</b>
2.1	Functionality .....	4
2.2	Front/Top Casing View .....	5
2.3	Rear View w/o back plate .....	6
<b>3.0</b>	<b>Product details .....</b>	<b>8</b>
<b>4.0</b>	<b>Specifications .....</b>	<b>8</b>
<b>5.0</b>	<b>Product Label .....</b>	<b>8</b>
<b>6.0</b>	<b>Product Certification ID's .....</b>	<b>9</b>
6.1	FCC Certification ID – MBPTSWMSC-00.....	9
6.2	IC Certification ID – 7485A-TSWMSCR0 .....	9
<b>7.0</b>	<b>Installation details .....</b>	<b>9</b>
7.1	Parts List.....	9
7.2	Recommended Infrastructure .....	9
7.3	Connector Information .....	10
7.3.1	Pinout diagram .....	10
7.4	Mounting the Reader .....	11
7.4.1	Reference for location of mounting holes on the wall .....	11
7.4.2	Reader Installation Steps .....	12
<b>8.0</b>	<b>Power up and Testing .....</b>	<b>13</b>
<b>9.0</b>	<b>Certifications .....</b>	<b>15</b>
9.1	FCC.....	15
9.2	ISED .....	15
9.3	CE .....	15

# uTrust TS Contact Wallmount Reader

## 1.0 Introduction

This document details the Physical Access Control Reader **uTrust TS Contact Wallmount Reader** and its basic user instruction and installation procedures.

The 8116 reader extends the features supported by the **8110** readers, by adding interfaces for accessing a Contact Smart Card and a SAM interface. The contact interface enables users to securely access their contact smart cards. The addition of a SAM interface enables end users to load a SAM module for enhanced/ secure card read operations and support for third party proprietary protocols.

The reader supports Wiegand and RS485 (OSDP protocol) interfaces for communications to the control panel.

## 2.0 Reader

### 2.1 Functionality

**8116** is a physical access control smart card reader (accessory equipment) that can read the following credentials

- Contactless HF (13.56MHz) conforming with ISO 14443 A & B, ISO15693

- Contactless LF (125KHz) credentials of type FSK, ASK, PSK


- Contact Smartcards – conforming to ISO-7816 in the ID-1 formfactor

- User-feedback interfaces on the reader include RGB LED's and Buzzer.

- The reader can be interfaced with an access control panel equipped with a Wiegand or an RS485 half-duplex interface


# uTrust TS Contact Wallmount Reader

## 2.2 Front/Top Casing View

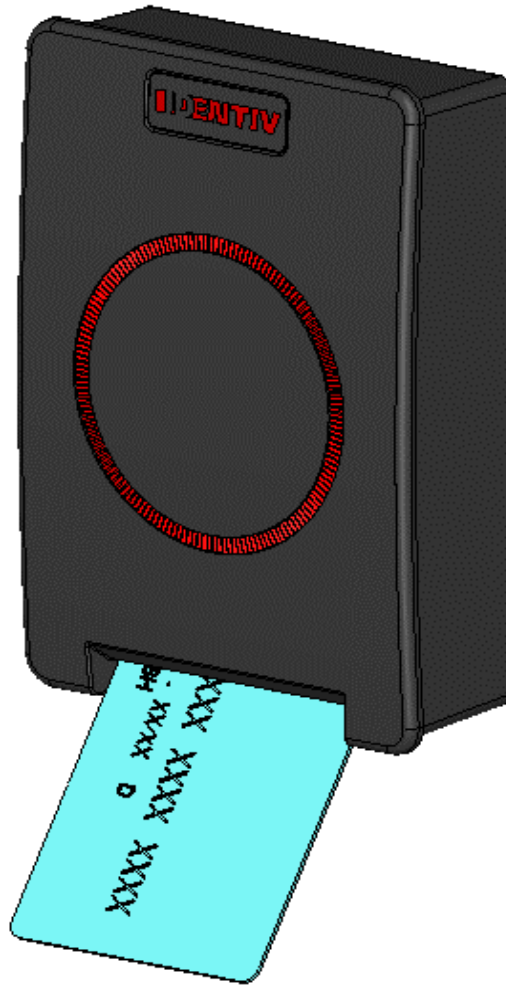


# uTrust TS Contact Wallmount Reader

## 2.3 Rear View w/o back plate

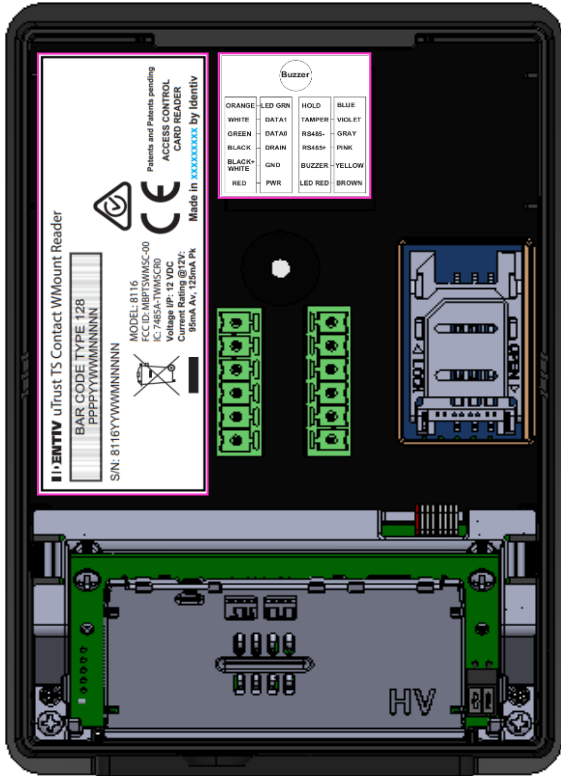


Reader with Terminal connector

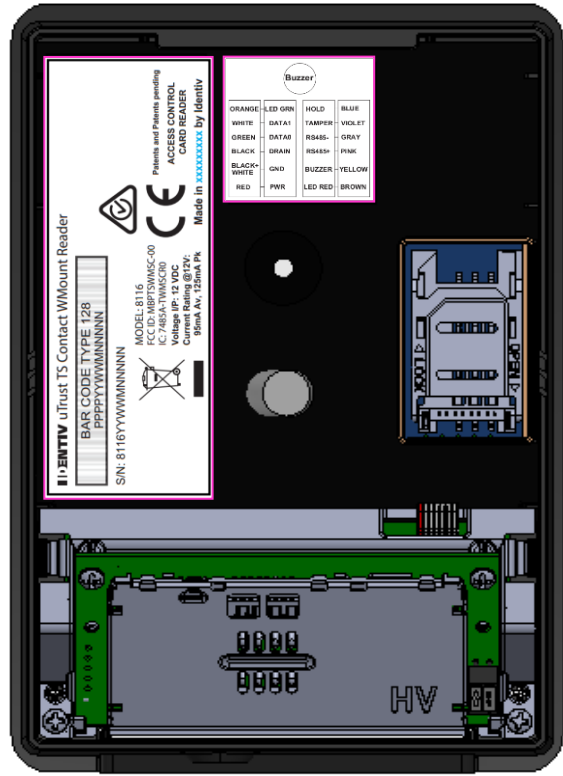


Reader with Pigtail cable

# uTrust TS Contact Wallmount Reader

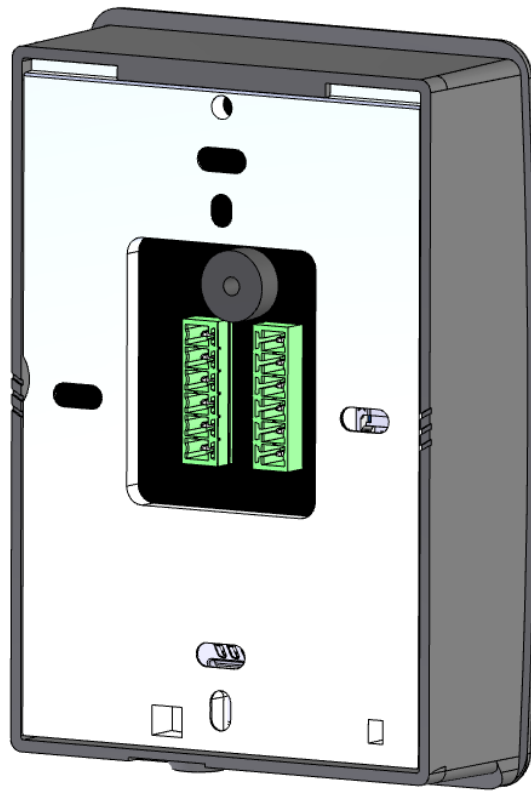

Rear View with Backplate

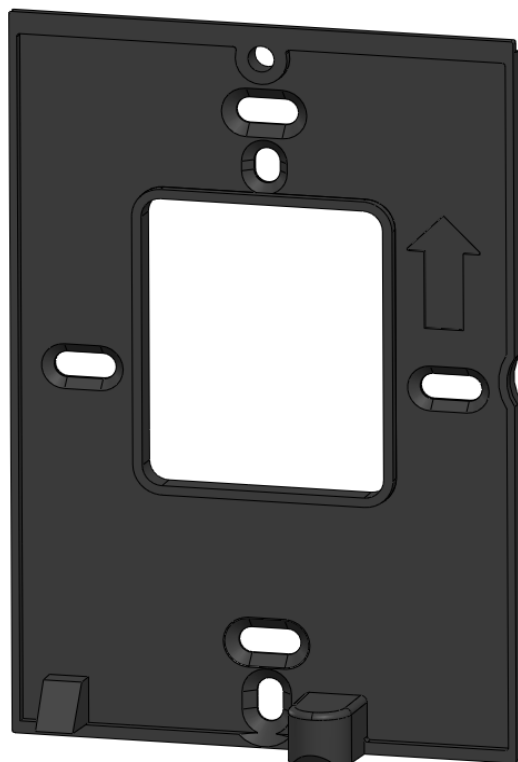

Back plate

# uTrust TS Contact Wallmount Reader

## 3.0 Product details

Model Name : 8116

Device Type : RFID reader, 13.56MHz (HF) / 125 KHz (LF), with Contact smartcard Slot for ID-1 sized cards and SAM slot.  
Physical Access control Reader (accessory equipment)

Type of equipment : Potted Reader, Suitable for Indoor use

Interface Type : Phoenix connectors and Pigtail cable

Voltage Rating : 12V DC


Current Rating @12V : Peak Current - 125 mA, Average Current - 95 mA

Communication protocol : Wiegand, RS485 (2wire - Half Duplex)

## 4.0 Specifications

Model	Operating Voltage	Current	Operating temp	Operating humidity
8116 uTrust TS Contact WallMount Reader	12 VDC	Av : 95mA Pk : 125mA	0 to +49 deg C	85 +/-5 % RH

## 5.0 Product Label

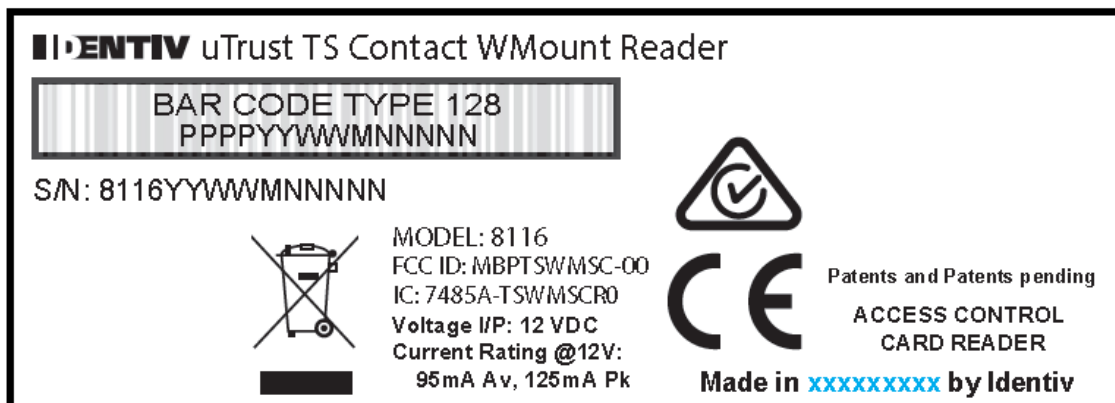



# uTrust TS Contact Wallmount Reader

## 6.0 Product Certification ID's

6.1 FCC Certification ID – **MBPTSWMSC-00**

6.2 IC Certification ID – **7485A-TSWMSCR0**

## 7.0 Installation details

Wiring methods shall be in accordance with the National Electrical Code (ANSI/NFPA70), local codes, and the authorities having jurisdiction.

### 7.1 Parts List

- TS Contact Wallmount reader -1
- Screws (A #6-18X1.5" SS) - 4Nos – Back Plate mounting screws for Wall
- Snake Eye Screw (SMF #6-32X5/16" SS) – 1 No- Top casing mounting security screw
- Screws (SMF #6-32x3/8" SS) - 3 No's - 1 casing to back plate mounting screw and 2 Junction Box mounting screws
- Nylon anchor plug -4 Nos
- 6 pin phoenix plug (Phoenix connector version only) – 2 Nos
- Back Plate


### 7.2 Recommended Infrastructure

- All cabling and wiring shall be UL Listed and/or UL Recognized
- Cable Wiegand - 22AWG Shielded cable or better.
- Cable RS485 - 24AWG STP or better  
Cabling shall comply with UL2556 VW-1 for IEC62368 complaint installations
- Power Supply - Class 2 Linear DC PSU - 12 V, 1A min.  
(for uL compliant installations)  
ES1 / PS2 Linear DC PSU - 12 V, 1A min.  
(for IEC 62368 compliant installations)

# uTrust TS Contact Wallmount Reader

## 7.3 Connector Information

### 7.3.1 Pinout diagram

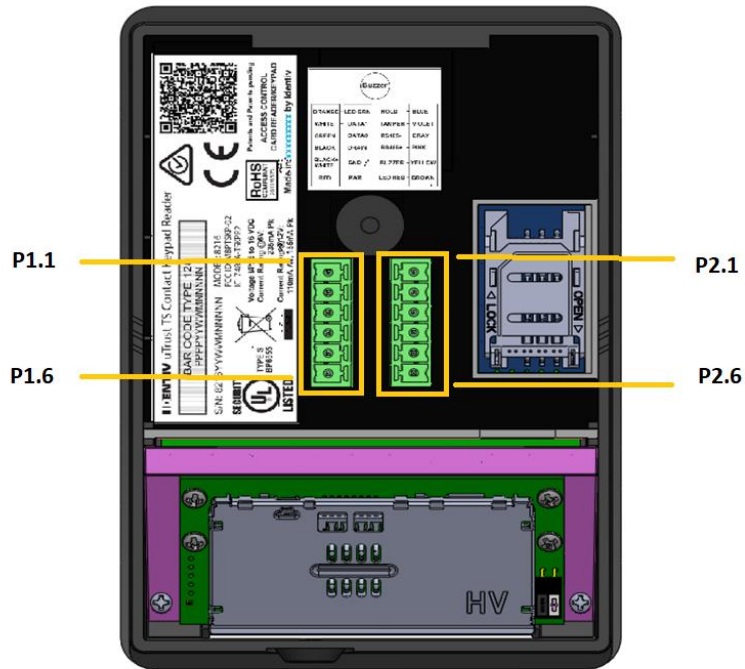

Pin Number	Pin Function	Wire Color
P1.1	LED Green	Orange
P1.2	Wiegand Data 1	White
P1.3	Wiegand Data 0	Green
P1.4	Shield Ground/ Drain	Black
P1.5	Ground	Black & White
P1.6	+ 12 VDC (nominal)	Red
P2.1	Hold	Blue
P2.2	Tamper Output	Violet
P2.3	RS485 –	Grey
P2.4	RS485 +	Pink
P2.5	Buzzer	Yellow
P2.6	LED Red	Brown

- Shield Ground/ Drain – Black wire should be connected to the cable shield.


#### Caution:

During Wiring make sure that the +VDC lines does not make contact with any other cables, as it might affect reader functionality/ cause damage to the reader.

# uTrust TS Contact Wallmount Reader

## 7.4 Mounting the Reader

### 7.4.1 Reference for location of mounting holes on the wall

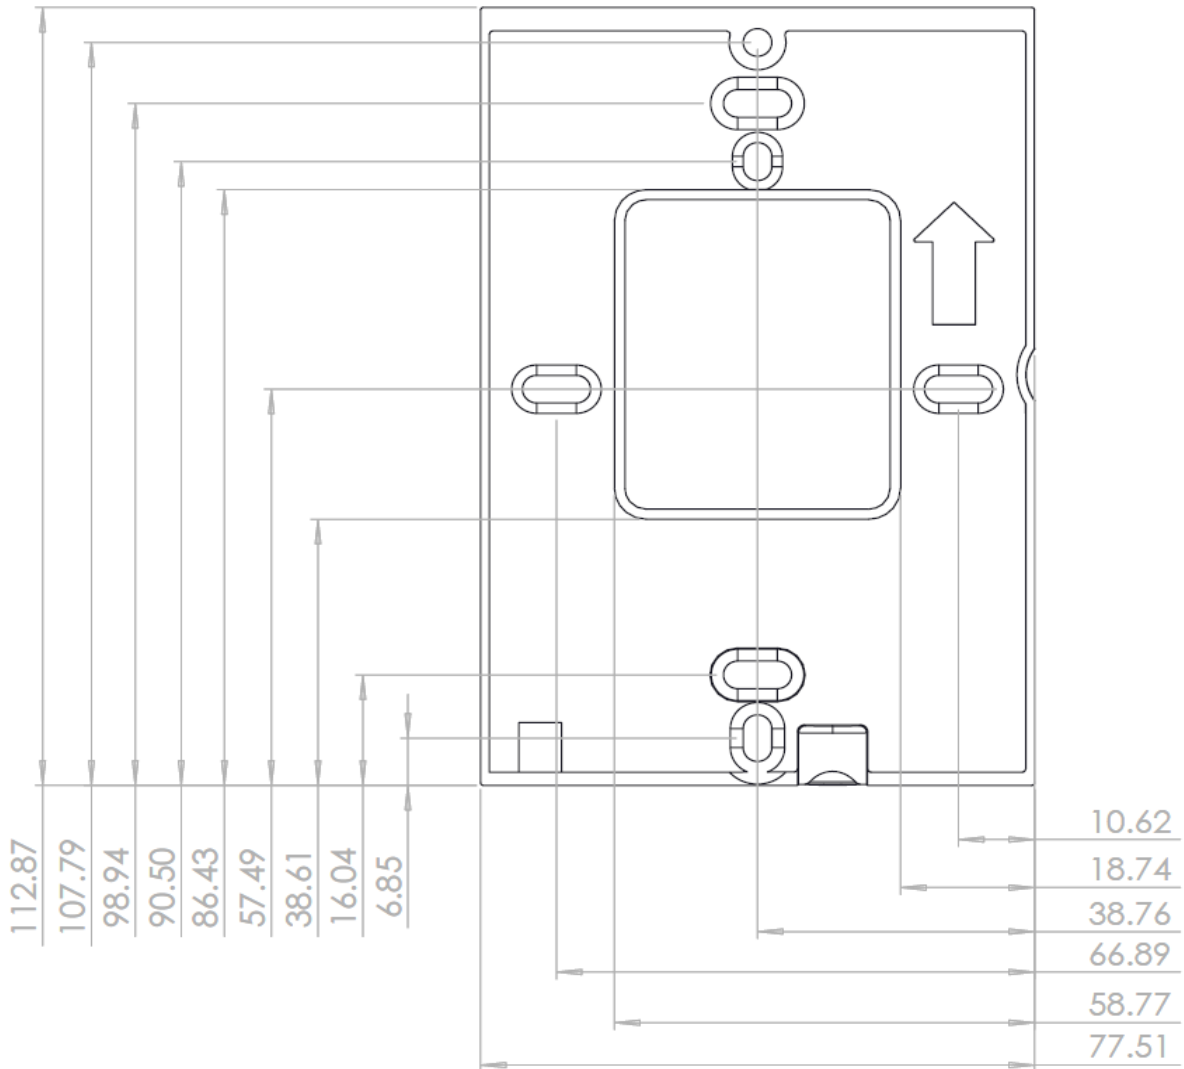


Phoenix connector Reader – 4 Holes and 1 Slot


# uTrust TS Contact Wallmount Reader

## 7.4.2 Reader Installation Steps

- a. Make the required holes on the wall as per the backplate drawing above.
- b. The reader is to be mounted at a height less than 2 meters from the floor for MS1 compliance as per IEC 62368-1
- c. Insert the nylon screw plugs into the wall.
- d. Connect the wires as per the Table 2 or Table 3.
- e. Secure the backplate onto the wall using the Screws (A #6-18X1.5" SS )
- f. Hook the reader onto the backplate
- g. Secure the reader and backplate by the Snake Eye Screw (SMF #6-32X5/16" SS)

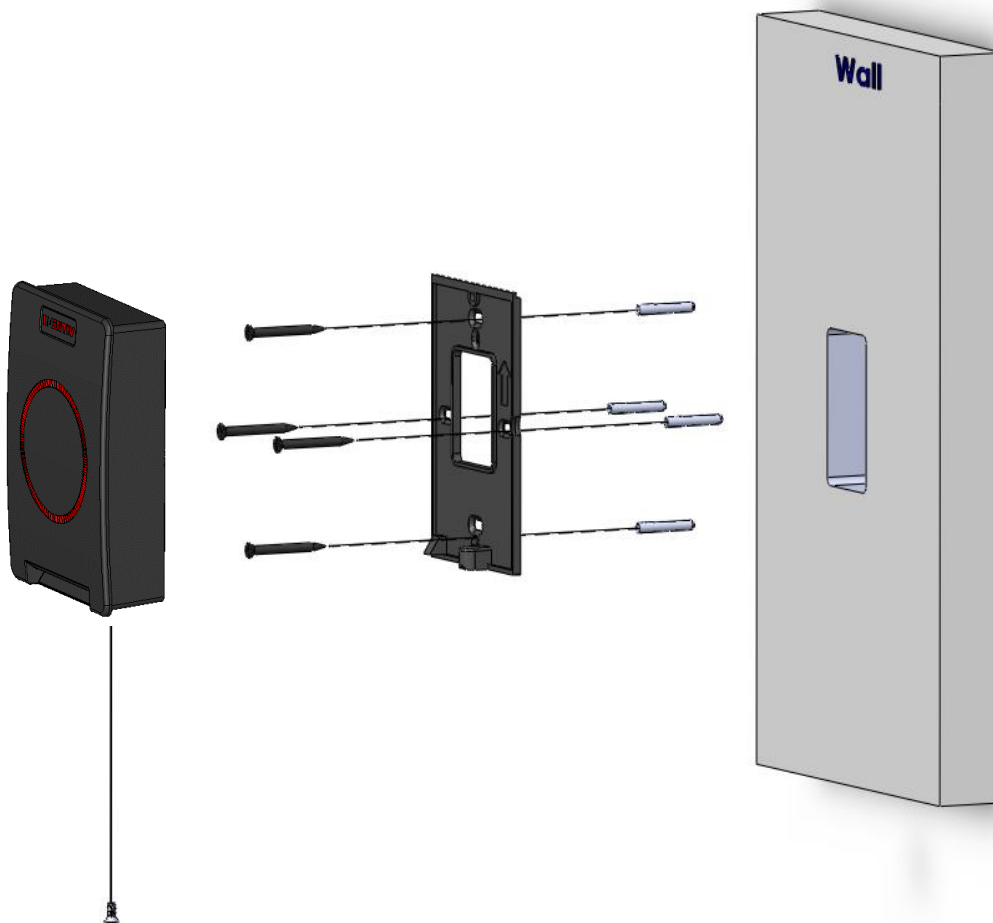


## uTrust TS Contact Wallmount Reader

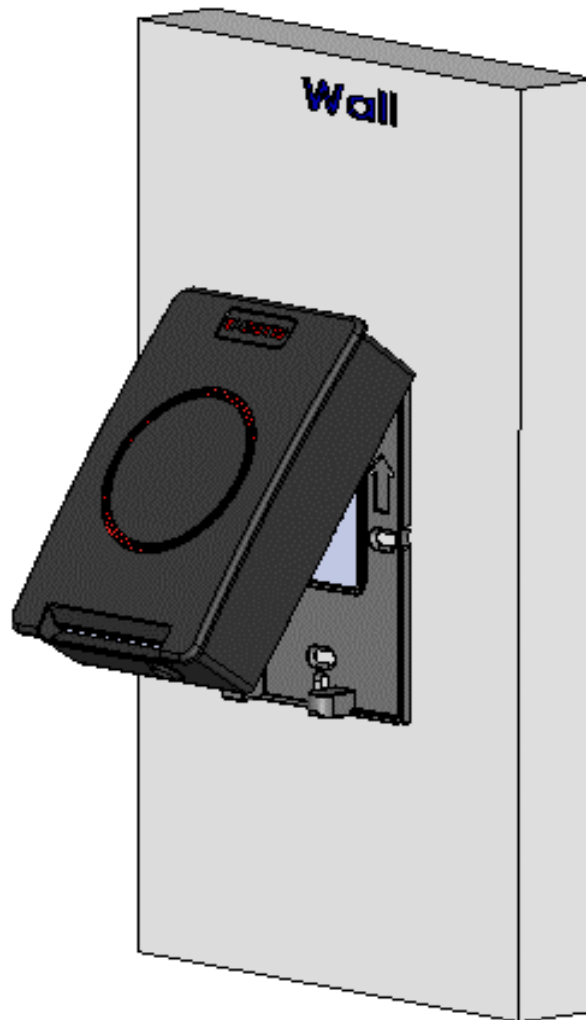

### 8.0 Power up and Testing

- 1 **Turn power on**  
The LED blinks 3 times green with a long beep, then turns red
- 2 **Present a card**  
Contactless card - The LED blinks green, and a short Beep is heard  
Contact card - The LED blinks Green and a short Beep is heard

# uTrust TS Contact Wallmount Reader

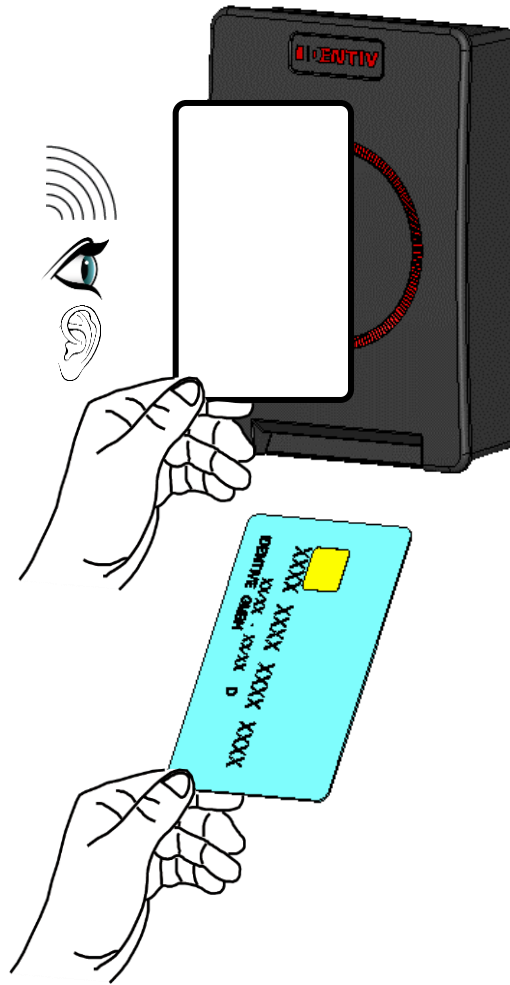

# uTrust TS Contact Wallmount Reader

## 9.0 Certifications

### 9.1 FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### Information to user

Changes or modifications not expressly approved by **Identiv** could void the user's authority to operate the equipment.

### 9.2 ISED

This device complies with Innovation, Science and Economic Development Canada's license-exempt RSS standard(s).

Operation is subject to the following two conditions.

- (1) This device may not cause interference
- (2) This device must accept any interference, including interference that may cause undesired operation of the device

Cet appareil est conforme de licence d'Innovation, Sciences et Développement économique Canada - aux normes RSS exemptes.

Le fonctionnement est soumis aux deux conditions suivantes:

- (1) Cet appareil ne doit pas provoquer d'interférences
- (2) Cet appareil doit accepter toute interférence, y compris les interférences pouvant fonctionnement indésirable de l'appareil

### 9.3 CE

**Identiv** hereby declares that the uTrust TS Contact WallMount Reader Model 8116 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.