

## **ATTACHMENT M – USER’S MANUAL**


---

# *Operating Manual*

 










**- NXC-3300 -**

# 1. Getting Started

## 1.Phone Parts and Function Key Description

Function Key	Description
<b>Red Light</b>	Light up when using power key to turn on the phone and when giving a charge of electricity to a storage battery
<b>Green Light</b>	Light up when there are incoming calls and message, and that finished a charge of electricity to a storage battery completely
<b>LCD Screen</b>	Display the messages and indicator icons.
<b>SEND Key</b>	Places and receives a call.
<b>END Key</b>	Disconnect a call. Also exits all the way out of a menu back to the phone's standby display without change any setting.
 <b>Key</b>	Allows quick access to the text and voice mail notification messages.
<b>Folder switch</b>	Close : Disconnects a call. Open : Answers a received call.
<b>CLR Switch</b>	Clears letters, numbers or returns to the previous menu option. Press once to erase one character. Press and hold to erase all characters and to go back to the standby display.
<b>SIDE 1, 2 Key</b>	Earpiece Volume Controls.
<b>SIDE 3 Key</b>	Ringer Mute. Enter to the WAP Menu.
<b>UP Key</b>	Scroll up on Menu. Enter to the SMS mode in the standby state.
<b>DOWN Key</b>	Scroll up on Menu. Act WAP browser in the standby state.
<b>LEFT Key</b>	Shift left.
<b>RIGHT Key</b>	Shift right.
<b>SOFT 1 Key</b>	Enter the feature menu in the standby state.
<b>SOFT 2 Key</b>	Enter the PhoneBook menu.
<b>1.2.3 ....Key</b>	Input the numbers and the characters. Choose the menu items.

## 2. LCD Icons

ICONS	Description
	<b>Digital Indicator</b> Digital service available.
	<b>No SERVICE</b> The phone is not receiving system signal.
	<b>In use</b> Call is in progress The phone is not display in standby state.
	<b>In vibrator mode</b> Vibration mode.
	<b>Roaming</b> The phone is outside of its home service area.
	<b>Battery level</b> Indicates battery charge level.
	<b>Message</b> Message or page waiting.
	<b>V : voice message</b> There is a voice mail notification message waiting. <b>T : Text message</b> There is a text mail notification message waiting.
	<b>Signal strength</b> The number of lines shown indicates current signal strength.
	<b>Bell</b> Indicate Bell mode.
	<b>Vibration and Bell</b> Indicate vibration and bell mode.

## 2. Basic Functions


### 1. Turning the phone On and Off

#### 1.1 Turning the phone On

**1.1.1. Install a charged battery pack or connect the phone to an external power sources.**

**1.1.2. Press the [END] key for a few seconds with the red light, at the top of the phone flash.**

The LCD displays the initial until the red light, at the top of the phone flash..

If the LCD displays “”, input the password using a soft keys.

#### 1.2 Turning the phone Off

Press and hold the [END] key and release the button.

### 2. Making a Call

**2.1 Make sure the phone is turned on.**

**2.2 Enter the phone number with area code, if needed.**

**2.3 Press the [SEND] key.**

- If the phone is locked, input the lock code and press the [SEND] key.
- “Call failed” indicates that the call did not go through.

**2.4 Press the [END] key to disconnect the call.**

### 3. Correcting Dialing Mistakes.

**3.1 Press the [CLR] key to erase the most recent digit or letter.**

**3.2 Press and hold the [CLR] key for the least 2 seconds to delete all digits or letters.**

### 4. Receiving Calls.

Press the all key except the [END] key, if the ‘Any Key Answer’ is

‘ON’ on the menu. Open the folder or press the [SEND] key in the ON state.

## 5. Call waiting.

While you are in a call, you may hear two beeps indicating another incoming call.

When the call waiting has been enabled, you may put the active call

On hold as you answer the other incoming call.

Check with your cellular service provider about this feature.

**5.1 Press the [SEND] key to receive a waiting call.**

**5.2 Press the [SEND] key again to switch between calls.**

## 6. Mute

This function prevents your voice from being transmitted but

you can still hear the other party's talking.

**6.1 Press the [MENU] soft key and the [1] key for mute while you are in a call.**

**6.2 Press the [MENU] soft key and the [1] key again for cancellation.**

## 7. Reading Last Outgoing Number.

Press the [SEND] key to redial the last dialed number.

You can also redial any of the last ten numbers you have dialed.

Last 10 numbers are stored in the call history list.

## 8. Adjusting the Volume.

You may use the side 1,2 keys to adjust earpiece volume while in a call or stand by state.

The ringer volume can also be adjusted through Menu Feature, and

we can select 4 of "Tone/Volume" on the menu 1.

If you adjust the ringer volume to silent, the LCD displays "-- Ringer Off --" and you won't hear the ringer sound.

The key beep volume can also be adjusted through we select 3 of the menu 1.

## 9. Signal Strength.

The quality of calls depends in the signal strength in your area.

The stronger the signal, the better the call quality the signal strength icon indicates the current strength as a number of bars.

If you are outside of a service area, the “NO Service” icon will be displayed.

No calls can be made or received, including emergency calls.

Extend the antenna when the signal strength is weak.

If you are a building, the reception may be better near a window.

## 10. Emergency Dialing.

As long as your phone is registered on a system, you can place calls to emergency number even if your phone is locked or restricted.

## 11. Manner Mode.

Press the star[\*] key for 2 seconds, and the ring type is set to the vibration mode.

If you want to change for previous condition, press the star[\*] key again for 2 seconds.

## 12. Caller ID

This feature enables the phone number of the calling person to be displayed when you receive the call.

You should check if the cellular service provider provides this feature.

In case the phone number is stored in the memory together with the name, the phone number of calling person and name are displayed on the screen before your answer.

The restricted number message will be displayed, if the phone blocked displaying the calling person's phone number.

In addition, the ‘Unavailable Number’ message will be displayed in case the caller ID can not be used.


The “Missed Call” message will be displayed when you fail to receive the call after power on or fail to answer.

The missed call number will be stored at call history.

## 3. Menu Feature In Idle state

### 1. Main Menu

Menu always you to check or change the phone's various feature and setting.

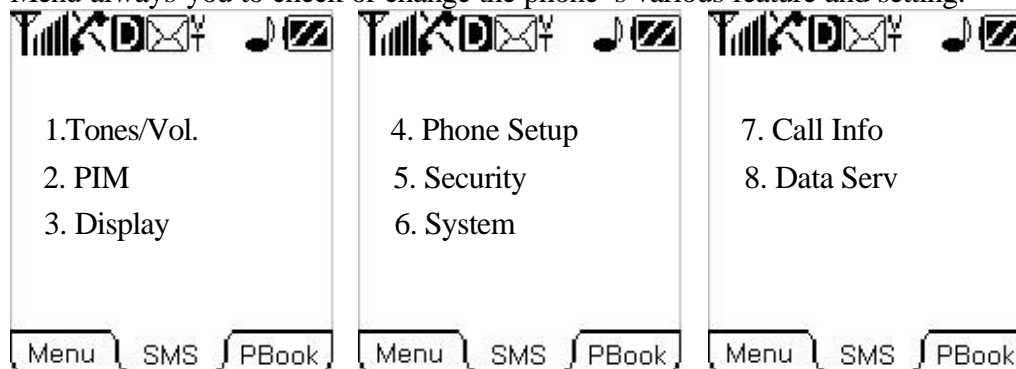

### 2. General Guidelines to MENU Access and Settings.

- 2.1 If you press the Left soft key, you can enter the feature menu in the standby state.
- 2.2 You can use the UP/DOWN key for menu navigation.
- 2.3 Select the menu item that you want.  
Then the submenu list will appear you want to access.
- 2.4 Press the [CLR] key to go one step backward while accessing menu or selecting settings.
- 2.5 Press the [OK] soft key to save the setting values.
- 2.6 Press the [CLR] key to cancel without saving.

### 3. Menu Item Description

#### 3.1 Menu 1 Tones/Vol

##### 3.1.1. Ring Type

Select the ring type one of four types (Bell /Vibration /Bell & Vib /Lamp only) with the UP/DOWN key, and the [OK] soft key.

##### 3.1.2. Ring Tone

The ring tone is consist of the nineteen MIDI sounds and the one recorded bell. You can select using the UP/DOWN key.

Types of ring sound to notify that you have an incoming call.



### **3.1.3 .Key Volume**

You can set the volume level for keypad tones.

There are Silent/Low/Medium -/Medium +/High levels, the levels bar is displayed the LCD It is sounded by the levels.

### **3.1.4. Ring Volume**

There are Silent/Low/Medium -/Medium +/High levels, the level bar is displayed on the LCD. When it's off, the LCD display "Ringer off" in the standby mode.

### **3.1.5. Key Length**

The key beep sounds in response to digit key.

### **3.1.6. DTMF Length**

You can select Normal/Long in the menu items.

### **3.1.7. Alert Set**

#### **3.1.7.1. Call Fail**

The audible tone is sound, when the call is disconnected.

#### **3.1.7.2. service Area**

Alert you when service(CDMA/Analog, A/B, etc) changes.

#### **3.1.7.3. Minute**

Alert you every 10 seconds before the end of every minute during a call.

#### **3.1.7.4. Call Drop**

The audible tone is sound, when the call is dropped.

#### **3.1.7.5. PrivacyAlert (change of state)**

The audible tone is sound, when the voice privacy Lost

## **3.2 Menu 2 PIM**

### **3.2.1. Scheduler**

You can view/add/delete a schedule,

If select the date, it's displayed a calendar on the LCD.

View : you can view if select on the schedule list.

Add : you can establish the time, content, and schedule alarm.

Delete : you can delete after select on the schedule list.

### **3.2.2. Alarm Clock**

The phone can be set to alarm at a specified time.

In this menu you can select “Yes” to hang the alarm time or “No” to turn off the alarm clock. When the alarm time is reached, the phone will sound an alarm tone.

When the phone is alarming, “ –Alarm –” is also shown.

Every day alarm : Once you make a set, it ring at a set time.

One-time alarm : If you select this, it ring only once.

### **3.2.3. Calculator**

This phone calculator in your phone, adds, subtracts, multiplies and divides.

### **3.2.4. Calendar**

This function allows you to view the calendar.

UP Key : next year.      Down Key : previous year.

LEFT Key : previous month.      RIGHT KEY : next month.

### **3.2.5. World Time**

You can view a date and a time base on the home time.

### **3.2.6. Add Entry**

The phone has 99 phonebook memories.

You can store up to three phone numbers and one email address per name.

### **3.2.7. Booking Call**

This feature reminds you of the important call.

When the time you set is reached, the phone will sound an alarm tone.

### **3.2.8. PIM option**

#### **3.2.8.1 Delete Prev.**

: Delete all out of the date schedule.

#### **3.3.8.2 Delete All**

: Delete all schedule data

#### **3.3.8.3 Stop Remind**

: Disable all schedule alarm

### **3.3 Menu 3 Display**

#### **3.3.1 Show time**

**3.3.1.1 Off :** Not display a date and a tone.

**3.3.1.2 Normal :** Display a data and a time.

**3.3.1.3 Time prefer :** you can see a big time and a small date.

**3.3.1.4 Data prefer :** you can view a small time and a big date.

**3.3.1.5 World time :** It's display a local time, visit time and city.

#### **3.3.2 Font style**

You can select a character type and a font size.

#### **3.3.3 Backlight**

**3.3.3.1 .Always on :** Always the backlight on

**3.3.3.2 Always off :** Always the backlight off.

**3.3.3.3 ? Sec :** Adjusting a time for backlight "ON" ( 5 to 60 seconds)

#### **3.3.4 Greeting**

Enter banner(up to 14 characters) that is displayed on the top line when the phone powers up and when it is in standby.

#### **3.3.5 Version No**

It's display a software/hardware version.

#### **3.3.6 Language**

You can select one case out of the English(default)/Espanol /Portugues /Francais.

#### **3.3.7 Contrast**

##### **3.3.7.1. Main LCD**

You can adjust a contrast of Main LCD (7levels)

##### **3.3.7.2. AUX LCD**

You can adjust a contrast of AUX LCD (7levels)

### **3.4 Menu 4 Phone Setup**

#### **3.4.1 Phone Lock**

Chose on/off when you want the phone to lock.

If it's on sate, the left soft key is changed of .

You can unlock when input the lock code.

When locked, you can only make emergency calls, receive incoming call, one-touch dial or power down. But you can't auto-answer or use a speed dial when in a call.

#### **3.4.2 Auto Answer**

You can answer a call automatically for the selected seconds (5,10,15) when in the incoming call.

#### **3.4.3 Anykey Answer**

You can answer a call using a anykey except the [END] key.

#### **3.4.4 Auto Redial**

Set the count of times(2,3,5) the phone wait before automatically redialing a number when the system is busy.

#### **3.4.5 Auto hyphen**

Setting mode that input the '-' automatically according to the cipher for entering the number in the standby mode

### **3.5 Menu 5 Security**

#### **3.5.1 Change code**

Change a phone lock code.

#### **3.5.2 Emergency No**

You can store the three emergency number.

It's allows that you can originate a call by the stored number in case of the handset locking.

### **3.5.3 Restriction**

#### **3.5.3.1 Outgoing Call : Restricting a outgoing calls.**

You can adjust all, overseas or off.

#### **3.5.3.2 Onetouch Dial : Restrict the one touch function.**

#### **3.5.3.3 Speed Dial : Restrict the speed dial function.**

#### **3.5.3.4. Phone Book : you can restrict a call origination by using of the contents in the phone books.**

#### **3.5.3.5 Call history : To view the call history, you have to input the lock code.**

### **3.5.4 Clr Call**

#### **3.5.4.1 Incoming : Erase a incoming call list.**

#### **3.5.4.2 Outgoing : Erase a outgoing call list.**

#### **3.5.4.3. Phone Book : Erase a phone book list**

### **3.5.5 Auto lock**

This function allows you can locks the phone when the phone is turned on.

### **3.5.6 Reset Phone : Reset the phone.**

## **3.6 Menu 6 System**

### **3.6.1 System Select**

It supports to select a Home only, a Automatic-A or a Automatic-B.

### **3.6.2 NAM Select**

Select the phone's NAM (Number Assignment Module) if the phone is registered with the multiple service providers.

### **3.6.3 Auto NAM**

Allows the phone to automatically switch to one of the programmed NAMs if it is operating in the corresponding service provide area.

### **3.6.4 Settings**

#### **3.6.4.1 Privacy Mode**

Set the voice privacy feature for CDMA calls as “Enhanced” or “Standard” Check with your service provider for availability of the enhanced voice privacy mode.

#### **3.6.4.2 TTY Mode**

You can select to operate with Industry- standard TTY device.

#### **3.6.4.3 Send PIN**

It send the PIN Code.

#### **3.6.4.4 PIN Code**

Input the PIN Code

### **3.6.5 Force Analog**

The user can select "Use analog" or "No".

If user selects "Use analog", the mobile phone works in analog mode for one call, otherwise analog mode is valid for ten minutes.

1. Press Menu softkey.
2. Press "6" and then press "5".
3. Select "Use Analog".

### **3.6.6 PRL Version**

The PRL version of the mobile phone displays on the screen.

1. Press Menu softkey.
2. Press "6" and then press "6".
3. PRL version is displayed on the screen.

## **3.7 MENU 7 Time Infor.**

### **3.7.1. Last Call**

Displays duration of the last call in minutes and seconds

### **3.7.2 Outgoing Call**

Display the total number and time of all outgoing calls made.

### **3.7.3 All Calls**

Display the total number and time including calls made while in the home system and while roaming

### **3.7.4 Web total**

Display the total number and time while in the web.

### **3.7.5 Clear Timers**

Clear the total time information

## **3.8 Menu 8 Data Serv**

### **3.8.1 Linger Time**

Adjust a linger time (60 ~ 300 sec)

### **3.8.2 Web Font**

Adjust a font size for using in the web.

### **3.8.3 Data/Fax**

This is intended to use the Data/Fax service in digital mode.

If mobile phone is connected to a PC with Data service Cable, the phone will work as wireless modem.

In digital mode, the phone can be used for async data or Fax at up to speed 14.4Kbps, this phone also support network connection for faster internet access.

1. Press Menu softkey.
2. Press "8" and then press "3".
3. Select one of the modes as follows.

- 1) Data/Fax mode is off : Voice Call Mode & Outgoing Data /Fax Call Mode.
- 2) Fax for next call : Incoming Fax Call Only for next call.
- 3) Fax until powered off : Incoming Fax Call Only until Powered Off.
- 4) Modem for next call : Incoming Data Call Only for next call.
- 5) Modem until powered off : Incoming Data Call Only until Powered Off.

## 4. Menu Feature In use State

### 4.1 On Call

#### 4.1.1 Time Information

Call Timer : It starts with a call and stops with a call in terminated.

#### 4.1.2 Ear piece volume Control

Adjust the earpiece volume using the side 1.2 keys

### 4.2 The Menu in a call

#### 4.2.1 Voice Mute

You can on/off a phone in a call If you press the [Menu] softkey and the [1]key the other party can not hear you.

If you need to release the status, after the urgent conversation is over, press the [MENU] softkey and the [1] key again.

#### 4.2.2 Scratch pad

You can use a softkey for saving the no sound, and exit by the right softkey.

You can dial by using a [SEND] key after that it's disconnected.

#### 4.2.3 Send My No

Send a using phone number.

#### 4.2.4 DTMF Length

Select a Normal/Long

#### 4.2.5 Privacy mode

Set the voice privacy feature for CDMA calls as “Enhanced” or “Standard” Check with your service provider for availability of the enhanced voice privacy mode.



## 5. Message feature

### 5.1 Voice Mail

**5.2 New MSG :** Send a New message by the phone number, the E-Mail Addr or the Group List.

### 5.3 InBox

MSG List : Display a received message list.

If you select a message, you can view a content of the selected message.

### 5.4 OutBox

MSG List : Display a transmitted message list

If you select a message, you can view a content of the selected Message.

### 5.5 Clear MSG

You can erase a all message list

#### 5.5.1 Inbox [Yes/No]

#### 5.5.2 Outbox [Yes/No]

### 5.6 SMS Setting

#### 5.6.1 Save OutBox

When send a SMS Message, you can select which you save to the outbox list.

#### 5.6.2 Expiration

If the SMS message doesn't be transmitted during the setting time, it will be erased.

#### 5.6.3 Call Back No

1. NAM : The using phone number is selected to CB #.
2. Changed CB # : you can set a random CB #.

#### 5.6.4 Alert Setting

**5.6.4.1 Ring Type :** Set the SMS ring type

**5.6.4.2 Ring Tone :** Set the SMS ring tone

**5.6.4.3 Remind Alert :** After that it's received the message, phone acts remind alert.

**5.6.5. Delivery ACK :** Transmit a ACK signal for confirmation the received SMS message.

**5.6.6. MEM Option :** When you send the new message, Phone will erase the eldest message list of Outbox. Also when outbox is full, phone makes a beep tone.

**5.6.7 Erase Setting : Initialize the SMS setting volume.**

**5.6.8 SMS Font Size : Adjust a font size in the InBox or OutBox.**

## **5.7 Group Setting**

Group setting consists of three group list.

You can add, view or delete the member.

## 6. Menu Feature in PhoneBook

1. **Outgoing** : Display a ten latest transmitted messages.
2. **Incoming** : Display a ten latest received messages.
3. **Find Entry** : Search a phone number by the saved address
4. **Find Name** : Search a phone number by the saved name.
5. **Add Entry** : Register a new name, address, email address and phone number into the phone book.
6. **Find Sched** : If you input the date, you can view a previously stored schedule.
7. **Show My #** : Display a current phone number

## 7. Menu Tree

### Feature MENU

Level 1	Level 2	Level 3	Level 4
<b>1. Tones/Vol.</b>	<b>1. Ringer Type</b>	[ Bell/Vibration/Vib&Bell/Lamp only ]	
	<b>2. Ring Sound</b>	[ Bell 1 ~ 19 ]	
	<b>3. Key Volume</b>	[ Silent / Low / Medium -/Medium +/high ]	
	<b>4. Ring Volume</b>	[ Silent / Low / Medium -/Medium +/high ]	
	<b>5. Key Length</b>	[ Normal / Long ]	
	<b>6. DTMF Length</b>	[ Normal / Long ]	
	<b>7. Alert Set ...</b>	<b>1. Call Fail</b>	[ On / Off ]
		<b>2. Service Area</b>	[ On / Off ]
		<b>3. 1 Minute</b>	[ On / Off ]
		<b>4. Call Drop</b>	[ On / Off ]
		<b>5. Privacy Alert</b>	[ On / Off ]
<b>2. PIM</b>	<b>1. Scheduler</b>	<b>1. View</b>	
		<b>2. Add</b>	
		<b>3. Delete</b>	
	<b>2. Alarm Clock</b>	<b>1. Daly Alarm</b>	[ Yes / No ]
		<b>2. OneTime Alarm</b>	[ Yes / No ]
	<b>3. Calculator</b>		
	<b>4. Calendar</b>		
	<b>5. World Time</b>		
	<b>6. Add Entry</b>	[ Yes / No ]	
	<b>7. Booking Call</b>		
	<b>8. PIM Option</b>	<b>1. Delete Prev</b>	
		<b>2. Delete All</b>	
		<b>3. Stop Remind</b>	
<b>3. Display</b>	<b>1. Show Time</b>	[Off/ Normal/ Time prefer/ Data prefer/ World Time]	
	<b>2. Font Style</b>		

	<b>3. Backlight</b>	[ Always On / Always Off / ? Seconds ]	
	<b>4. Greeting</b>		
	<b>5. Version No</b>		
	<b>6. Language</b>	[ English / Francais / Portugues / Espanol]	
	<b>7. Contrast</b>	<b>1. Main LCD</b>	<b>7 Level</b>
		<b>2. AUX LCD</b>	<b>7 Level</b>
<b>4. Phone Setup</b>	<b>1. Phone Lock</b>		
	<b>2. Auto Answer</b>	[ off/ 5 seconds/ 10 seconds/ 15 seconds ]	
	<b>3. Anykey Answer</b>	[ On / Off ]	
	<b>4. Auto Redial</b>	[ Off/ 2 Times/ 3 Times/ 5 Times ]	
	<b>5. Auto Hyphen</b>	[ On/ Off ]	
<b>5. Security</b>	<b>1. Change Code</b>		
	<b>2. Emergency No</b>	[ Emergency - 1/2/3/]	
	<b>3. Restriction</b>	<b>1. Outgoing</b>	[ Yes / No ]
		<b>2. One-Touch</b>	[ Yes / No ]
		<b>3. Speed-Dial</b>	[ Yes / No ]
		<b>4. Phone Book</b>	[ Yes / No ]
		<b>5. Call History</b>	[ Yes / No ]
	<b>4. Clear Call</b>	<b>1. Incoming</b>	[ Yes / No ]
		<b>2. Outgoing</b>	[ Yes / No ]
		<b>3. Phone Book</b>	[ Yes / No ]
	<b>5. Auto Lock</b>	[ Yes/ No ]	
	<b>6. Reset Phone</b>	[ Yes / No ]	
<b>6. System</b>	<b>1. System Select</b>	<b>Automatic-A</b>	
		<b>Automatic-B</b>	
		<b>Home Only</b>	
	<b>2. NAM Select</b>	<b>1. NAM #1</b>	
		<b>2. NAM #2</b>	
	<b>3. Auto NAM</b>	[ Yes / No ]	
	<b>4. Settings</b>	<b>1. Privacy Mode [ Enhanced / Standard ]</b>	
		<b>2. TTY Mode</b>	[ Off / On ]

		<b>3. Send PIN</b>	<b>[ Off / Prompt ]</b>
		<b>3. PIN Code</b>	
	<b>5. Force Analog</b>	<b>[ Use Analog / No ]</b>	
	<b>6. PRL Version</b>		
<b>7. Call Info</b>	<b>1. Last Call</b>		
	<b>2. Outgoing Call</b>		
	<b>3. All Calls</b>		
	<b>4. Web Total</b>		
	<b>5. Clr Timers</b>	<b>[ Yes / No ]</b>	
<b>8. Data Serv</b>	<b>1. Linger Time</b>		
	<b>2. Web Font</b>		
	<b>3. Data/Fax</b>	<b>Data/Fax mode is off</b>	
		<b>Fax for next call</b>	
		<b>Fax until powered off</b>	
		<b>Modem for next call</b>	
		<b>Modem until powered off</b>	

## SMS MENU

<b>1. Voice Mail</b>			
<b>2. New MSG</b>	<b>1. Mobile Number</b>		
	<b>2. Email Addr</b>		
	<b>3. Group List</b>	<b>[ Group 1 / Group 2 / Group 3 ]</b>	
	<b>[Sub Menu]</b>		
	<b>1. Send</b>		
	<b>2. Save &amp; Exit</b>		
	<b>3. Option</b>	<b>1. Call Back</b>	
		<b>2. Priority</b>	<b>[Not Urgent/Urgent/Emergency]</b>
		<b>3. Deliv ACK</b>	<b>[No ACK/Delivery ACK]</b>
		<b>4. Validate</b>	
		<b>5. Deferred</b>	
		<b>6. Save Outbox</b>	<b>[Auto Save/ Do not Save/ Prompt]</b>
		<b>7. Save Addr</b>	
<b>3. InBox</b>	<b>MSG List</b>	<b>1. Reply</b>	
		<b>2. Forward</b>	
		<b>3. Delete</b>	
		<b>4. Save Addr</b>	
		<b>5. Save CB #</b>	
		<b>6. Lock/Unlock</b>	
<b>4. OutBOX</b>	<b>MSG List</b>	<b>1. Resend</b>	
		<b>2. Delete</b>	
		<b>3. Cancel MSG</b>	
		<b>4. Lock/Unlock</b>	
<b>5. Clear MSG</b>	<b>1. InBox</b>	<b>[ Yes / No ]</b>	
	<b>2. OutBox</b>	<b>[ Yes / No ]</b>	
<b>6. SMS Settings</b>	<b>1. Save OutBox</b>	<b>Auto Save</b>	
		<b>Prompt</b>	
		<b>Do not save</b>	
	<b>2. Expiration</b>		

	<b>3. Call Back No</b>	<b>1. NAM</b>	
		<b>2. Changed CB #</b>	
	<b>4. Alert Set</b>	<b>1. Ring type</b>	<b>[Lamp Only/ Vibration Only/Ring Only]</b>
		<b>2. Ring Tone</b>	
		<b>3. Remind Alert</b>	<b>[ On/ Off ]</b>
	<b>5. Delivery ACK</b>	<b>[No ACK/Delivery ACK/ Enhanced]</b>	
	<b>6. MEM Option</b>		
	<b>7 Erase Set</b>	<b>1. InBox Set</b>	<b>[ Yes/ No ]</b>
		<b>2. OutBox Set</b>	<b>[ Yes/ No ]</b>
	<b>8. SMS Font Size</b>	<b>[ Normal / Small ]</b>	
<b>7. GROUP Set</b>	<b>1. GROUP 1</b>		
	<b>2. GROUP 2</b>	<b>[ Sub Menu ]</b>	
	<b>3. GROUP 3</b>	<b>1. View Member</b>	
		<b>2. Add Member</b>	
		<b>3. Delete Member</b>	



### In-use MENU

Level 1	Level 2
1. Mute	
2. Scratch Pad	
3. Send My #	
4. DTMF Length	[ Normal / Long ]
5 Privacy Mode	

### PhoneBook Menu

Level 1	Level 2
1. Outgoing	10 List
2. Incoming	10 List
3. Find Entry	
4. Find Name	
5. Add Entry	
6. Find Sched	
7. Show My #	