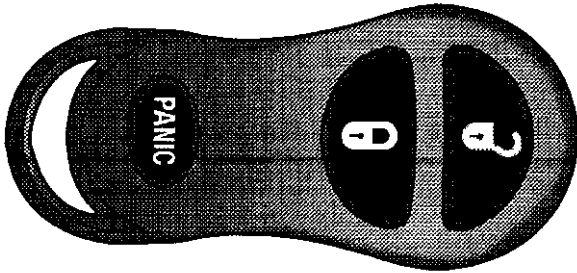


Re: Notification for EATON Corp. Receiver
PN(EATON): 772-200-1
PN(Chrysler): 55196388AC
FCC ID: MFJ99WJ315-1
CANADA:

USER'S MANUAL

The following is a partial material from the owner's manual. Included are pages that are pertinent for evaluation of this application. See p. 4 of this Exhibit for the compliance statement.

EXHIBIT J
Page 1 of 4
U of Mich file 415031-942

REMOTE KEYLESS ENTRY

80b61052

This system allows you to lock or unlock the doors and liftgate or activate the panic alarm from distances up to about 23 feet (7 meters) using a hand held radio transmitter. The transmitter need not be pointed at the vehicle to activate the system.

To unlock the doors and liftgate:

Press and release the UNLOCK button on the key fob once to unlock the driver's door, or twice to unlock all doors and liftgate. The illuminated entry system will also come on.

NOTE: The system can be programmed to do the following:

- unlock all the doors on the first button press
- flash the turn signals with unlock
- On vehicles equipped with an overhead console these functions can be selected at the overhead console using the "customer programmable features." Refer to "Customer Programmable Features" in the Overhead Console section, otherwise see your authorized dealer.

To lock the doors and liftgate:

Press and release the LOCK button on the key fob to lock all doors and liftgate. If you wish, the horn can be programmed to chirp once and/or the turn signals

EXHIBIT JPage 3 of 4U of Mich file 415031-942

can be programmed to flash once to show the system is activated. For customer programmable features refer to the section on "Overhead Console" for programming details, otherwise see your authorized dealer.

Using The Panic Alarm:

To turn on the panic alarm feature, press and release the PANIC button with the ignition off. When the panic alarm is on the headlights and marker lights will flash, the horn will pulse on and off and the interior lights will turn on.

The panic alarm will stay on for 3 minutes unless you turn it off by pressing the PANIC button a second time or by starting the vehicle and accelerating to 15 mph.

General Information

This device complies with Part 15 of the FCC rules and with RSS-210 of Industry Canada. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received,

including interference that may cause undesired operation.

If your Remote Lock Control fails to operate from a normal distance, check for these two conditions.

1. Weak batteries in transmitter. The expected life of batteries is from one to two years.
2. Closeness to a radio transmitter such as a radio station tower, airport transmitter, military base, and some mobile or CB radios.

Programming Additional Transmitters

Up to four transmitters can be programmed. See your authorized dealer.

Transmitter Battery Replacement

The recommended replacement battery is a CR 1616.

NOTE: Do not touch the battery terminals that are on the back housing or the printed circuit board.