

# URC7880

## CODELIST



CODELIST TV		
TV		
3M	0724	JVC
Accurian	1803	KDS
Advent	1570	Konka
Affinity	3870, 3717	LeEco
Aikai	0702, 0812, 1675, 2232, 1385, 1688	LG
AOC	2014	
Apex Digital	2397, 4350	
Audiovox	1865, 2413, 1766, 1769, 1868, 3410	
Aumark	0060	
Aventura	0171	
Axess	3593	
Blusens	2735	
Broksonic	1892	
Casio	1205	
Champion	1362	
Coby	3627, 2344, 2315, 3478, 3629, 1538, 2314	
Commercial Solutions	1447	
Curtis	2855, 3895, 2466, 4035, 1326, 2559, 3595, 3636	
Curtis Mathes	0702	
Daewoo	3115, 3183, 0661	
Daytek	3651	
Dukane	0724, 1430	
Dumont	0017	
Durabrand	0171, 1665, 0178	
Dynex	2049, 2184, 1463	
Eiki	1649, 1647, 4649	
Electrohome	1670, 1570	
Elektra	0017	
Element	4635, 4910, 2964	
Elite	1457	
Emerson	1963, 1864, 1886, 1944, 1394, 0171	
Emprex	1665	
Epson	1422, 1822	
ESA	4250, 1122	
Faroudja	1944, 1963, 0171	
Favi	1297	
Fujitsu	3382	
Funai	0683	
GE	0171, 2861, 1394, 1963	
General Electric	0171	
GFM	1447	
Gibraltar	1447	
Go Video	0060	
GoldStar	0178	
GPX	3980, 3977, 4586	
Haier	2309, 1753, 3429, 4398, 4120	
Hallmark	1748	
Hanspree	0178	
Hewlett Packard	2786, 1348	
Hider	1642	
Hightong	3817	
Hisense	3253	
Hitachi	3519, 4618, 4740, 4398, 40	
	4149	
	1145, 0724, 1643, 4398, 13	
	4455, 2756, 2207	

### B – SET UP BY CODE

If your brand is not listed in section A, you can set up your device by trying codes individually. To do this:

- Turn your device on (not on standby).
- Locate the brand of your device in the code list. Codes are listed by Device Type and Brand.
- Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode key will stay lit.
- Press the DEVICES key repeatedly until the LED for the device you want to set up is lit.
- Enter the first 4 digit code listed for your brand (e.g. 2049 for a Insignia TV).
- The LED will blink twice and go out.
- Now aim the remote towards your device and press the POWER key.
- If the device turns off, your remote is ready to use. If not, repeat steps 3-7 with the next code in the list.

\* Some codes are quite similar. If you find that one or more keys do not operate as you expect, try again from step 3 with the next code in the list.

### B – CONFIGURACIÓN POR CÓDIGO

Si no encuentra la marca de su dispositivo en la sección A, puede configurar su dispositivo probando códigos individuales. Para ello:

- Encienda su dispositivo (no lo deje en modo de espera).
- Busque la marca de su dispositivo en la lista de códigos. Los códigos se muestran por tipo de dispositivo y marca.
- Mantenga pulsado el botón MAGIC hasta que el LED situado bajo el dispositivo parpadee dos veces. El LED que se encuentra bajo el botón del modo activo se mantendrá encendido.
- Pulse el botón DEVICES varias veces hasta que el indicador LED del dispositivo que desea configurar se encienda.
- Introduzca el primer código de 4 dígitos de su marca (por ej. 2049 para un televisor Insignia).
- El LED parpadeará dos veces y se apagará.
- Orienta el mando hacia su dispositivo y pulse el botón de encendido (POWER).
- Si el dispositivo se apaga, ya puede usar el mando. De lo contrario, repita los pasos 3-7 con el siguiente código de la lista.

\* Algunos códigos son muy similares. Si observa que uno o más botones no funcionan como es debido, repita el proceso desde el paso 3 con el siguiente código de la lista.

### B – CONFIGURATION A L'AIDE D'UN CODE

Si la marque de votre appareil n'est pas répertoriée dans la section A, vous pouvez configurer ce dernier à l'aide de codes. Procédez comme suit:

- Allumez votre appareil (celui-ci ne doit pas être en veille).
- Dans la liste des codes, recherchez la marque de votre appareil. Les codes sont affichés en fonction du type d'appareil et de la marque.
- Maintenez le bouton MAGIC enfoncé, jusqu'à ce que le voyant situé sous l'appareil clignote deux fois. Le voyant associé au mode en question reste allumé.
- Appuyez plusieurs fois sur le bouton DEVICES, jusqu'à ce que le voyant correspondant à l'appareil que vous souhaitez configurer s'allume.
- Saisissez le premier code à 4 chiffres indiqué pour la marque concernée (par exemple, 2049 pour un téléviseur Bennett).
- Le voyant clignote deux fois, puis s'éteint.
- Dirigez la télécommande vers l'appareil et appuyez sur le bouton d'alimentation.
- Si l'appareil s'éteint, votre télécommande est prête à l'emploi. Sinon, répétez les étapes 3 à 7 avec le code suivant dans la liste.

\* Certains codes sont similaires. Si un ou plusieurs boutons ne fonctionnent pas comme prévu, reprenez la procédure à partir de l'étape 3, avec le code suivant dans la liste.

### CODELIST TV

TV		
3M	0724	JVC
Accurian	1803	KDS
Advent	1570	Konka
Affinity	3870, 3717	LeEco
Aikai	0702, 0812, 1675, 2232, 1385, 1688	LG
AOC	2014	
Apex Digital	2397, 4350	
Audiovox	1865, 2413, 1766, 1769, 1868, 3410	
Aumark	0060	
Aventura	0171	
Axess	3593	
Blusens	2735	
Broksonic	1892	
Casio	1205	
Champion	1362	
Coby	3627, 2344, 2315, 3478, 3629, 1538, 2314	
Commercial Solutions	1447	
Curtis	2855, 3895, 2466, 4035, 1326, 2559, 3595, 3636	
Curtis Mathes	0702	
Daewoo	3115, 3183, 0661	
Daytek	3651	
Dukane	0724, 1430	
Dumont	0017	
Durabrand	0171, 1665, 0178	
Dynex	2049, 2184, 1463	
Eiki	1649, 1647, 4649	
Electrohome	1670, 1570	
Elektra	0017	
Element	4635, 4910, 2964	
Elite	1457	
Emerson	1963, 1864, 1886, 1944, 1394, 0171, 1665	
Emprex	1422, 1822	
Epson	4250, 1122	
ESA	1944, 1963, 0171	
Faroudja	1297	
Favi	3382	
Fujitsu	0683	
Funai	0171, 2861, 1394, 1963	
GE	1447	
General Electric	1447	
GFM	1963	
Gibraltar	0017	
Go Video	0060	
GoldStar	0178	
GPX	3980, 3977, 4586	
Haier	2309, 1753, 3429, 4398, 4120, 1749, 1748	
Hallmark	0178	
Hanspree	2786, 1348	
Hewlett Packard	1642	
Hider	3817	
Hightong	3253	
Hisense	3519, 4618, 4740, 4398, 4054, 4621, 4149	
Hitachi	1145, 0724, 1643, 4398, 1345, 3644, 4455, 2756, 2207	
HP	1642	
iLo	1990, 1463	
InFocus	4609, 1430, 0736, 0775, 3524	
Initial	1990	
Insignia	2049, 4487, 1780, 1641, 1963, 2002, 3227, 1326, 1892, 2416, 2751, 0171, 1423, 1517	
Inteq	0017	
iSymphony	3429, 3382, 3094	
JC Penney	0060, 0178	
Jensen	3204	
		Lloyd's
		MAG
		Magnavox
		Matsushita
		Megatron
		Memorex
		MGA
		Midland
		Mintek
		Mitsubishi
		Mitsubishi Electric
		Naxa
		NEC
		Nikko
		Nimbro
		Norcent
		NuVision
		oCOSMO
		Ölevia
		Optimus
		Optoma
		Orion
		Panasonic
		Peerless
		Peerless-AV
		Penney
		Philco
		Philips
		Pioneer
		Polaroid
		Power Acoustic
		Prima
		Proscan
		Proviv
		Pulsar
		Pyle
		QuantumFX
		Quasar
		Qumi
		RCA
		Runco
		Sampo
		Samsung
		Sansui
		Sanyo
		Sceptre
		Sears
		Seiki
		Seiko Epson
		Sens
		Sharp
		SIM2 Multimedia
		SkyVue

### CODELIST TV | STB

Skyworth	3253	Bowling Cable TV	1877
Sole	1623	Bright House	1877, 1376
Sony	0810, 4448, 4189, 4151, 0834	Bristol Networks	1877, 1376
Spectroniq	1687	Bristol Tennessee	
Squareview	0171	Essential Services	1877
Superscan	1944	Buckeye Cable System	1376, 2187
Supersonic	3593, 2104, 1753, 3595, 3894	Burford Media Group	1877
Sylvania	1963, 1944, 1886, 1864, 1394, 2861, 0171	BWTelecom	1877
		Cable America	1877
Symphonic	1944, 1963, 0171	Cable Axion Digital	1376
Syntax	1144	Cable One	1376, 3560, 1877
Tatung	1286	Cable Vision Services	1877
TCL	4398, 3183	Cablevision	3885
Technics	0250, 0017, 0650	Cablevision du Nord	1376
Teknika	0060	Cablevision Mexico	1376
Telefunken	0702	Cablevision Warwick	1877
TNCi	0017	CCAP	1877
Toshiba	2006, 2724, 1524, 1656, 3945, 4885, 1265, 1369, 0060, 0736	CDE Lightband	1998
		Cellcom	1877
TruTech	3410	CenturyLink	1998, 0858
Venturer	1868, 1865	Charter	1877, 1376, 5651, 2187, 3560, 5756, 5757
Victor	0150, 0250	Charter Spectrum	1877, 1376, 5651, 2187, 3560, 5756, 5757
Viewsonic	3791, 4938, 4319, 2014, 2049, 0724, 0864	Cincinnati Bell	1877, 3068, 1376
		Cisco	1877, 0858, 3028, 2947, 1982, 2345, 2378, 5484, 2506, 3294, 4514, 5757
Viore	2352, 3429, 3382, 3094, 2104, 3118, 4829	Click Network	1877
VisionQuest	3380	Cogeco	1376, 1982, 3560
Vivitek	0775, 4649, 1369	Comcast	1877, 1376, 1877, 3560, 2187
VIZIO	3758, 4723, 1758, 4905, 3358	Comporium	1877, 3560, 2187
Wards	0017	Consolidated Communications	1877, 1998, 2187, 0858, 3426
Westinghouse	4797, 3411, 1300, 1712	Consolidated Telecommunications Company	1998
Xiahua	1753	CoopTel	1998
Xococo	1753	Corn Belt Telephone	1877
Zenith	0017, 1145, 0178, 1265, 1463, 1423	Cox	1877, 1376, 3774, 1982, 3765
		Cox Communications	1877, 1376, 3774, 1982, 3765
		Crossman Cable	1877
		CTC	1998
		Darien Communications	1877
		Delta Cable	1376
		Digeo	2187
		DIRECTV	1377, 3724
		AT&T U-verse	0858
		DISH	0775
		DISH Mexico	0775
		DISH Network	0775
		Dishpro	0775
		AT&C	1376, 3028
		Axtel	1877
		Ballard Rural Telephone Cooperative	1877, 3028
		Beehive Broadband	0775
		Bell	0775, 1998
		Bell Fibe TV	1998, 5097, 5537
		Bell MTS	1998, 5097, 5537
		Bell Satellite TV	0775
		Bellaliant	1998
		Bend Broadband	2187
		Blue Ridge Communications	1877, 3560
		BlueBridge Media	1877

**CODELIST STB**

Foothills Rural Telephone Cooperative	1877
Forestate Wireless	1877
Fort Randall Telephone Company	1877
Frontier	2378, 1998, 3560
Frontier Communications	2378, 1998, 3560
GCI	3560, 1376
General Communications	3560, 1376
General Instrument	0869
GOI	0775
Google	3666
Grande Communications	1877, 3560, 1376
Greenlight Community Broadband	1877
HTS	0775
Huawei	4589
Humax	1377, 5651, 3560
ImOn Communications	1877
Innovative Systems	1898
Insight	1376, 1877
Inter Mountain Cable	1877
Izzi Mexico	1376
Izzi Telecom	1376
JVC	0775
K2 Communications	3560
Kaon	4458, 2746
Kaon Media	4458, 2746
Knology	1877
Lafayette Utilities System	1998
Layer3 TV	5370
Long Lines	1877
Lucas Valley Cable	3560
Lumos Networks	1998
MCV Broadband	1877
Media Cast	1877
Mediacom	1376, 3560, 1877
Megacable	1376, 4514
megasenal	4682
Megasenal	4682
Merrimac Communications	1376
MetroCast	1376
Cablevision	1877, 1998
MetroNet	1877
Mid-State	1377, 5651, 5484
Community TV	3560
Midcontinent Communications	1376, 3560, 1982
Milford Communications	1877
Minerva Networks	3118
MINET	1877
Morristown Utility Systems	1877
Motorola	1376, 0869, 1998, 2378, 0858, 1982, 5097, 5756
Moxi	2187
Nelson County Cablevision	3560
Netgem	4634
Next Level	0869
NextGen Communications	1877
NfinityLink Communications	1877
North State Communications	0858
Northland Cable TV	3560
Northland Communications	1376
Northwest Iowa Telephone	1877
Northwestel	1376
Novus	1376
NuLink	1877
NuVisions	0775
Oakview Cable	1877
Optimum	3885
Ozona Cable & Broadband	1877
Pace	1376, 1982, 1877, 0858, 1377, 1998, 3560, 4537, 0887
Palmetto Rural Telephone Cooperative	0858
Panasonic	1982
PennVideo Network	3560
Philips	2378, 3560
Pioneer	1877
Provincial Cable	1877
Qwest	1377
RadioShack	0869
Rails Technologies	1877
RCN	1376, 3560
Rogers	1877, 5484, 1376
Sac County Mutual Telephone	1877
Samsung	1877, 1377, 1982, 2947
SaskTel	1998
Schurz Communications	1877
Scientific Atlanta	1877, 0858, 1982, 2345, 3028, 2378
Service Electric	1376, 1982
Shaw	1376, 1877, 2187
Shaw Direct	0869
Sky Mexico	0887, 1377, 0856, 3469
Source Cable	1376
Spectrum	1877, 1376, 5651, 2187, 3560, 5756, 5757
Star Choice	0869
Sterling Cable	1877
Stratford Mutual Telephone	1877
Suddenlink	1877, 3560, 1376
SureWest	1877, 1998
Tbaytel	1998
TDS Telecom	0775
Technicolor	1377, 5651, 5484
TeleCable	1376
TELU	3028, 0775
TiFiNet	1877
Time Warner	1877, 1376, 5651, 2187
Time Warner Cable	1877, 1376, 5651, 2187
Tivo	3560, 3724
Totalplay	4634, 4589, 4591
Toxaway Cable	1877
Triangle Communication System	0775
TV Cable of Rensselaer	3560
TWC	1877, 1376, 5651, 2187
U-verse	0858
Verizon	2378
Vianet TV	3246
Videotron	1877, 2947
Village Cable	1877

**CODELIST STB | BLU | DVD | AUDIO | S.BAR**

Vision Systems	1877
Vista III Media	1982
Vyve Broadband	1376
Washington Cable	3560
Wave Broadband	1376, 3560
Western Iowa Telephone	1877
Western Montana CommunityTel	1877
Westman Communications	1376, 2187
WideOpenWest	1376, 1877, 2187
Williamstown Cable	3560
Windom Communications	1877
Wistron NeWeb	3118
WOW!	1877, 1376, 2187, 5131
Xfinity	1982, 1376, 3765, 1877, 3560, 2187
Zenith	0856
ZTE	3068
Optimus	0059
Panasonic	1579, 0490, 1641, 3641
Philco	0675
Philips	2056, 0646, 2789, 1506, 2434, 3488, 3274, 0675, 0739, 0539
Pioneer	0059, 0631, 2854, 1571, 2847, 4199, 0142
Polk Audio	0539
Presidian	0675
Proscan	0522
RCA	0522, 0717, 1769, 3464
RCN	0739
RE-BL	2555
Rotel	0623
Samsung	0199, 1075, 2069, 2489, 1044, 2269, 2369, 4108, 0490, 1573, 0573, 2329, 2843
Sanyo	0675
Schneider	0646
Sharp	0630, 0675, 2250
Sony	1633, 1516, 1033, 0864, 1070, 0772, 1533, 4009
SV2000	0675
Sylvania	0675, 0630
Symphonic Technics	0490
Tivo	0739
Toshiba	0503, 2277, 1769, 2006, 3857, 3157, 3957
TruTech	0675
Urban Concepts	0503
VIZIO	2563
Wards	0059
WB Electronics	2555
Xbox	2083, 2627, 0522
Yamaha	0497, 3320, 0646, 3995, 0490, 0539
Zenith	0741, 0869
Accurian	0675
Akai	0675
Allegro	0869
Apex Digital	0672, 0717
Audio Authority	2555
Audiovox	0717
Blaupunkt	0717
CineVision	0869
Daewoo	0869
Denon	1634, 0059, 3851, 0490
DIRECTV	0739
Disney	3246, 0675
Electrohome	1702
Emerson	0675
Frontier	0739
Frontier Communications	0739
Funai	0675
GE	0717
General Electric	0717
GMF	0675
Go Video	0869, 1075, 1044, 0741, 0717
GoldStar	0741, 0869
Greenhill	0717
Harman/Kardon	3744, 0702
Humax	0739
Initial	0717
Insignia	2095, 2596
Integra	0627, 1769
Irradio	0646
JBL	0702, 3744
JVC	1550, 1602, 0623
Kenwood	0490, 0534
LG	0741, 0869, 1602
Logitech	2639
Magnavox	0675, 0646, 1506, 0539
Marantz	3444, 0539
Memorex	1702, 3031, 2213
Microsoft	2083, 2627, 0522
Mintek	3965, 2441, 3943
Mitsubishi	0059, 1521
Mitsubishi Electric	0059, 1521
Nesa	2572, 0059, 0741
New Acoustic Dimension	2572, 0059, 0741
Onkyo	0627, 1769
Oppo	2545

**BLU | DVD**

**AUDIO | S.BAR**

**CODELIST AUDIO | S.BAR | GAME | MEDIA**

Definitive Technology	4415, 3645, 4026
Denon	1360, 2857, 3347, 2516, 2820, 3642, 3380, 3643, 2706, 2502, 4530, 4025, 3947, 0003, 4054, 0034, 2279
DMX Electronics	0157
Durabrand	1299
Dynavox	3231
Dynex	3951
Emotiva	3763, 4059, 4100, 4101, 4102, 4641
Enclave Audio	4800
Energy	3915
Energy System	3915
Epworth	0121, 0158, 0157, 0189
Focal	4021
Gateway	1567
GoldStar	1537
Haier	3516
Harman/Kardon	0110, 2241, 1304, 0892, 2443, 4186, 3418, 3756, 4178, 3391, 3779, 0189, 4040, 3045, 3517, 0157
iLive	3175
Inkel	3770, 4090, 3793
Innovative Technology	3848
Insignia	3951, 2472, 2169, 1893, 2929, 3104, 3770, 4022, 4424, 2175
Integra	1805, 3860, 2730, 4023, 1320, 4581, 2503, 4014, 3992, 0135
Jamo	3915
JBL	3756, 3535, 0110, 2241
JVC	1676, 1374, 2040, 3049, 2239, 2331, 3365, 0072, 1871
Kenwood	0313, 1570, 1670, 0190, 0028
Klipsch	3915, 4941, 4198, 4200
Left Coast	0892
Left Coast Products	0892
Lennox	1561
LG	2676, 1537, 3509, 3217, 4043, 3996, 4478, 2284, 2197
Linn	0189, 0157
Logitech	1408
Magnavox	0189, 1269, 1189, 0157, 1831
Marantz	1289, 2114, 0189, 2138, 4121, 3772, 1189, 0892, 1269, 3998, 3347
Martin Logan	3526
McIntosh	1289
Micromega	1189
Mint	4286
Miro	0000
Monoprice	4505
Myriad	1189
NAD	1989, 0320, 1767
New Acoustic Dimension	1989, 0320, 1767
Nu Force	3968
Onkyo	1805, 0135, 1320, 2730, 3860, 4023, 2503, 4041, 4581, 4014, 4533, 4574, 3984, 3992
Optimus	1023, 0823, 0032
Outlaw	1933, 3706, 3832, 1629
Panasonic	3973
Paradigm	4536, 3526, 4846
Parasound	0420
Philips	0189, 1269, 2434, 4105, 2459, 3379, 3962, 1189, 2675, 3801, 0157, 3227, 4012, 1831, 2311, 0892, 2289
Pinnacle Speakers	3774, 3728

**CODELIST GAME | MEDIA**

Edal	4666
Gateway	1272
Geniatech	4339
Hewlett Packard	1272
Howard Computers	1272
HP	1272
Hush	1272
iBUYPOWER	1272
iView	2759
KMB	4666
LG	3373
Linksys	1272
Logitech	3272
Logic TV	5155
Magnavox	3339
Matricom	4899
Media Center PC	1272
Mediabox	5155
MediaGate	4525
Mediasonic	2095
Mi	3982
Microsoft	4000, 1272, 2049
Milliet	3982
Mind	1272
Mix	4413, 3884
MyGica	5057
Netgear	3324, 2036, 3292
NiveusMedia	1272
Northgate	1272
Ortek	3122
Panasonic	3760
Pixel Magic	5155
Popcorn Hour	2260
RCA	3335
Ricavision	1272
Rikomagic	5425
RKM	5425
Roku	3061, 1486, 2371
Seagate	2698
Sling Media	5295, 2612
Sony	1272, 2713
Stack 9	1272
Systemax	1272
Tagar Systems	1272
Tibo	4339
Toshiba	1272
Touch	1272
Uebo	3350
Vensmile	4899
Viewsonic	4249, 1272
VIZIO	3670
Voodoo	1272
Western Digital	2558
Xbox	4000, 2049, 1272
Xiaomi	3982
Zappiti	5536, 5538
ZT Group	1272
Pioneer	1123, 1935, 3057, 2432, 4015, 1023, 1384, 2743, 0823, 0032, 3956
Polk Audio	3429, 1289, 2242, 0892, 4431, 0189, 0157
Proficient	3661
Proscan	1254
Proton	0157
Pyle	4333, 4242
QED	0157
Quad	0157
RCA	1254, 2655, 2719, 1123, 3969, 3281, 0420, 2041, 0823, 1023, 2611, 2544, 1390, 2743
Rotel	3896, 4260, 4028
SAE	0157
Samsung	2660, 2809, 2948, 3320, 3154, 2137, 4011, 3540, 1868, 1304
Sansui	0189
Sanyo	4176
Sharp	3736, 3097, 3929, 3381
Sherbourn	3763
Sherwood	1077, 1567, 3120, 3136, 2169, 3679, 3793, 4022, 4090, 3755, 3770, 4771
Sherwood Newcastle	1567, 2169
Sonos	3919
Sony	0158, 1441, 1759, 2172, 2475, 2522, 3700, 1758, 0000, 1622, 2860, 4315, 2582, 3487, 4366, 4457, 2610, 4107, 3986, 4285, 1822, 3257
SpeakerCraft	3661
Stereophonics	1023
Sunfire	0313
Sylvania	0157
Tascam	0420
Teac	0420, 1390
Technics	0309, 0029, 1633
Thorens	1189
Toshiba	3627, 1123
TruAudio	4940
Venturer	1390
Victor	0072
VIZIO	2454, 3935, 4911
Wards	0158, 0189
Yamaha	0176, 1276, 3580, 2061, 2467, 0376, 0036, 3030, 2116, 4008, 2458, 3325, 3917, 2592, 2021, 0187
Zenith	1293
Zonda	0157
ZVOX	2332, 3913, 2334

**THE OFA APP**

Your One For All Smart Control contains codes for all popular devices and brands, but new codes are added to our online database every day. Using the One For All App on your iPhone or Android phone will allow you to upgrade any new codes into your remote using Bluetooth Smart, also known as Bluetooth Low Energy\*. This will ensure that the remote will never become obsolete. You can also use the app to set up all devices, giving you the ability to enter the model numbers of your equipment to get the right code first time.

If you would like to download the app, follow the links below:

\* Please ensure your phone is compatible with Bluetooth Smart.

**LA APLICACIÓN OFA**

Su mando a distancia One For All Smart Control contiene códigos de todos los dispositivos y marcas más populares, y a diario se añaden nuevos códigos a nuestra base de datos en línea. Si instala la aplicación One For All en su dispositivo Android o iPhone, podrá actualizar su mando con nuevos códigos a través de Bluetooth Smart, también conocido como Bluetooth Low Energy\*. Hacerlo le garantiza que su mando a distancia nunca se quedará anticuado.

La aplicación también le proporciona acceso a funciones adicionales, como por ejemplo configuración de actividades.

Si desea descargarse la aplicación, siga los enlaces que se incluyen a continuación:

\* Asegúrese de que su teléfono es compatible con Bluetooth Smart

**APPLICATION ONE FOR ALL**

Votre télécommande One For All est compatible avec tous les appareils et marques populaires. Leur nombre augmentant au fil du temps, il est nécessaire d'adapter notre base de données en fonction. En utilisant l'application One For All sur votre iPhone ou téléphone Android, vous êtes sûr de disposer des dernières mises à jour pour votre télécommande, dotée de la technologie Bluetooth Smart (ou Bluetooth Low Energy)\*, et cela constamment. Vous pouvez également utiliser l'application pour configurer tous les appareils. Vous pouvez ainsi saisir le numéro de modèle de votre équipement afin d'obtenir le code approprié.

Pour télécharger l'application, utilisez le lien ci-dessous :

\* Vérifiez que votre téléphone est compatible avec la technologie Bluetooth Smart.



<https://www.ofa.com/smartcontrol/pos/uk/download>

**WARRANTY / GUARANTEE**

**WARRANTY / GUARANTEE INFORMATION**  
 Terms and Conditions for "100% Guaranteed To Work" policy, and the separate 1 Year Limited Warranty against defects in material and workmanship can be found at [www.oneforall.com/remoteguarantee](http://www.oneforall.com/remoteguarantee), or you may request hard copies by calling 855-716-2573, or via mail to UEI Technical Support Service, Suite 301, 26250 Euclid Ave., Euclid, OH 44132. Please include your full name, product information, and contact information in your request communication.

**LEGAL NOTICES**  
**FCC STATEMENT:**  
 This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
 -Reorient or relocate the receiving antenna.  
 -Increase the separation between the equipment and receiver.  
 -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
 -Consult the dealer or an experienced radio/TV technician for help.  
 This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.  
**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**GARANTÍA | GARANTIE**

**ESPAÑOL**  
**GARANTÍA / INFORMACIÓN DE GARANTÍA**  
 Los términos y condiciones para la política de "Compatibilidad 100% Garantizada" y separadamente 1 año de Garantía Limitada contra defectos de material y mano de obra