

FEATURES AND FUNCTIONS

Use the remote control's keys to perform actions described below (see the following key chart).



When a valid TV code is programmed, the POWER key will turn on or off the TV.



Use SETUP for all programming sequences.



Use INFO to display current channel information.



Use the keypad (0-9) to directly select the channels (e.g., 09 or 031).



Use LAST to recall the last channel.



Use LANG to switch between different languages and audio options, when available on the Digital Adapter.



Use CH+ (or CH-) to select the next higher (or lower) channel.



Use VOL+ (or VOL-) to raise (or lower) the sound volume on the Digital Adapter.




When a valid TV code is programmed these keys will operate the TV's volume control.



Press MUTE once to turn sound off or on.

DC750 Universal Remote Control

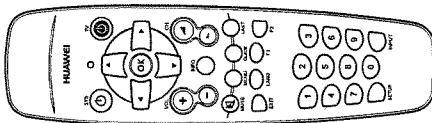

OVERVIEW

The DC750 universal remote is designed to work with the Digital Transport Adapter (Digital Adapter) supplied by your Cable Provider. This remote is designed to operate all of the features and functions of the Digital Adapter, and is programmable to operate the Volume and Power of your TV.

The remote control requires installing two (2) new AAA batteries (included) and simple programming instructions to control your TV. For best results, please read and perform all instructions listed here. Also, keep this guide for future reference.

INSTALLING BATTERIES

1. Pull back the remote control's battery cover and remove it.
 2. Insert the two (2) supplied AAA batteries according to the + and - marks in the battery case.
 3. Push the battery cover back into place.
 4. Test the unit by pressing the power key.
- If batteries are inserted correctly, the Red Light will blink.

NOTE: When batteries need replacement, the remote control will stop operating. Replace the old batteries within 15 minutes and the unit will be restored to its full functionality.

CHECKING THE CODES

If you have set up the remote control using the searching for Your Code procedure, you may need to find out which three-digit code is operating your TV. Perform the following steps after setting up your TV to find out which five-digit code operates your TV.

1. Press and hold SETUP until the Red Light blinks twice, then release SETUP.
2. Enter in 9 - 9 - 0. The Red Light will blink twice.
3. To view the code for the first digit, press 1 once. Wait 3 seconds and count the number of times the Red Light blinks (e.g., 3 blinks = 3) and write down the number in the left most TV Code box (at end of this section).

NOTE: If a code digit is "0" the red light will not blink.

Repeat step 3 four more times for the remaining digits. Use 2 for the second digit, 3 for the third digit, 4 for the fourth digit. Finish writing down the code in the TV Code boxes (at end of this section).

TV Code

--	--	--	--

CHANGING VOLUME LOCK

The DC750 remote is set to control the volume level of the Digital Adapter. Once a valid TV code is programmed the volume keys will change the volume of the TV.

However, you may change the Volume Lock setting to regain volume control of the Digital Adapter as follows:

Changing volume Lock from TV to the Digital Adapter :

1. Press and hold SETUP until the Red Light blinks twice, then release SETUP.
2. Enter in 9 - 9 - 3 (The Red Light will blink twice after the 3).
3. Press and release the digit 1 (The Red Light will blink 4 times after the 1).

Changing volume Lock from Digital Adapter to the TV:

1. Press and hold SETUP until the Red Light blinks twice, then release SETUP.
2. Enter in 9 - 9 - 3 (The Red Light will blink twice after the 3).
NOTE: If a valid TV code is not programmed the Red Light will display one long blink.
3. Press and release the digit 2 (The Red Light will blink 2 times after the 2).

TROUBLES SHOOTING

PROBLEM: During programming, the Red Light displays one long blink.

SOLUTION: An invalid entry has occurred. Check the key to be entered and try programming again.

PROBLEM: The Red Light blinks when you press a key, but the Digital Adapter and TV do not respond.

SOLUTION: Make sure the remote control is aimed at your Digital Adapter and TV and is not farther than 15-feet away.

PROBLEM: When using the volume lock sequence or code verification, the Red Light displays one long blink.

SOLUTION: The long blink indicates that a valid TV code has not been programmed.

PROBLEM: The audio output on the TV is not in the right language.

SOLUTION: Press the Language (LANG) key to change the audio option back to the preferred language.

SETUP CODES FOR TELEVISION

Accurian	1803	1864, 0180, 0178
Action	0873	0171, 1681, 1394
Akai	1675, 1207, 1676	1665, 1866, 1963
Amercia Action	0180	1422, 1765
Anam	0180	0876, 1474
AOC	1965, 1990, 2014	0813, 1265, 2014
Apex Digital	0890, 1217, 2397	2087
Astar	1531, 1738	0171, 1963
Audiocass	0180	0899, 0186, 0683
Audiovox	1564, 0180, 0802	0180, 0171, 1963
Aventura	0171	0180
Axon	1937	1755, 1756
Baysonic	0180	1864, 0171, 1665
BenQ	1932, 1315	1886, 1963
BGH	0876	1447, 0178
Blue Sky	2153	1864, 0171, 1665
Bradford	0180	0886, 1823, 1831
Broksonic	1935	0178
Bydsign	1309	Goldstar
Candle	0186	GPX
Carrier	0170	2693
Casio	1205	0170
Citizen	0186, 1935	0683
Clanton	0180	0180
Coby	1538, 1634, 2017	1753, 2293, 2494
Comarc	2326, 2338, 2340	2690, 3204
Continental	2344, 2345, 2348	0178
Corradir	3022	0180
Craig	0180	1783
Crown	0180	1348, 1745, 1783
Curtis	1200, 2352, 2397	0180
Curtis Mathes	0145, 1661	0865
CXC	0180	1494, 1088
Daewoo	1661, 0661	0849, 1219, 1294
Della	1264, 1080	1814
Della	1369	1814
Denon	0145	1494, 1088
Denstar	0628	1814
Digital Lifestyles	1765, 1822	1746
Disney	1665, 1892	1463, 1286, 1394
Durabrand	1665	1603, 1665, 1684
Dynex	1463, 1785, 2049	1990
Electrograph	1755, 1623	1603, 1990
Electrohome	1670	1423, 1564, 0171
Elektra	1661	1204, 1517, 1892
Element	1687, 1886, 2183	1710, 1785, 1892
Emerson	0180	1963, 2049, 2417
Emprex	0873	2189
Encross	1675, 1207, 1676	1661, 0628
Envision	1688, 1689, 1692	0877
ESA	1935, 2232	2189, 2256
Fajitsu	0180	1289
Finn	1965, 1990, 2014	JVC
Futurtech	2087, 2402, 2621	1765, 1822
Gateway	1623	KDC
GE	1531, 1738	1498, 1687
GFM	0180	0180, 0178, 0171
Go Video	1564, 0180, 0802	1665
Goldstar	0846, 0875, 1766	0706, 0628
GPX	1803, 1937, 1951	Konka
Gradiente	2121, 2513, 3065	0628, 1831
Grundig	0171	Kost
Gruppy	0683	1483
Haier	0180	Kresen
Hannspree	1753, 2293, 2494	KTV
Harvard	2690, 3204	0180
Hedios	0865	Lasonic
Hewlett Packard	1494, 1088	
Hikalo	0628	
Himitsu	0180, 0628	
Hisense	1314, 1660, 2098	
Hitech	1643, 0145, 0797	
Hitachi	2215, 2433, 2679	
HP	1814	
Hyundai	1494, 1088	
I-Inc	1814	
ILo	1746	
Initial	1463, 1286, 1394	
Insignia	1603, 1990	
IRIS	1423, 1564, 0171	
IRT	1204, 1517, 1892	
IX	1710, 1785, 1892	
JCM	1963, 2049, 2417	
Jensen	2189	
JVC	1661, 0628	
KDC	0877	
KES	2189, 2256	
Kono	1289	
Konka	1601	
Kost	1498, 1687	
Kresen	0180	
KTV	0706, 0628	
Lasonic	1665	

LG	1423, 1447, 0178
LieOn	0856, 1530
LodgingStar	1088
LXI	3147
MAG	1498, 1687
Magnavox	1454, 1866, 1755
	0171, 0706, 0186
	0802, 1198, 1365
	1525, 1867, 1963
	1990, 2655
Marantz	1454, 0704, 1398
Maxent	1755, 1211, 1757
Megatron	0150, 0178, 0877
Memorex	1665, 1670, 1785
	1892, 2739
MGA	0150, 0178
Mitek	1603, 1990
Miray	3309
Mitsubishi	1250, 0150, 0178
	1797
Multitech	0180
NAD	0156, 0178
Naxa	2104, 2735
NEC	0170, 0704, 0876
	1398, 1797, 2026
NetTV	1755, 2753
NEX	1814
Nexus Electronics	2183
Nikko	0178
Niko	1581
Nimbro	2104
Norcent	0824, 1365, 1590
	1591, 1745
Norwood Micro	1286, 1303
NoVision	1657, 2158
Olevia	1610, 1144, 1240
Onwa	0180
Oploma	1348
Orion	1463
Panasonic	1480
PARK	2104
PDI	1474
Peacey	0156, 0178
Philco	0145, 0171, 1661
	1394, 1665, 1965
Philips	1454, 1866, 0171
	0829, 1394, 1463
	1867
Pioneer	1457, 1398
Planar	1496
Polaroid	0865, 1286, 1314
	1328, 1341, 1498
	1538, 1687, 1766
	1767, 2063, 2121
Portland	1661
Prima	1753, 1785
Proscan	1447, 2147, 2183
	2256
Proton	0178
Protron	1320
Proview	1498, 1687
Punktal	2687

Viewsonic	1755, 1564, 0797
	0804, 0885, 1330
	1505, 1578, 1627
	2062, 2074, 2049
	2067, 2277
Viore	1207, 0684, 2104
	2352, 3094, 3118
	1336
Vivart	1320
Vho	1320
Vizio	1758, 0864, 0885
	1756, 2707
Wards	0156, 0180, 0178
	0186
Waycon	0156
Westinghouse	0885, 0890, 1217
	1282, 2195, 2293
	2489
White Westinghouse	1661
Wyse	1365
Yamaha	0797
Zenith	1423, 0178, 0145
	1661, 1365

ADDITIONAL INFORMATION
 The DC750 remote control does not have any user serviceable parts. Opening the case, except for the battery cover, may cause permanent damage to your remote control.

No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language, in any form or by any means, electronic, mechanical, magnetic, optical, manual, or otherwise, without the prior written permission of Universal Electronics Inc.

All other product or service names are the property of their respective owners. Copyright Universal Electronics Inc., 2012.

1755, 1564, 0797
 0804, 0885, 1330
 1505, 1578, 1627
 2062, 2074, 2049
 2067, 2277
 1207, 0684, 2104
 2352, 3094, 3118
 1336
 1320
 1758, 0864, 0885
 1756, 2707
 0156, 0180, 0178
 0186
 0156
 0885, 0890, 1217
 1282, 2195, 2293
 2489
 1661
 1365
 0797
 1423, 0178, 0145
 1661, 1365

Viewsonic
 Viore
 Vivart
 Vho
 Vizio
 Wards
 Waycon
 Westinghouse
 White Westinghouse
 Wyse
 Yamaha
 Zenith

Pyle	1200, 2196
RadioShack	0180, 0178
RCA	1447, 1661, 0899
	1781, 2434, 2746
	2932
Realistic	0180, 0178
Recco	0706
RevolutionHD	1623
Runco	1398
Sampo	1755
Samsung	0178, 0766, 0814
	1060, 2051
Sansui	0171, 1463, 1409
	1670, 1892, 1935
Sanyo	1142
Sciptre	0878, 1317, 1360
	1589, 2337
Scotch	0178
Scott	0180, 0178, 1711
Sears	0156, 0178, 0171
Semivoix	0180
Semp	0156, 1743
Sharp	0818, 2402
Sherwood	1399
Simpson	0186
Skyworth	1799
Solartism	1220
Sole	1377, 1483, 1530
	1623
Sony	0810, 1685
Soundesign	0180, 0178, 0186
Sova	1320
Soyo	1520, 1746, 1826
	1823, 1830, 1831
Spectroniq	1498, 1687
Squareview	0171
SSS	0180
Starlite	0180
SumbriteTV	1610, 1420, 1435
Superscan	2337
Supersonic	1753, 2104, 2784
	3154, 3204
SVA	0865, 0871, 1963
Sylvania	1864, 0171, 1314
	1394, 1665, 1886
	1963
Symphonic	0180, 0171, 1394
Syntax	1610, 1144, 1240
Taiung	1286, 1756, 2496
TCL	2434
Teknika	0180, 0150, 0186
TMK	0178
Tophouse	0180
Toshiba	1524, 0156, 1343
	1509, 1743, 1935
TriTech	1665, 1723
US Logic	1286, 1303
Videkron	1398
Vidtech	0178

1423, 1447, 0178
0856, 1530
1088
3147
1498, 1687
1454, 1866, 1755
0171, 0706, 0186
0802, 1198, 1365
1525, 1867, 1963
1990, 2655
1454, 0704, 1398
1755, 1211, 1757
0150, 0178, 0877
1665, 1670, 1785
1892, 2739
0150, 0178
1603, 1990
3309
1250, 0150, 0178
1797
0180
0156, 0178
2104, 2735
0170, 0704, 0876
1398, 1797, 2026
1755, 2753
1814
2183
0178
1581
2104
0824, 1365, 1590
1591, 1745
1286, 1303
1657, 2158
1610, 1144, 1240
0180
1348
1463
1480
2104
1474
0156, 0178
0145, 0171, 1661
1394, 1665, 1965
1454, 1866, 0171
0829, 1394, 1463
1867
1457, 1398
1496
0865, 1286, 1314
1328, 1341, 1498
1538, 1687, 1766
1767, 2063, 2121
1661
1753, 1785
1447, 2147, 2183
2256
0178
1320
1498, 1687
2687

Viewsonic
 Viore
 Vivart
 Vho
 Vizio
 Wards
 Waycon
 Westinghouse
 White Westinghouse
 Wyse
 Yamaha
 Zenith

Pyle	1200, 2196
RadioShack	0180, 0178
RCA	1447, 1661, 0899
	1781, 2434, 2746
	2932
Realistic	0180, 0178
Recco	0706
RevolutionHD	1623
Runco	1398
Sampo	1755
Samsung	0178, 0766, 0814
	1060, 2051
Sansui	0171, 1463, 1409
	1670, 1892, 1935
Sanyo	1142
Sciptre	0878, 1317, 1360
	1589, 2337
Scotch	0178
Scott	0180, 0178, 1711
Sears	0156, 0178, 0171
Semivoix	0180
Semp	0156, 1743
Sharp	0818, 2402
Sherwood	1399
Simpson	0186
Skyworth	1799
Solartism	1220
Sole	1377, 1483, 1530
	1623
Sony	0810, 1685
Soundesign	0180, 0178, 0186
Sova	1320
Soyo	1520, 1746, 1826
	1823, 1830, 1831
Spectroniq	1498, 1687
Squareview	0171
SSS	0180
Starlite	0180
SumbriteTV	1610, 1420, 1435
Superscan	2337
Supersonic	1753, 2104, 2784
	3154, 3204
SVA	0865, 0871, 1963
Sylvania	1864, 0171, 1314
	1394, 1665, 1886
	1963
Symphonic	0180, 0171, 1394
Syntax	1610, 1144, 1240
Taiung	1286, 1756, 2496
TCL	2434
Teknika	0180, 0150, 0186
TMK	0178
Tophouse	0180
Toshiba	1524, 0156, 1343
	1509, 1743, 1935
TriTech	1665, 1723
US Logic	1286, 1303
Videkron	1398
Vidtech	0178