



POWER

SETUP

INPUT

MENU

COX

GUIDE


INFO



ZOOM

CC

EXIT

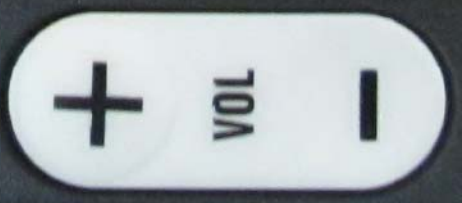

LAST



PG/CH

MUTE



1

2

3

4

5

6

7

8

9

0

COX





URC-2220-R

Remote Support:
REMOTES.COX.COM

Evaluation sample -Not for resale					
NAME	UEI COX DTA MINI 2014 URC2220BCD-R CG P/N 000-412100C.10				
SAMPLE	<table border="1"><tr><td>V</td><td>DEVELOPMENT</td></tr><tr><td></td><td>COMMERCIAL</td></tr></table>	V	DEVELOPMENT		COMMERCIAL
V	DEVELOPMENT				
	COMMERCIAL				
STATUS	<table border="1"><tr><td>V</td><td>WORKING</td></tr><tr><td></td><td>NON-WORKING</td></tr></table>	V	WORKING		NON-WORKING
V	WORKING				
	NON-WORKING				
DATE	7/4/2014				
REMARK	T2 sample with XI SW_3533				
UPDATE					

Programming for TV:

- (1) Turn on the TV
- (2) Press and hold the SETUP key until the POWER key blinks twice, then release
- (3) Press and hold the SELECT key until the TV turns off, then release

Version 1.0



T16036_33F 96_CoxDtaMiniMini 4GE_X5.t16x



