4× 4×

1 2m 3m 4m 5m 6m 7m 8w 9m p 0 ...

ON and Off

GUIDE:

Displays

HOME: Takes you to

VOLUME:

Controls and

x4 Blinks

The feedback LED will display four

blinks to indicate that the volume

has now been unlocked

(4)

43 B A

de dx

« N »

1 2- 3-

4 on 5 sc 6 mm 7 mm 8 mm 9 mm

P 0 ···



STB: Powers ON and OFF your set **© = 0** 8888 EXIT: current

VOICE: nicrophone at top TRANSPORT


(IR assisted pairing)

Hold Play/Pause + Digit 0 until Feedback LED starts blinking

0


(b) Em (c)  Feedback LED will stop blinking to

Press and hold OK/SELECT and EXIT until the feedback LED

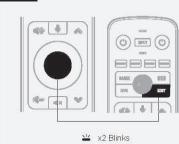




 Enter Corresponding Device Digit to lock Volume to




The feedback LED will blink twice

 



Press and hold OK/SELECT and EXIT until the feedback LED

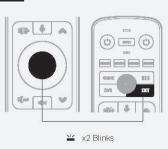

Press Volume Up key

(1)9 U A




### TV Brand Setup

 - Turn ON the TV that you wish
  - Set / Simple Set table below. Note the number that corresponds to your device brand


Find your device brand in the Brand

TV Brand	Digit
LG	1
Panasonic	2
Philips, Magnavox	3
RCA	4
Samsung	5
Sanyo	6
Sharp	7
Sony	8
Toshiba	9
VIZIO	0

Press and hold OK/SELECT and EXIT until the feedback LED



Press the OK/SELECT key once,

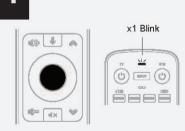



While pointing the remote at the TV, press and hold the number key for your brand that you noted

device turns OFF

LED will go OFF and will blink (ON-OFF) during every code

Release the key as soon as the





Press the Power key on the

Press the Power key on the remote control to turn your device

0 = 0

a. If Pairing is unsuccessful, hold

OK/SELECT and EXIT until

LED blinks and press digits 9 - 6 - 6

9 6 6

b. Repeat Steps 1 and 2

(b) Ex (c)

If this does not work for your device, Proceed to Direct Code Entry steps.



Turn ON the device that you wish to setup

Find your device brand in the

**Audio Device Brand Setup** 

Brand Set / Simple Set table Note the number that corresponds

to your device brand

**Audio Brand** Digit Bose Denon 2 LG 3 4 Onkyo Panasonic 5 Philips 6

8

9

0

Press and hold OK/SELECT and 3 Exit until the feedback LED blinks



¥ x2 Blinks

Press the OK/SELECT key once, feedback LED blinks once



Press digit key 2. 5



While pointing the remote at the Audio Device, press and hold the number key for your brand that

device turns OFF.

LED will go OFF and will blink (ON-OFF) during every code transmitted.

Release the key as soon as the





Press the Power key on the remote control to turn your device

Done

If this does not work for your device, Proceed to Direct Code Entry steps.




### **Direct Code Entry for TVs**

Turn ON the TV

Refer to Code List for the brand setup code for the device you would like to control (SEE REVERSE SIDE


Press and hold OK/SELECT and EXIT until the feedback LED blinks

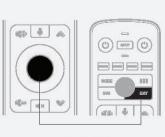

¥ x2 Blinks




Enter the 4 digit device code. The feedback LED will blink twice to indicate successful programming

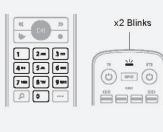



If your TV turns off process is complete, if TV does not turn off repeat steps 2 - 7 using the next Turn ON the Audio Device

**Direct Code Entry for Audio Devices** 

 

Press and hold OK/SELECT and EXIT until the feedback LED blinks twice




Pioneer Samsung

Sony

Yamaha



Enter the 4 digit device code. The feedback LED will blink twice to indicate successful programming

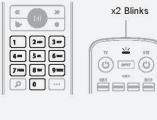

(U) THEN

Press the Power key on the



If your Audio Device turns off process is complete, if Device does not turn off repeat steps 2 - 7 using the next code in the Chart

## **FCC Statement**

**Getting Started** 

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, the user is encouraged or try to correct the interference by one or more of the following measures: · Reorient or relocate the receiving antenna

 Increase or decrease the separation between the equipment and receiver

· Connect the equipment into an outlet on a circuit different from that to which the receiver is connected Consult the dealer or an experienced remote control/
TV technician for help.

· It is strongly recommended that the TV be plugged into a separate wall outlet.

This equipment has been verified to comply with the limits for a Class B computing device, pursuant to FCC Rules. The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.

# **Industry Canada Statement**

For Industry Canada Industry Canada Statement This device complies with RSS-210 of the Industry Canada Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le