



## Cablevisión

Universal Remote Control  
Quick Reference Guide

## **CONTROLLING YOUR DEVICES**

1. Turn on your Device (TV or Audio Amp)
2. Locate the brand and a 5- digit code for your Device at the setup code list included at the end of this document.
3. Press **MODE** until the feedback LED of the device you want to program lights.
4. Press and hold **MUTE** and **SELECT** at the same time until the green light flashes twice.
5. Using the number keys enter the 5-digit code for your brand of TV. If performed correctly, the green light flashes twice.
6. Aim the remote at your TV and press **VOL or MUTE** key once. Your TV should ramp up or down or MUTE. If Volume does not change, repeat steps 3 and 5, trying each code for your brand until you find the correct code.

## **Activating RF**

To pair the FLOW remote control to the STB, perform the following steps:

1. Press and HOLD **PLAY/PAUSE** and **MUTE** at the same time until the Feedback LED light flashes twice.
2. If the pairing is successful the Feedback LED will blink two times.

**Note:** if you get one long blink means the paring sequence fails, please try again since step 1

## **Deactivating RF**

To deactivate the RF Transmitter on the DIRECTV remote control, perform the following steps:

1. Press and hold **MUTE** and **EXIT** at the same time until the green light flashes twice.
2. If the pairing is successful the Feedback LED will blink four times.

**Note:** if you get one long blink means the paring sequence fails, please try again since step 1

## **RESTORING FACTORY DEFAULT SETTINGS**

To reset all the functions of the remote control to the factory default settings following these steps:

1. Press and hold **MUTE** and **SELECT** at the same time until the green light flashes twice.
2. Using the number keys, enter **9-7-7**. (The green light flashes 4 times).

## **COMPLIANCE WITH FCC RULES AND REGULATIONS**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase or decrease the separation between the equipment and receiver.
- Consult the dealer or an experienced remote control/ TV technician for help.

This equipment has been verified to comply with the limits for a Class B computing device, pursuant to FCC Rules. The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.

### **FCC Authorization Label**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
- 2 This device must accept any interference received, including interference that may cause undesired operation.

Responsible Party:

Universal Electronics

201 E. Sandpointe Ave.

8th Floor

Santa Ana CA 92707

Phone: +1.714.918.9500

Fax: +1.714.918.4100

FCC ID #: MG3-9750

### Setup Codes For Audio - Amplifier

Denon	2706
Harman/Kardon	3045
Marantz	2138, 1892

### Setup Codes For Audio – Accessory

Apple	1115
B & W	2441, 3943
Bose	4307, 3708
Boston Acoustics	3698
Bowers & Wilkins	2441, 3943
Definitive Technology	3645
Denon	2502, 4025
Durabrand	1561
Haier	3516
Harman/Kardon	3756, 3517
Insignia	3951
JBL	3756, 3535
JVC	3049
Klipsch	4198
Lenoxx	1561
LG	3217, 3996
Logitech	1408, 3561
Martin Logan	3526
NBX	3868
Onkyo	3984, 3992
Panasonic	3323, 3409, 3767
Philips	3962, 3282, 2675, 4012
Pioneer	3956
Polk Audio	3429
RCA	2544
Samsung	2660
Sharp	3736

Sonos	3919
Sony	3700, 4315, 4285, 2610
Toshiba	3627
VIZIO	2454, 3935
Yamaha	3283, 2116, 2458, 2021
ZVOX	3913, 2332

### **Setup Codes For Audio – Receiver**

ADC	0531
Admiral	4064
Aiwa	0121, 1347, 0158, 0189
AMC	1077
Anthem	3294
Anthem Statement	3294
Arcam	1189, 0189
Audiotronic	1189
Bose	1933, 1629, 3959
Britânia	1772
Capetronic	0531
Carver	0189, 0121, 1189
Coby	1389, 2748
Curtis	1389, 0797
Denon	2857, 3347, 3380, 2516, 1360, 2820
Epworth	0121, 1347, 0158, 0189
Garrard	0744
Gateway	1567
GPX	0744
Gradiente	3976, 3107, 3980, 3982, 0557
Harman/Kardon	1304, 2443, 3391, 0189, 4178, 2670
Hitech	0744
HitPlus	2483
Insignia	2169, 1077
Integra	2730, 1805, 3860, 2503, 0135
JBL	3391

JC Penney	0744
Jensen	0797, 1389
JVC	2239, 2040, 3115, 2331, 0531
jWin	0797
Kenwood	1313
Kioto	0797
Koss	1546, 0744
Lenoxx	1437
LG	2197, 2676, 3509, 2284, 2751, 3495
Linn	0189
LXI	0744
Magnavox	0189, 0531, 1269, 1189, 1831
Marantz	2114, 0189, 1189, 1269
Micromega	1189
Myryad	1189
Nakamichi	1313
Noblex	1748, 3987, 4092, 1546, 4091
Norcent	1389
Nova	1389
NTDE Geniesom	0744
Onkyo	1805, 2730, 3860, 2503, 0135, 2225
Optimus	1023, 0531, 0744, 0797
Orient Power	0744
Panasonic	2967, 3712, 3055, 1633
Penney	0744
Philco	4094, 1562, 1831
Philips	2459, 3783, 1831, 2341, 3236, 3127, 3741, 2311, 2749, 0189, 1269, 2461, 1189, 3005, 3172, 3625, 3709, 3715, 2600, 3815
Pioneer	2432, 1935, 1384, 1023, 1459, 0531
Polk Audio	0189
RadioShack	0744
RCA	2426, 2490, 1546, 2485, 2611, 0531, 1459, 1023
Recco	0797
Regent	1437

Samsung 1304, 3107	1868, 2809, 2603, 3382, 3154, 3540, 3193,
Sansui	0189
Sanyo	2600, 2710
Sharper Image	0797, 1546
Sherwood	1077, 1567, 1905, 3120, 2169
Sherwood Newcastle	1567, 2169
Sony 1758, 2860, 3463, 3694, 1347, 0797	1622, 2522, 1822, 2475, 0158, 1058, 1759,
Starlight	0797
Stereophonics	1023
Sunfire	1313
Sylvania	0797
Teac	0797, 1546, 4060
Technics	1633
The Sharper Image	0797, 1546
Thorens	1189
Tophouse	4489
Toshiba	1788
Tronics	3981
Vicini	2365
Vtrek	2426, 2483
Wards	0158, 0189
Winco	4306
Yamaha 1376, 3267, 2950	3580, 3030, 2467, 0176, 1276, 0376, 1815,
Zenith	2197, 0744

### **Setup Codes For TV**

888	4159
Acer	1339
ad notam	4382
Admiral	3485, 4030, 4111, 4221, 4554, 0463, 0179, 1555, 1891
Advent	0761, 0783, 0817

Affinity	3717, 3577
Aftron	0891
Aiko	0092, 1579, 2132
Aiwa	0701, 1362
Akai	0702, 1675, 0812, 1688, 1207, 1385, 0672, 1935, 0765, 1689
Akawa	3391
Akura	1523, 1687
Alaron	0179
Alfide	0672
America	4179
America Action	0180
Amoisonic	4179
Anam	0180
Anhua	0180
AOC	1589, 3720, 4170, 3963, 1365, 4184, 4185, 1089, 2402, 3938, 4101, 2014, 2087, 2621, 1590, 3707
Aomni	1623
Apex Digital	2397, 0765, 4347, 0748, 0767, 1217
Ario	2397
Astar	1531
Asus	3340
Atvio	3638, 0891, 3636, 3653, 3654, 3657
Audinac	0180, 0391
Audiosonic	1675
Audiovox	1564, 0180, 0092, 1766, 1769, 2121, 0451, 0623
Auria	2087, 2014, 2277
Aventura	0171
Avera	2397
Avol	3118
B & O	1620
B Vision	3327, 3847
Bang & Olufsen	1620



Basic Line	3485
Baysonic	0180, 0236, 0463
Bell & Howell	0154, 0016
BenQ	1032, 1756
Berkshire	0047
BGH	4029, 4070, 0898, 2414, 0876, 3485, 4028, 4030
Blu:sens	2735
Blue Light	3655
Blue Sky	2153, 3997
Bluesky	2153, 3997
Boigle	1696
Bradford	0180
Britânia	2414
Broksonic	0463, 1935, 1892, 1938, 0236, 0642
Candle	0186, 0178
Carver	0054
CCE	4091, 4092, 0037, 0623
Celera	0765
Challenger	2565, 3640, 3879, 4378, 4530, 4531, 3327, 3847, 4149
Champion	1362
Changhong	3814, 0765
Cineral	0092, 0451
Citizen	0186, 0178, 0092, 1935, 0451, 0561
Clarion	0180
Coby	3478, 2315, 3627, 2344, 2306, 2345, 2340, 1538, 2348, 3202, 2494
Commercial Solutions	0047, 1447
Concerto	0178
Conia	1523, 1687
Contec	0180
Contex	4053
Continental	1682, 2357, 0858, 3321, 4179
Continental Electric	3322, 3321

Coradir	2844
Craig	0180
Crosley	0054, 3115
Crown	0180, 0672
Crown Mustang	0672, 0898
Curtis	2855, 3577, 3895, 2397, 4035, 2003, 3636, 1326, 1314, 3382, 3717
Curtis Mathes	0451, 0702, 1661, 0054, 0047, 0016, 0145, 0154, 0178, 1347
CXC	0180
Cytron	1326, 2003
Daenyx	0179, 0180, 0672
Daewoo	1661, 0623, 0092, 0451, 3115, 0672, 0154, 3879
Daytek	3651, 2241
Daytron	0092, 0180
Decktron	4613
Denon	0145
Denstar	0628
Dewo	0628
Digistar	1565
Digitrex	4207
Disney	1892, 2152
Drean	0037
Dukane	1398
Dumont	0017
Durabrand	0463, 0171, 1034, 0178, 0180, 1878
Dynex	2049, 2184, 1111
Ectec	0391
Electrograph	1623, 1755
Electrohome	0463, 1670
Electron	2855
Elektra	0017, 1661
Element	3559, 1687, 2183, 2964, 1886, 4660
Elite	1457

Emerson	1864, 0463, 0171, 1394, 1886, 1963, 0236, 0180, 0179, 0178, 1944, 3623, 1661, 0623, 2183, 0451, 0154, 3559
Encross	0876
Envision	1589, 1365, 2087, 2014, 2621, 1454
Epson	1122
Epworth	0701, 1362
EQD	2014, 2087, 2277
EQD Auria	2014, 2087, 2277
ESA	0812, 0171, 1944, 1963
Fair Mate	1326
Favi	3382, 2676
Firstline	0037
Fisher	0154, 1362
Fluid	2964
Frigidaire	2231
Fujimaro	1523, 1687
Fujitsu	0186, 0179
Funai	0171, 0180, 1394, 0179, 1963, 1864
Futuretech	0180
Gateway	1755, 1756
GE	0047, 0451, 1447, 1347, 0051, 0178, 0765, 0628
General Electric	0047, 0451, 1447, 1347, 0051, 0178, 0765, 0628
GFM	0171, 1963, 1864, 1886
Gibraltar	0017
Global	4177
Global Home	1565, 0767, 1356
GoldStar	0178, 0037, 1920
GPX	0179
Gradiente	1369, 1804, 0178
Grundig	0672, 0037, 2125
Grunpy	0179, 0180
Haier	1749, 2309, 2876, 4120, 3382, 2690, 3204, 1748, 1753, 2293, 0768, 4398, 1034, 2494, 4112

Hallmark	0178
Hannspree	1348
Harley Davidson	0179
Harman/Kardon	0054
Harvard	0180
H-Buster	3620, 3419
Helios	0865
Hello Kitty	0451
Hewlett Packard	1642, 1089, 3404
Hikato	0628
Himitsu	4179, 0180, 0628, 0779
Hisense	3519, 2183, 4029, 4070, 4109, 1660, 2098, 4618, 1314, 0748, 4398, 4621, 3382
Hitachi	3639, 2431, 2433, 3697, 1643, 2215, 2981, 2132, 2676, 0145, 1145, 0016, 0178, 3382, 0679
Hitech	1682, 4179
Hiteker	3118
HP	1642, 1089, 3404
Hyundai	0849, 1219, 4325, 4509, 4671, 1139, 1244, 1294
I-Inc	1746
iLo	1603, 1394
Infinity	0054
Initial	1603
Innova	0037
Insignia	2049, 1564, 1326, 1892, 2002, 1423, 0171, 0463, 1385, 1660, 1963, 2184
Inteq	0017
iRIS	2189
IRT	0628, 0451, 0698, 1661
iSymphony	3382, 3118
ITT Nokia	0180
James	3183
JBL	0054
JCM	2189

Jensen	1326, 3204, 0761, 0817
JVC	1774, 1601, 3393, 4070, 0053, 2321, 2271, 3650, 0463, 0650, 1670, 1362, 1892
KDS	1523, 1687
KEC	0180
Ken Brown	4056, 1321, 4099, 4221, 4444, 0236, 0463
Kiland	4430
Kioto	0628, 0785, 0054
KLH	0765, 0767
Konka	0632, 0628, 1385, 1404, 1111
Kreisen	0876
KTV	0180
Lark	0386
Legend	2397, 2309
Lexus	3638, 3654, 3657
LG	2731, 1423, 1860, 2358, 0178, 3941, 2182, 3404, 2424, 1265, 1753, 4086, 1721, 2864, 2612, 0017
LG Alps	2358
Logik	0016
Luxman	0178
LXI	0154, 0156, 0047, 0178, 0017, 0054, 1347
Lynx	1565
M&S	0236, 0054
MAG	1687, 1523, 3331
Magnavox	3623, 0054, 2597, 1454, 2372, 1944, 1963, 0186, 0179, 0230, 0171, 1365, 0051, 0386, 1755, 1867, 2676
Magnum	4179
Majestic	0016
Marantz	0054, 1398, 0037, 1454
Master-G	3321, 3419, 4177
Matsushita	0051, 0250, 0650
Maxent	1755

Megatron	0145, 0178
Memorex	0463, 0179, 1670, 1892, 1938, 0178, 1920, 0154, 2049, 0016, 0150, 1687, 1924, 1927
MGA	0150, 0178
Microsonic	1326, 2483, 3328, 3419, 3485, 3679, 4235
Midland	0017, 0047, 0051
Mintek	1603
Miray	3847, 2414, 2429, 3183, 4176, 4177, 3322, 0785, 3485, 4178, 0898, 3309, 3321
Misakae	0171
Misakai	0171
Misawa	0628
Mitsubishi Electric	0150, 1250, 0178, 1797
Mitsui	4179, 1123, 1385, 3638, 3652, 3654, 3656, 3657
MTC	0178
Multitech	0180
Mx Onda	1523, 1687
NAD	0178, 0037, 0156
Naoki	1540, 2357
Naxa	2104, 2735, 3382
NEC	1797, 1398, 0876, 2293, 0178
Netsat	0037
NetTV	1755
New Acoustic Dimension	0178, 0037, 0156
NEX	3861
Next Base	2064
Nexus	1564, 3519
Nexus Electronics	2183
Nikko	0178, 0017, 0047, 1347, 0154, 0156, 0092
Nimbro	2104
Nisato	0391
Noblex	1362, 4029, 3697, 2003, 3803, 4030, 4149, 4505, 0430, 0154, 0482, 4205
Nokia	0180, 0861

Norcent	1365, 1589, 0748, 1089, 1590
Nordmende	3419, 3861, 3134, 3327, 3767, 3835, 3321
NTC	0092
Nu-Tec	2157
NuVision	2158, 4347
oCOSMO	3899
OK Vision	1696
OKI	2676
Ölevia	1610, 1331, 1144
Onwa	0180
Optimus	0250, 1927, 1924, 0154, 0650, 0679
Optique	2189
Orion	0463, 0236, 1938, 3485, 0179, 1892, 2031, 3540, 3650
Otic	1523, 1687
Packard Bell	0092
Pagoda	1531
Panasonic	1480, 1291, 3834, 1636, 3825, 0051, 0250, 0650, 1941, 1927, 1924, 0047, 0053, 0054, 0145, 0150, 0154, 0156, 0178, 1347
Panavideo	3679
Panavox	0861, 2724, 4149, 3835
PARK	2104
Philco	3426, 3022, 4177, 0451, 2414, 1362, 1661, 1963, 0092, 4178, 0054, 0171, 1394, 0145, 0179, 0186, 0463, 3879, 0391, 0786, 3639, 3697
Philips	1454, 1887, 1867, 2597, 2372, 4222, 2800, 2708, 3623, 1744, 0230, 2813, 2704, 0054, 0017, 2768, 0171, 1944, 0037, 4478, 0639, 3439, 3614, 3678, 1365, 1394, 1589, 1815
Pioneer	1457, 0679, 1260, 1398, 0047
Planar	0679, 1589, 3910
Polaroid	1523, 1769, 1538, 1385, 1687, 1767, 4035, 2121, 1327, 0765, 0865, 1314, 1565, 1766,

	2117, 1326, 2002, 2120, 4620, 1524
Portland	1661, 0092, 0451
Precision	1792
Prima	1753, 2049, 0761, 1749, 0783, 0817
Prism	0051
Proscan	3577, 3382, 2183, 3717, 3332, 3636, 3895, 4035, 4495, 1347, 4053, 4494, 2746, 3953, 0047, 1447
Proton	0178
Proview	1687, 1523
Pulsar	0017
Punktal	0642, 2687
QuantumFX	2337
Quasar	0051, 0250, 1291, 1927, 1924, 3899, 4207, 4367, 0650
Queen	4508
RadioShack	0180, 0178, 0154, 1920, 0047
Ranser	2141
RCA	2403, 2429, 3793, 2431, 3419, 2932, 3426, 3847, 2434, 2746, 0047, 1447, 1347, 3577, 2247, 4214, 3382, 3717, 1781, 3332, 3895, 2187, 3835, 3636, 2183, 2855, 4627, 0679, 4053, 4394, 4623, 4625, 1661, 4035, 4494, 1385, 2002, 3938, 0051, 0090, 1670, 2724
Realistic	0154, 0180, 0178
Recco	3847, 0898, 3183
Record	0230
RevolutionHD	1623
Runco	1398, 0017
Sampo	1755
Samsung	2051, 0812, 0702, 3993, 2103, 0482, 0650, 0178
Sankey	2964
Sansei	0451, 4030, 0092, 3697
Sansui	0463, 1892, 3540, 1670, 1935, 3564, 4053,



	1938, 4442, 0171, 3559
Sanyo	0154, 1142, 1362, 4667, 2049, 1480, 3697, 0054, 0088, 3861
Sceptre	3899, 2528, 2337, 1217
Scotch	0178
Scott	0178, 0236, 0179, 0180
Sears	0154, 0054, 0156, 0178, 0179, 0047, 0171
Seiki	3953, 2964, 3559, 3560, 3382, 4635, 0178
Seiko	3651
Seiko Epson	1122
Semivox	0180, 0236, 0463
Semp	1743, 0156, 1356, 3793
Semp Toshiba	1743, 3793, 3469, 0156, 1356
Sens	1749
Serie Dorada	0178, 0180, 3485, 3814, 4221, 0156
Seura	4303
Sharp	2360, 1659, 4507, 0386, 2402, 1457, 4398, 3485, 3175, 3796
Siam	0037
Signature	0016, 0054
Signature2000	0016, 0054
Silo	3899
Silo Digital	3899
Simpson	0186
Síragon	2724
Skyworth	1815, 1799
Solé	1623, 4549
Soneview	4179
Sony	0810, 1300, 3404, 1685
Soundesign	0178, 0180, 0179, 0186
Soyo	1746
Space Tek	1696
Spectroniq	1523, 1687
Speler	4041

Squareview	0171
SSS	0180
Starlite	0180
STI	3793
SunBriteTV	2337, 2528, 1610
Superscan	0864, 1944, 0171
Supersonic	2104, 3877, 1753, 3204
Suzuki	4434, 4554
Suzuki Time	4434, 4554
SVA	0748, 0865, 0768, 0871, 0872, 1963
Sylvania	1864, 0171, 0054, 1963, 1886, 1944, 1394, 1314, 0186
Symphonic	0171, 1944, 1963, 1394, 0180
Syntax	1610, 1144, 1331
SZK	4434, 4554
TAHOCHI	0561
Taki	1540
Talent	0178
Tamashi	0642
Tatung	1756
TCL	3426, 2429, 3847, 2414, 2434, 4398, 4176, 4177, 0898, 2403, 4178, 0826, 3183
Teac	0037
Technics	0051, 0250, 0017, 0047, 1347, 0650
Technol Ace	0179
Techwood	0051, 0178
Tecnomaster	3331, 4612
Teknika	0186, 0016, 0179, 0054, 0180, 0092, 0178, 0150
Telefunken	2414, 0702, 4025, 4302, 0178
TMK	0178
TNCi	0017
Tonomac	1321, 3485, 4221, 4444, 4554
Tophouse	3879, 3485, 4571, 4600, 0180, 0672, 0698, 1385
Tosaki	1540, 2357, 1404

Toshiba	1524, 3134, 0156, 2724, 2006, 1935, 1743, 3469, 1343, 1356, 0650, 1369, 1265, 2676, 0154, 2565
TVS	0463
Ultra	0391
Victor	0053, 0145, 0150, 0156, 0186, 0250
Vidikron	1398, 0054
Vidtech	0178
Viewsonic	2014, 3706, 2087, 0864, 1330, 1542, 1627, 1755, 2049, 2277, 3910, 0885, 1564, 1578, 1742, 4021, 1365
Viore	3382, 3118, 2104, 1207
Vivitek	1369
VIZIO	1758, 3758, 2707, 2757, 1756, 3415, 2512, 0864, 0885
Watson	3485
Waycon	0156
Westinghouse	1712, 3579, 3382, 0885, 1300, 3949, 2293, 3470, 2397, 3485, 3964, 0451, 0463, 1217
White Westinghouse	0623, 1661, 0463
Wins	4547
Wyse	1365
Xiahua	1753, 2049, 0761, 1749, 0783, 0817
Xion	1792, 2423
Xoceco	1753, 2049, 0761, 1749, 0783, 0817
Zenith	0017, 0178, 1145, 1265, 0016, 1423, 0145, 2612, 0092, 1661, 2731, 1365, 1721, 2358, 0047, 0463
Zonda	0698, 0779