


# Security Keypad

## Quick Start Guide

### XFINITY HOME

SECURITY • CONTROL • ENERGY

## Device Overview

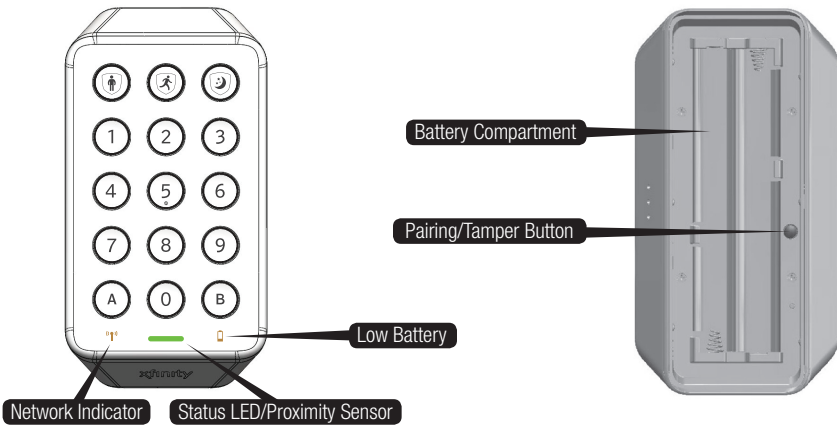

## Getting Started

### Powering Up and Pairing

1. Remove the keypad and keypad battery door from box. (Important: The battery door must be mounted to wall before aligning and sliding down to snap keypad to battery door).
2. Set your touch screen to pairing mode and then pull the “Remove to Pair” tab to put device into pairing mode.
3. The keypad should start the joining process automatically. When the keypad is not joined to a network, the network indicator will be off. Once it is joined, the network icon will become solid anytime that the keypad is awake.

Once the keypad has successfully joined the network, the pairing LED will turn solid, the network indicator will turn on, and the security system should indicate that it has paired with the keypad.

# Mounting

Mount the keypad battery door to the wall in the desired location using the included mounting screws and anchors. Align the keypad posts to battery door and slide keypad down to lock in place. (X FINITY® HOME technicians MUST use screws to install keypad).

The maximum distance for the Keypad to communicate with the TouchScreen is 50 feet. However, the distance can be limited occasionally by the materials for the walls, electrical interference, and other conditions. The Keypad is only used for arming/disarming the system and indicating system status. It cannot initiate an alarm or emergency call.

# Status

There is one system status LED located at the bottom

of the Security Keypad. Different colors represent the following system status:

**Green:** Ready/Not Armed

**Red:** Armed

**Amber:** Not Ready

# Arming



## Arm Stay Button

Press this button and enter your 4 digit security code to arm in stay mode.



## Arm Away Button

Press this button and enter your 4 digit security code to arm in away mode.



## Arm Night Button

Press this button and enter your 4 digit security code to arm in night mode.

# Replacing Batteries

Keypad rating: 6V 200mA maximum. Use four non-rechargeable 1.5V AA Energizer L91 lithium batteries, or equivalent. Ensure batteries are of the same type and manufacturer.

1. View battery level indicator to determine if batteries need replacement. Battery level indicator will display when batteries have less than 60 days of use remaining.
2. Pull keypad away from wall to remove from battery door.
3. Remove the old batteries then install AA Lithium batteries.
  - a. Lithium batteries originally provided with the device are not rechargeable.
4. Align the keypad, then slide down and lock the keypad onto the battery door.

# Weekly Testing

To ensure that your system continues to function as intended, you must test your system weekly. Please contact your security monitoring company for instructions on how to test your system.

# Approvals

FCC Statement: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

# Controls

## Function Buttons

**A Button:** Reserved for future use

**B Button:** Reserved for future use

## Volume Control

There are 5 possible volume levels. To increase the volume, press the #2 button. To decrease the volume, press the #5 button. As the volume raises or lowers, there will be an audible beep signifying that the volume has changed. Continuing to press the #2 or #5 button down will continue to raise or lower the volume.

## Door Chime

Toggle Door Chime on/off by pressing and holding the #8 button

## Proximity Detection

The keypad is able to detect the user's presence within 6 inches. Once detected the keypad will wake up and illuminate.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help. You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

To satisfy RF exposure requirements, this device and its antenna must operate with a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

Conforms to UL STDS 1023 & 1610

SECURITY



LISTED

BP21209

MUG-UHK2AZ0-GTY-A