





DIRECTV® Universal Remote Control Quick Reference Guide

RC83V remote works in IR and Bluetooth interface. The remote uses Bluetooth 2-way communication to C71KW. Bluetooth eliminates the need for the remote and the paired devices to be in line of sight to each other.

Voice Recognition is available in the RC83V Remote. Voice search will only work when the remote is paired to the C71KW.

Pairing your remote to Set top Box

To pair the DIRECTV remote control to the STB, perform the following steps:

- 1. Press and HOLD **Rewind** and **Fast Forward** at the same time for 3 second until the visible LED's starts flashing.
- 2. Enter digits 961 follow by CH up key.
- 3. Using the number keys enter the last six digits of the RID number located behind the STB.
- 4. Press and release ENTER key (the green light flashes twice).

Clearing Pairing

Press and hold **Dash** and **APPS** at the same time for 3 seconds until the LED's flash. The RCU will unpair from the STB.

RESTORING FACTORY DEFAULT SETTINGS

To reset all the functions of the remote control to the factory default settings following these steps:

- 1. Press and hold **MUTE** and **Exit** at the same time until the RED LED turns ON.
- 2. Using the number keys, enter **9-8-1**. (The feedback flashes 4 times).

COMPLIANCE WITH FCC RULES AND REGULATIONS

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Consult the dealer or an experienced radio/TV technician for help.

The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference.
- 2 This device must accept any interference received, including interference that may cause undesired operation.

SETUP CODES FOR TV's

To reset all the functions of the remote control to the factory default settings following these steps

AOC Apex Digital	1365, 2397	2402				
Audiovox	1564					
Aventura	0171	2211	2215	2211	2210	2170
Coby Commercial Solutions	1447	2314,	2313,	2344,	2340,	3470
Curtis	2397					
Durabrand	0178,	0171				
Dynex	2049	0171				
Element	1886					
Emerson		1886,	0178.	0171		
Envision	1365	1000,	01/0/	0171		
ESA	0171					
Funai	0171					
GE	1447,	0178				
GFM	1886,					
GoldStar	0178					
Haier	2293					
Hallmark	0178					
Hitachi	1643					
iLo	1394					
Insignia	2049,	1423,	1564,	0171,	1517,	2751
LG		1447,				
LXI	0156,	0178				
Magnavox	1867,	1454,	2372,	0171,	1365	
Marantz	1454					
Matsushita	0250					
Megatron	0178					
Memorex	0178,	0150				
MGA	0178,	0150				
Mitsubishi	1250,	0178,	0150,	1797		
NAD	0156,	0178				
NEC	1797					
Nikko	0178					
Norcent	1365					
Optimus	0250					
Panasonic		0250,	1291			
Penney	0156,					
Philco	1394,					
Philips		1454,	2372,	1394,	0171,	0690
Pioneer	1457					
Proscan	1447					
Proton	0178					
Quasar	0250,	1291				
RadioShack	0178					
RCA		2434,	2746			
Realistic	0178	0150				
Samsung	2051,	01.78				
Sansui	0171					
Sanyo	1142					

Scotch Scott	0178 0178
Sears	0156, 0178, 0171
Seiki	0178
Sharp	0818, 2402
Sony	0810
Soundesign	0178
Squareview	0171
Sylvania	1394, 1886, 0171
Symphonic	1394, 0171
TCL	2434
Technics	0250
Teknika	0150
TMK	0178
Toshiba	1524, 0156
Vidtech	0178
Viewsonic	2049, 1564, 0885, 1365
Vizio	1758, 2757, 0885
Wards	0156, 0178
Waycon	0156
Westinghouse	0885, 2195, 2293, 2499
Wyse	1365
Zenith	1423, 0178, 1365