

Programming the TV PWR Key

1. Turn on the device (TV or audio device).
2. Refer to the code list and note the first code listed for your brand.
3. Simultaneously press the **TIVO** and **TV PWR** keys for three seconds. The feedback LED will turn on and stay on.
4. Using the numeric keys, enter the first code for your brand. The activity LED will blink 3 times and turn off.
5. Point the remote at your TV or Audio device and press the TV PWR key to see if it responds.
6. If the device does not turn off, repeat steps 2-5 using the next code listed for your brand.
7. For a TV, point the RCU at the TV and press the **INPUT**, **VOL** and **MUTE** keys.
8. If the TV Input or volume does not change, repeat steps 2-7, selecting a the next code listed for your brand.
9. When the TV responds to key-presses as expected, setup is complete.

Programming the INPUT Key

1. Turn on the TV (device).
2. Refer to the code list and note the first code listed for your brand.
3. Simultaneously press the **TIVO** and **INPUT** keys for three seconds until the feedback LED stays lit.
4. Using the numeric keys, enter the first code for your brand. The activity LED will blink 3 times and turn off.
5. Point the RCU at the device and press the Input key.
6. If the TV does not display the name of a signal source, repeat steps 2-5, selecting the next code listed for your brand.

Programming the VOL and MUTE Keys

1. Turn on the TV or audio device.
2. Refer to the code list and note the first code listed for your brand.
3. Simultaneously press the **TIVO** and the **Mute** key for three seconds. The feedback LED will turn on and stay on.
4. Using the numeric keys, enter the first code for your brand. The activity LED will blink 3 times and turn off.
5. Point the RCU at the device and test each of the **VOL** keys.
6. If the volume does not increase, decrease, and mute, repeat steps 2-5, selecting the next code listed for your brand.
7. If the volume controls all function as expected, setup is complete.

Setup Codes For Audio - Amplifier (A)	
Arcam	2006
Carver	2000
Classé	2009, 2010, 2015
Danon	2014, 2012
Durabrand	2005
Emotiva	2008, 2019, 2020, 2021, 2022
Halco	2011
Harman/Kardon	2002, 2016
Left Coast	2002
Lexicon	2004
Linn	2000
Magnavox	2000
Marantz	2013, 2000, 2002, 2007
Memorex	2005
NAD	2003
New Acoustic Dimension	2003
NuForce	2018
Optimus	2001
Parasound	2011
Pass	2000
Pass Labs	2000
Philips	2000, 2002
Pioneer	2001
Polk Audio	2000, 2002
RCA	2001
Regent	2005
Sony	2017
Setup Codes For Cable Set Top Box (C)	
TiVo	0-9 (4602)
Setup Codes For Audio - Accessory (M)	
Altec Lansing	2023, 2035
Audio Solutions	2051
AudioSource	2059
B & W	2073, 2029, 2069
Bose	2058, 2057
Boston Acoustics	2055
Bowers & Wilkins	2073, 2029, 2069
Curtis	2068
Definitive Technology	2053
Denon	2032, 2078, 2079
Durabrand	2024
Dynavox	2041
Focal	2077
Haier	2047
Harman/Kardon	2048
iLive	2039
Insignia	2070
JBL	2062, 2050

JVC	2036
Klipsch	2066
Lennox	2024
LG	2040
Martin Logan	2049
Onkyo	2075, 2076, 2044
Parasonic	2043, 2045, 2063
Philips	2072, 2034, 2042
Pinnacle Speakers	2064, 2060
Pioneer	2071
Polk Audio	2046
Proficient	2054
RCA	2074
Samsung	2033
Scandyna	2028
Sharp	2061, 2037
Sonos	2067
Sony	2056
SpeakerCraft	2054
Toshiba	2052
VIZIO	2030
Yamaha	2031, 2025, 2038
ZVOX	2026, 2065, 2027
Setup Codes For Audio - Receiver (R)	
Adcom	2089
Aiwa	2082, 2120, 2084, 2086
Alco	2107
Altec Lansing	2164
AMC	2092
Anam	2116
Apax Digital	2125, 2096, 2109
Arcam	2094, 2086
Audiotronic	2094
Audiovox	2107, 2181
Bose	2133, 2118, 2209
Carver	2086, 2082, 2094
Coby	2170, 2168, 2190
Denon	2173, 2104, 2160, 2110, 2172, 2205, 2147, 2093
Definitive Technology	2053
Denon	2032, 2078, 2079
Durabrand	2024
Dynavox	2041
Focal	2077
Haier	2047
Harman/Kardon	2048
iLive	2039
Insignia	2070
JBL	2145, 2081

JVC	2122, 2105, 2080, 2150, 2111, 2175
Kenwood	2115, 2121, 2102, 2101
KLH	2107
Klipsch	2182
Koss	2112
LG	2144, 2167, 2148, 2101, 2151, 2202
Linn	2086
Liquid Video	2112
Logitech	2153
Magnavox	2086, 2094, 2129, 2187
Marantz	2100, 2140, 2086, 2094, 2200
McIntosh	2100
Micromega	2094
Myryad	2094
Nakamichi	2102
NaxxTech	2123
Norcent	2123
Onkyo	2128, 2083
Optimus	2090
Ortron	2112
Outlaw Audio	2210
Panasonic	2178, 2119, 2204, 2169, 2211, 2139, 2196, 2203, 2161, 2185, 2180, 2122
Philco	2107, 2129
Philips	2154, 2129, 2086, 2149, 2097, 2094, 2191
Pioneer	2134, 2106, 2090
Polk Audio	2100, 2086, 2146
Proscan	2095
RCA	2095, 2137, 2195, 2165, 2107, 2116, 2193, 2152, 2192, 2194, 2090, 2181
Rio	2131
Samsung	2130, 2171, 2141, 2176
Sansui	2086
Sanyo	2127
Sharp	2208
Sherbourn	2207
Sherwood	2092, 2114, 2132, 2113, 2183, 2135
Sherwood Newcastle	2114
Sonic Blue	2131
Sony	2117, 2142, 2124, 2158, 2084, 2166, 2201, 2184, 2206
Stereophonics	2090
Sunfire	2159, 2102
Teac	2088, 2107, 2098

Technics	2119
Thorens	2094
Toshiba	2126
Venturer	2107, 2181
Victor	2080
Wards	2084, 2086
Yamaha	2138, 2155, 2085, 2099, 2087, 2103, 2197, 2108, 2136, 2156
Zenith	2101, 2131, 2144
	2153
Setup Codes For Television (T)	
3M	1019
BBB	1360
Accurian	1174
Acer	1083, 1357, 1359
Admiral	1012
Advent	1022, 1030, 1120
Affinity	1330, 1329, 1311
Afron	1050
Aiwa	1089
Alkal	1016, 1145, 1149, 1061, 1093, 1150, 1189, 1223, 1023
America Action	1008
Anam	1008
AOC	1124, 1090, 1204, 1210, 1243, 1125, 1262, 1328
Aomni	1131
Apex Digital	1023, 1242, 1021, 1062, 1199, 1049
Ario	1242
Astar	1155, 1114
Asus	1297
Atvio	1318, 1050, 1317, 1320, 1323
Audiovox	1193, 1180, 1244, 1039, 1008, 1118, 1182, 1029, 1068, 1167, 1170, 1190, 1283, 1011, 1174, 1254
Aumark	1002
Auria	1210, 1204
Aventura	1007
Awa	1250
Axion	1190
B & O	1130
Bang & Olufsen	1130
BenQ	1308, 1052, 1078, 1117
Bluzens	1269
Blue Light	1321
Boxlight	1019, 1020

