



DirecTV RC71B  
Quick Reference Guide



**DIRECTV®**  
**Universal Remote Control**  
**Quick Reference Guide**

## **CONTROLLING YOUR TV**

1. Turn on the TV.
2. Locate the 5- digit code for your TV.
3. Turn on the TV.
4. Press and hold **MUTE** and **SELECT** at the same time until the green light flashes twice.
5. Using the number keys enter the 5-digit code for your brand of TV. If performed correctly, the green light under the TV flashes twice.
6. Aim the remote at your TV and press **VOL or MUTE** key once. Your TV should ramp up or down or MUTE. If Volume does not change, repeat steps 3 and 5, trying each code for your brand until you find the correct code.

## **Activating RF**

To pair the DIRECTV remote control to the STB, perform the following steps:

1. Press and HOLD **MUTE** and **SELECT** at the same time until the green light flashes twice.
2. Enter digits 961 follow by CH up key.
3. Using the number keys enter the last six digits of the RID number located behind the STB.
4. Press and release ENTER key (the green light flashes twice).

## **Deactivating RF**

To deactivate the RF Transmitter on the DIRECTV remote control, perform the following steps:

1. Press and hold **MUTE** and **SELECT** at the same time until the green light flashes twice.
2. Using the number keys enter 961
3. Press and Release CH Down. (Green LED flashes four times)

## **RESTORING FACTORY DEFAULT SETTINGS**

To reset all the functions of the remote control to the factory default settings following these steps:

4. Press and hold **MUTE** and **SELECT** at the same time until the green light flashes twice.
5. Using the number keys, enter **9-8-1**. (The green light flashes 4 times).

## **COMPLIANCE WITH FCC RULES AND REGULATIONS**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase or decrease the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced remote control/ TV technician for help.

The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.

### **FCC Authorization Label**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
- 2 This device must accept any interference received, including interference that may cause undesired operation.

Responsible Party:

DIRECTV, Inc.

2230 E. Imperial Hwy.

El Segundo, CA 90245

1-800-531-5000

## SETUP CODES FOR TV's

To reset all the functions of the remote control to the factory default settings following these steps

AOC	1365, 2402
Apex Digital	2397
Audiovox	1564
Aventura	0171
Coby	2306, 2314, 2315, 2344, 2348, 3478
Commercial Solutions	1447
Curtis	2397
Durabrand	0178, 0171
Dynex	2049
Element	1886
Emerson	1394, 1886, 0178, 0171
Envision	1365
ESA	0171
Funai	0171
GE	1447, 0178
GFM	1886, 0171
GoldStar	0178
Haier	2293
Hallmark	0178
Hitachi	1643
iLo	1394
Insignia	2049, 1423, 1564, 0171, 1517, 2751
LG	1423, 1447, 0178
LXI	0156, 0178
Magnavox	1867, 1454, 2372, 0171, 1365
Marantz	1454
Matsushita	0250
Megatron	0178
Memorex	0178, 0150
MGA	0178, 0150
Mitsubishi	1250, 0178, 0150, 1797
NAD	0156, 0178
NEC	1797
Nikko	0178
Norcent	1365
Optimus	0250
Panasonic	1480, 0250, 1291
Penney	0156, 0178
Philco	1394, 0171
Philips	1867, 1454, 2372, 1394, 0171, 0690
Pioneer	1457
Proscan	1447
Proton	0178
Quasar	0250, 1291
RadioShack	0178
RCA	1447, 2434, 2746
Realistic	0178
Samsung	2051, 0178
Sansui	0171
Sanyo	1142
Scotch	0178
Scott	0178
Sears	0156, 0178, 0171
Seiki	0178
Sharp	0818, 2402
Sony	0810
Soundesign	0178

Squareview	0171
Sylvania	1394, 1886, 0171
Symphonic	1394, 0171
TCL	2434
Technics	0250
Teknika	0150
TMK	0178
Toshiba	1524, 0156
Vidtech	0178
Viewsonic	2049, 1564, 0885, 1365
Vizio	1758, 2757, 0885
Wards	0156, 0178
Waycon	0156
Westinghouse	0885, 2195, 2293, 2499
Wyse	1365
Zenith	1423, 0178, 1365