


RFID Module Replacement Procedure


1. Open the rear cover.

Push [1] and slide it in the direction of an arrow.

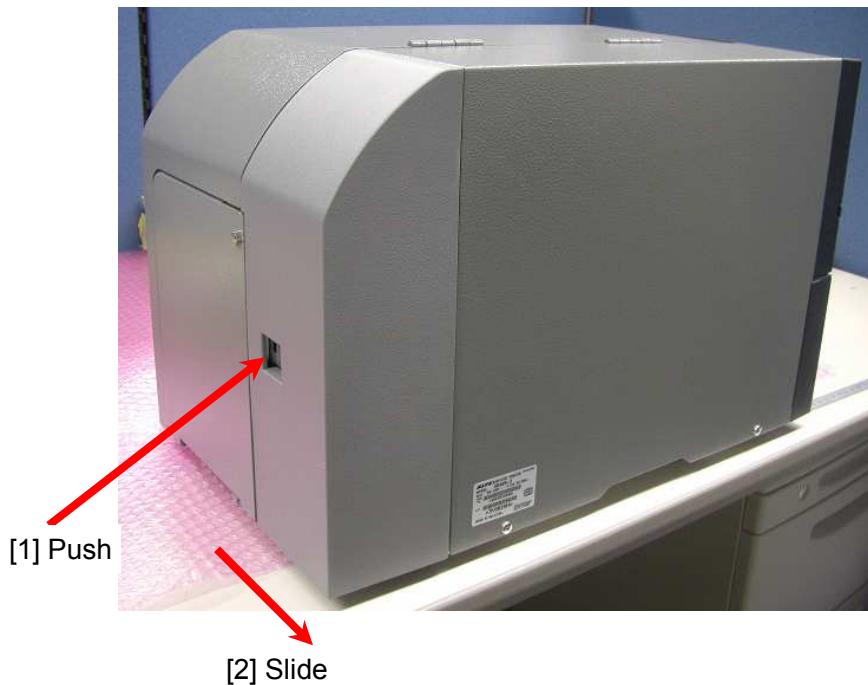


2. Open the side cover.

Remove 3 screws first, and then slide the cover before lifting it upward.

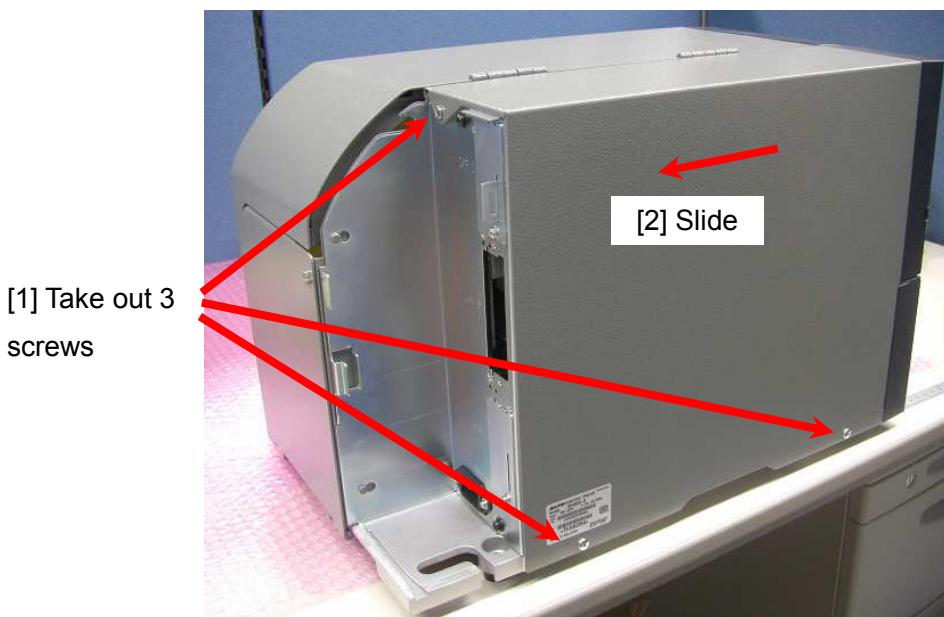

3. The cover is opened.

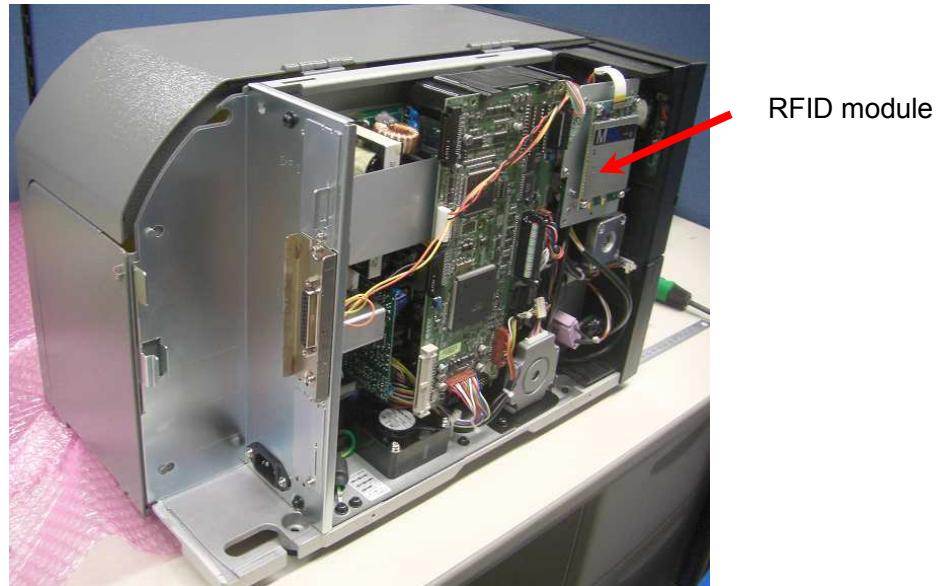

4. Replace the module.

Remove 4 screws, communication cable and antenna connector before replacing the module.

