


**1. Exhibit A**

## FCC Identifier Label

The label shown below shall be attached to the bottom of the rear panel in the location indicated. The type size is eight-point.

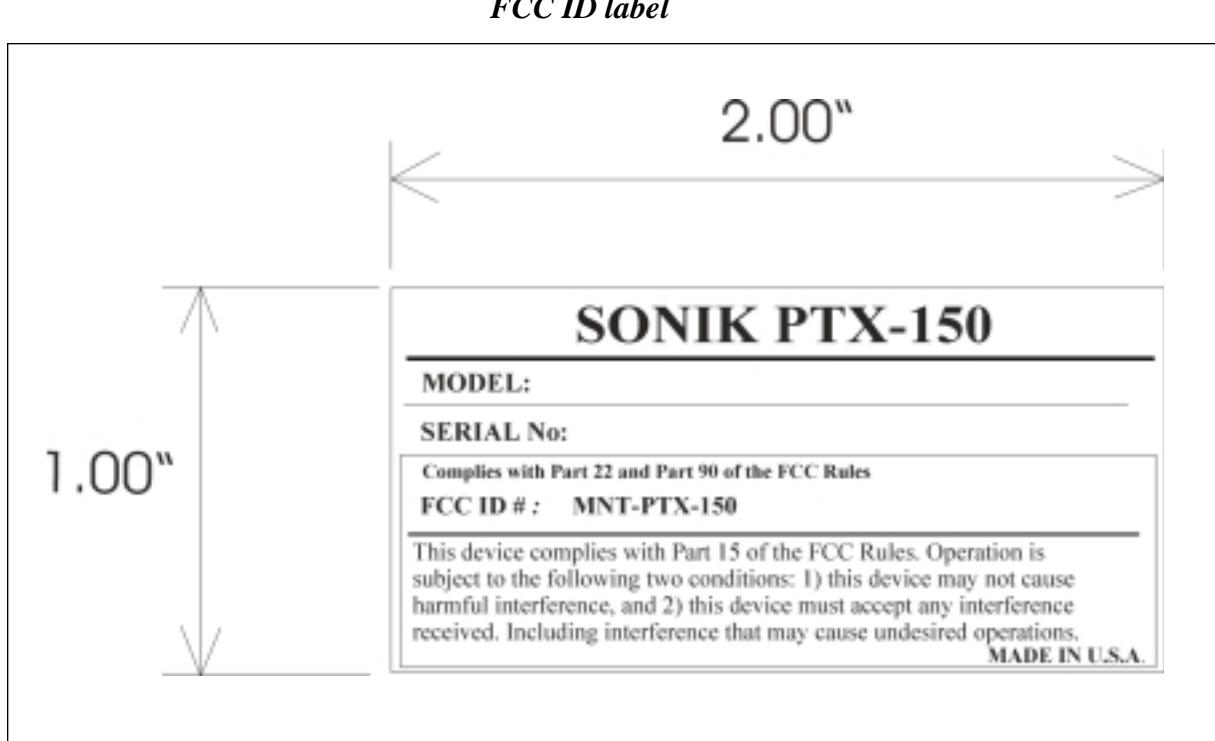

*Location of label is below the "External Frequency" BNC jack and directly to the left of the "LIU" and "RS-232" connectors on the rear panel. The label is to be placed as not to obstruct any of the other labels or markings.*