

Locking/Unlocking the doors

**INSTRUCTIONS**

When you push the “Lock” button on the transmitter, all the doors can be locked from outside the vehicle.

Make sure all the doors are locked when you leave the vehicle.

When you push the “Unlock” button on the transmitter, all the doors can be unlocked from outside the vehicle.

(If applicable)

When you push the “Trunk” button on the transmitter, the car trunk lid can be opened from outside the vehicle.

(If applicable)

When you push the “Back Window” button on the transmitter, the back window can be opened from outside the vehicle.

(If applicable)

When you push the “Panic” button on the transmitter, alarms can be operated/unoperated from outside the vehicle.

**For vehicles sold in U.S.A.:**

**NOTE**

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**FCC WARNING**

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

**For vehicles sold in Canada:**

**NOTE**

This device complies with RSS-210 of Industry Canada.

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.