

Locking/Unlocking the doors

INSTRUCTIONS

When you push the “Lock” button on the transmitter, all the doors can be locked from outside the vehicle.

Make sure all the doors are locked when you leave the vehicle.

When you push the “Unlock” button on the transmitter, all the doors can be unlocked from outside the vehicle.

For vehicles sold in U.S.A.:

NOTE

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

For vehicles sold in Canada:

NOTE

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.