

## OWNER'S MANUAL (DRAFT)

Operating instructions for this system, named Engine Immobilizer System, will be contained in the owner's manual of the vehicle and its contents will be as follows:

### ENGINE IMMOBILIZER SYSTEM

The engine immobilizer system is a theft prevention system. When you insert the key in the ignition switch, the transponder chip in the key's head transmits an electronic code to the vehicle. The engine will start, only when the electronic code in the chip corresponds to the registered ID code for the vehicle.

The system is automatically set when the key is removed from the ignition switch. Inserting the registered key in the ignition switch automatically cancels the system, which enables the engine to start.

For your Lexus dealer to make you a new key with built-in transponder chip, your dealer will need your key number and master key. However, there is a limit to the number of additional keys your Lexus dealer can make for you.

If you make your own duplicate key, you will not be able to cancel the system or start the engine.

**For vehicles sold in U.S.A.:**

FCC ID:MOZRI-4ATY-A  
MADE IN JAPAN

This device complies with Part 15 of the FCC Rules.  
Operation is subject to the following two conditions:  
(1) this device may not cause harmful interference, and  
(2) this device must accept any interference received,  
including interference that may cause undesired  
operation.

**CAUTION**

Changes or modifications not expressly approved by the party  
responsible for compliance could void the user's authority to  
operate the equipment.

**For vehicles sold in Canada**

This device complies with RSS-210 of Industry Canada.  
Operation is subject to the following two conditions:  
(1) this device may not cause interference, and  
(2) this device must accept any interference, including  
interference that may cause undesired operation of the  
device