

QTE99-F044

USER's MANUAL

**CompactFlash Size 10/100 Mbps
Fast Ethernet PC Card**

*For Both Notebook PC and Windows CE-based
PDA / Palm PC*

FCC ID: MQ4CFE100

First Edition (Oct, 28, 1999)

FCC REGULATORY STATEMENTS

FCC Certification

Part15, Class B

FCC ID: MQ4CFE100

The United States Federal Communication Commission (FCC) and the Canadian Department of Communications have established certain rules governing the use of electronic equipment.

FCC Part 15 Registration

This device complies with Part 15 of FCC rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interface, and
- 2) This device must accept any interface received, including interface that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

- ✓ Increase the distance between the equipment and receiver.
- ✓ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

CONTENTS

1. INTRODUCTION	1
ABOUT THIS MANUAL	1
SYSTEM REQUIREMENTS.....	1
OPERATING ENVIORNMENTS	2
CONTENTS IN THE PACKAGE	2
2. HARDWARE INSTALLATION	1
INSERTING THE COMPACTFLASH ETHERNET LAN CARD	1
REMOVING THE DUAL SPEED FAST ETHERNET PC CARD.....	3
CONNECTING TO THE NETWORK.....	3
<i>LED Indicators</i>	4
3. SOFTWARE INSTALLATION.....	1
NOVELL NETWARE.....	1
MS LAN MANAGER	6
PACKET DRIVER	8
WINDOWS FOR WORKGROUPS 3.11	8
WINDOWS NT 3.51	13
WINDOWS NT 4.0	14
WINDOWS 95 INSTALLATION	14
WINDOWS 98 INSTALLATION	16
WINDOWS 2000 INSTALLATION	18
ARTISOFT LANTASTIC 6.0 INSTALLATION	20
IBM OS/2 WARP	21
FOR PDA/PALM PC WITH WINDOWS CE 2.0 .	26
NOTES FOR WINDOWS FOR WORKGROUPS DRIVER	28
4. QUESTIONS AND ANSWERS	1

APPENDIX A. SPECIFICATIONS1

NETWORK INTERFACE SPECIFICATIONS..... 1
HOST INTERFACE AND PHYSICAL
SPECIFICATIONS 1
OPERATING ENVIRONMENTS2
POWER REQUIREMENTS:.....2
GENERAL SPECIFICATION2



1. INTRODUCTION

ABOUT THIS MANUAL

This manual will explain how to install and use your CompactFlash Ethernet LAN Card. The following guideline will help you through the installation process.

How to install the Card and Connect it to network

→ Chapter 2. Hardware Installation

How to install the network driver

→ Chapter 3. Software Installation

How to do trouble shooting

→ Chapter 4. Questions and Answers

Detail Specification

→ Appendix A Specifications

SYSTEM REQUIREMENTS

For Notebook PC:

- An IBM compatible notebook computer with 386SX or faster processor
- At least one type II PC Card socket
- Drivers and utilities provided with this product
- PCMCIA release 2.1 compliant Card Services and Socket Services.

For Windows CE-based PDA/Palm PC:

- A type I CompactFlash Slot which support IO functionality.
- Windows CE 2.0 or newer version
- Windows CE Service Disk

- CF+ and CompactFlash Spec. Reversion 1.4 compliant Card Services and Socket Services

OPERATING ENVIRONMENTMENTS

For Notebook PC:

- Novell Netware 3.x, 4.x
- Microsoft LAN Manager
- Packet Driver Applications
- Microsoft Windows for Workgroups 3.11
- Microsoft Windows 3.1
- Microsoft Windows NT 3.51, NT 4.0
- Windows 95
- Windows 98
- Windows 2000
- Lantastic 6.0
- IBM OS/2 Warp Version 3

For Windows CE-based PDA/Palm PC:

- Windows CE 2.0 or newer version

CONTENTS IN THE PACKAGE

- CompactFlash Ethernet LAN Card with RJ-45 Direct Port
- An accessory CompactFlash Adapter . With this adapter, the CompactFlash Card turns into conventional type II PCMCIA PC Card.
- Two 3.5" driver diskettes. One for WinCE driver and the other diskett is for other drivers.
- User's Manual
- Plastic protection case for base PC Card

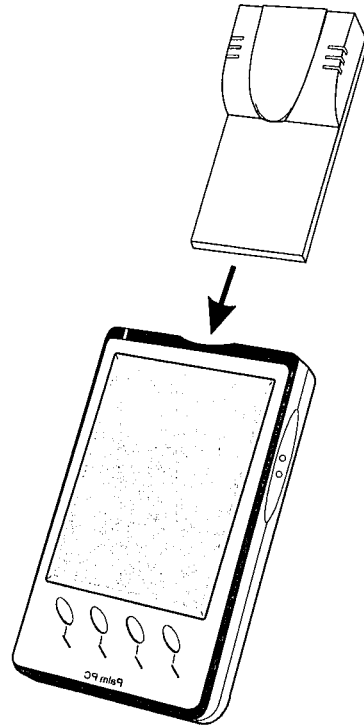


Fig.2.1

For Notebook PC:

Insert the CompactFlash LAN Card into our CompactFlash accessory adapter. By doing this, our CompactFlash LAN Card will turn into conventional PCMCIA type II PC Card. Then hold the PC Card with wide connector toward the

PC Card slot and the brand label facing upward, as shown in Fig2.2.

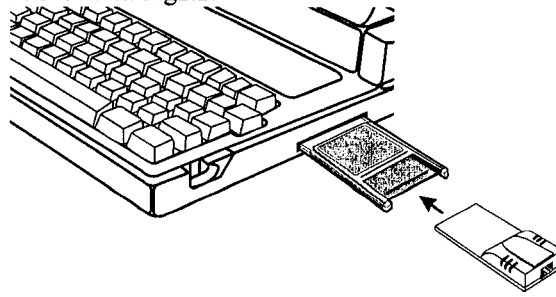


Fig.2.2

Removing the Dual Speed Fast Ethernet PC Card



It's quite different for various computer mechanical design. Please refer to the PC Card removal instruction in the document for your notebook computer and PDA/Palm PC.

Connecting to the Network

Connect unshielded twisted pair (UTP) cable to the RJ-45 connector of media coupler before loading any network driver.

- For operation in the 10Mbps (10Base-T) Ethernet network, Category 3, 4 or 5 unshielded twisted pair (UTP) cable could be used to connect between the media coupler and a 10Mbps hub or switch.

LED Indicators

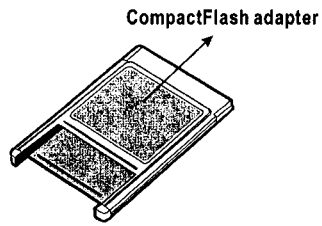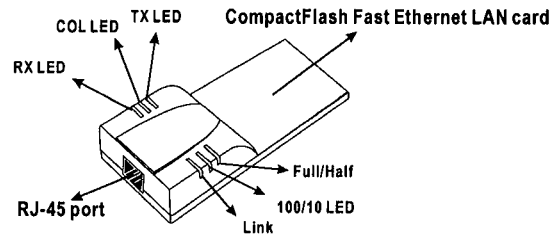

APPENDIX A. SPECIFICATIONS**Network Interface Specifications**

- ◆10Mbps Ethernet: IEEE 802.3 standard 10BaseT baseband CSMA/CD local area network.
- ◆100Mbps Ethernet: IEEE 802.3u standard 100BaseT baseband CSMA/CD local area network.
- ◆20/200Mbps Full Duplex support
- ◆Autonegotiation between all four operation modes.

Host Interface and Physical Specifications**For Notebook PC: (accessory adapter)**

- ◆PCMCIA 2.0/2.1 and PC Card Standard compliant.
- ◆Type II PC Card
- ◆3.37" x 2.128" x 0.197" (86mm x 54mm x 5.0mm)
- ◆50gw in weight with Compact Card

For PDA/Palm PC: (Compact Card Only)

- ◆CF+ and CompactFlash Spec. Rev. 1.4 compliant.
- ◆Type I CompactFlash I/O Card
- ◆3.46" x 1.685" x 0.130" (88mm x 42.8mm x 3.3mm)
- ◆28gw in weight

Operating Environments

Novell Netware 3.x, 4.x
Microsoft LAN Manager
Packet Driver Applications
Microsoft Windows for Workgroups 3.11
Windows 3.1
Microsoft Windows NT 3.51, NT 4.0
Windows 95
Windows 98
Windows 2000
Windows CE 2.0 or newer
Lantastic 6.0
IBM OS/2 Warp Version 3

Power Requirements:

- ◆ Normal Operation: 3.3V DC, 120mA max
- ◆ Normal Operation: 5V DC, 140mA max

General Specification

LEDs: Link Integrity, Activity

Enviroments Ranges:

Operating: 32°F to 149°F (0°C to 65°C)
Storage: -4°F to 158°F (0°C to 70°C)
Humidity: 10% - 90% , noncondensing

Certifications: FCC, Part 15, Class B, VCCI-B
CE Mark (EN55022,ClassB, EN50082-1)