

Modes of Operation.xls

Mode of Operation	Explanation	Frequency of Transmission
Roll Mode	Transmitter in normal operation - wheel is rotating and roll switch is closed	8 words every 60 seconds
Service Period	Transmit 8 words once every 60 seconds for app 15 minutes after vehicle stops.	8 words every 60 seconds
Learn Mode	Transmits 40 words after magnetic or transponder activation	40 words for 1 transmission
Factory Mode.	Transmitter is in Factory mode for the next 16 Roll Switch closures after a Learn activation - The Wheel has to be rotating (roll switch closed)	8 words every 30 seconds.
Stationary Mode	Transmitter enters mode after Service Period - Wheel is not rotating - Vehicle is stopped.	8 words once every 60 minutes.