

| Use Modes | Mode of Operation | Explanation | Frequency of Transmission |
|---------------|-------------------|--|--|
| Consumer | Normal | Transmitter in normal operation – wheel is rotating. | 8 packets every minute |
| Consumer | Stationary | Transmitter enters mode when wheel is not rotating. Vehicle is stopped. | 8 packets every 60 minutes. |
| Consumer | Alert | Transmitter enters this mode when a 0.8PSi change in pressure is detected. | 8 Packets every 15 seconds while pressure continues to change. |
| Factory/Setup | Normal | Activated with 125 kHz signal | 40 packets per initiation. |