

Consumer Use Modes	Manufacturing & Service Modes	Mode of Operation	Explanation	Frequency of Transmission
	X	Forced Transmission "Learn Mode" (dealer / plant)	On receipt of a particular LF sequence this Forced transmission allows the interrogation of the sensor in the vehicle factory or dealership	Forced Transmission as required
X	X	Low battery	Transmitter in normal operation when a low battery flag has been set - wheel is rotating	Transmission rate depending on Drive mode
	X	Off Mode	Part is in an off state, No transmissions, Exit by LF or P	No transmissions
X		Stationary Mode		
X		PAL Mode	First block of 32 transmissions in normal operation - when wheel is rotating then moves into drive mode	At the start of wheel rotation, every 10 sec
X		Factory Drive Mode	Transmitter in normal operation - wheel is rotating	Transmission rate every 30secs
X		Drive Mode	Transmitter in normal operation - wheel is rotating	Transmission rate every 60secs
		Pressure Re-Measure Mode	Transmitter in normal operation and measurement sample which is less than 5 counts than the previous sample	Alarm transmission as required