

Mode	Explanation	Transmissions	Mode Type
Off	Part is in off state with no motion sampling, for transport and storage	No scheduled transmissions	Factory
Learn	Forced transmissions	Forced transmission when required <5s	Factory
Stationary	Part enters this mode after service period has expired due to no motion detected	No scheduled transmissions	Customer
Fast Tx Drive	Part enters this mode on positive motion sample, transmissions are at a higher rate than normal drive	3 transmissions every 20s for first 9mins of drive	Customer
Service (Fast Tx Drive)	Part enters this mode from Fast Tx drive if motion is no longer detected	No scheduled transmissions	Customer
Normal Drive	Part enters this mode after 9mins of Fast Tx drive. This is the normal drive mode where tx rate returns to normal	3 transmissions every 60s	Customer
Service (Drive)	Part enters this mode from Normal drive if motion is no longer detected	3 transmissions every 60s	Customer
Delta P	Part enters this mode if a rapid change in pressure is detected	Alarm transmissions as required	Emergency