

Wireless LAN PCI Adapter

PCI-G31

Brand name: ASUS

Wireless

**WL-138GE**  
**WL-138G V2**  
**Quick Start Guide**

Q2270


English	Türkçe
Français	Hollands
Deutsch	한국어
Русский	简体中文
Español	繁體中文
Italiano	



# Wireless Local Area Network Card

## WL-138g V2 / WL-138gE

(For 802.11g & 802.11b Wireless Networks)

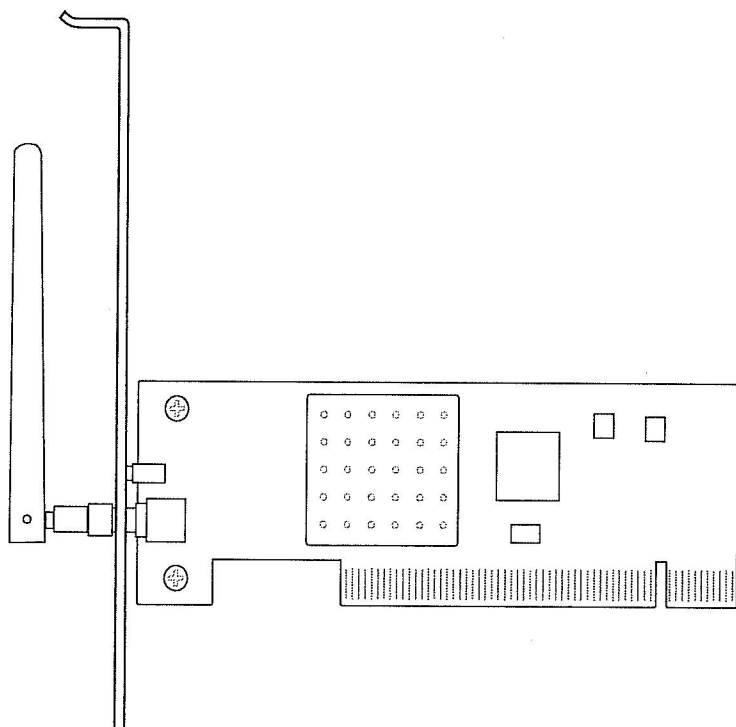

## Quick Start Guide

QE2270 / September 2005

# Quick Install Guide

---

## System Requirements

To begin using the ASUS WLAN Card, you must have the following minimum requirements:

- Windows XP/2000/ME/98SE
- Standard 32-bit PCI Slot
- 32MB system memory or larger
- 300MHz processor or higher

## The Product Package

When you receive the ASUS WLAN Card package, it should contain the following items:

- ASUS WLAN PCI Card
- Dipole Antenna
- ASUS WLAN Card Quick Start Guide
- CD-ROM Disc (Drivers, Utilities, Documentation)



---

**Note: If any of the above items are not included or damaged, contact your local dealer for instructions.**

---

## Installation Procedures



---

**Important: Install the ASUS WLAN card utilities before inserting the ASUS WLAN Card into your computer.**

---

Follow these instructions to setup the ASUS WLAN card.

1. Install the ASUS WLAN card utilities and driver from the support CD.
2. Insert the ASUS WLAN card into your computer.