



Quick Start Guide

TUF-BE3600
TUF Gaming BE3600 Dual
Band WiFi Router

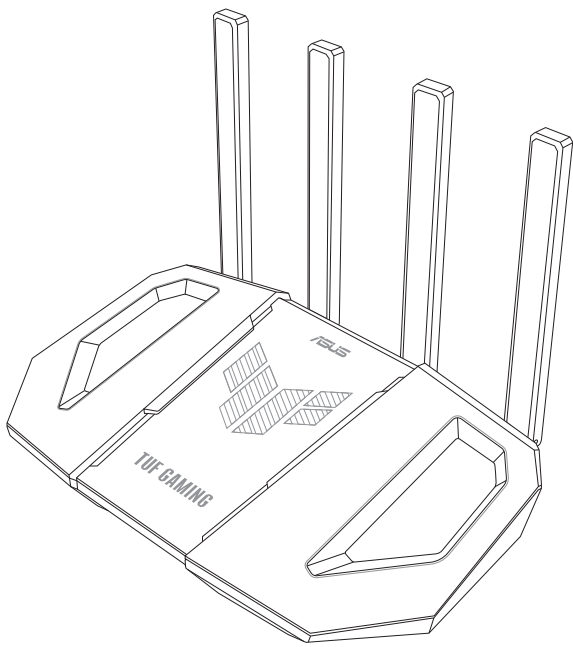


Hardware Explanations

I/O Ports Overview

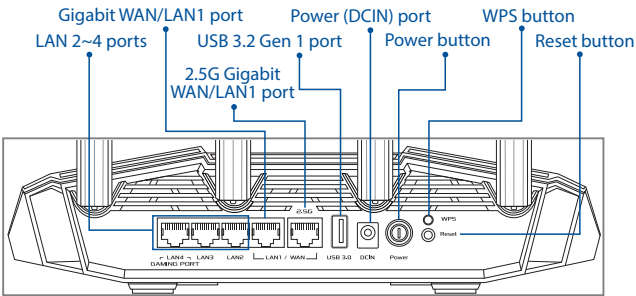

LED Lights Overview

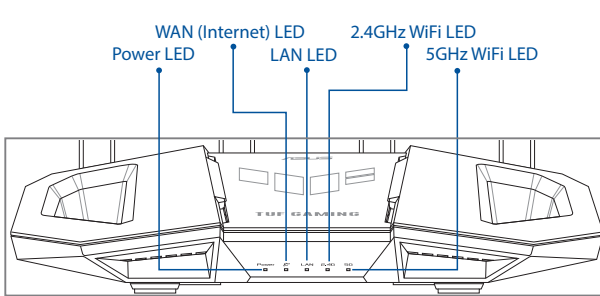




Specifications:

DC Power adapter	DC Output: +12V with 2A current		
Operating Temperature	0~40°C	Storage	0~70°C
Operating Humidity	50~90%	Storage	20~90%

Router Setup Steps



01 Prepare your Modem

- 1 Unplug the power of cable / DSL modem. ❶
- 2 Connect your modem to WAN port at the back side of the router with the network cable provided.
- 3 Power on the modem. Plug modem to the power outlet and power on.
- 4 Check the modem LED lights to ensure the connection is active.

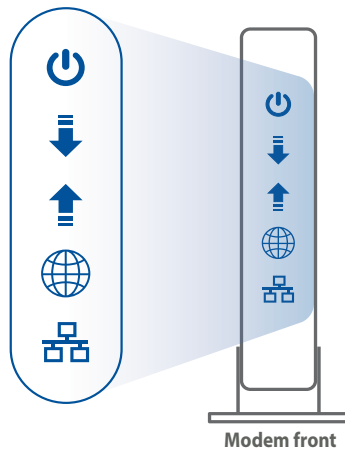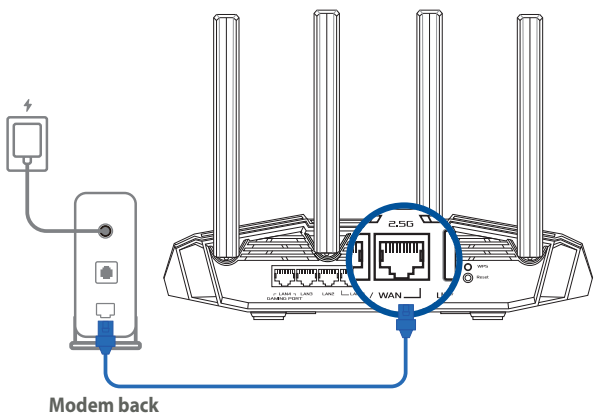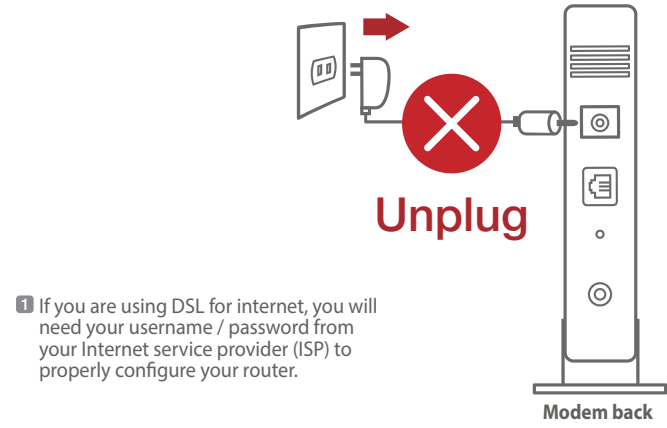




02 Install your Router

- 1 Plug the adapter into the DCIN port, and press the Power button.
- 2 The power LED will light up when the hardware is ready.

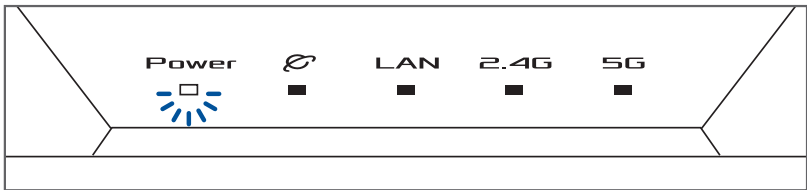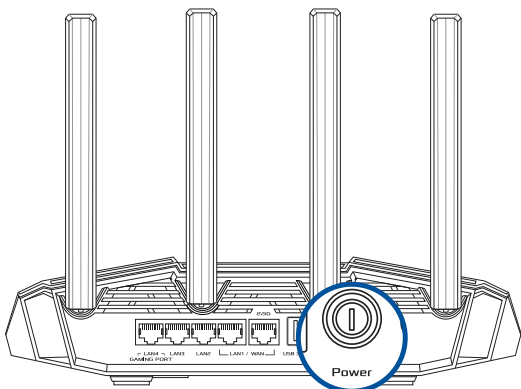

– via App

- 3 [App] On your iOS or Android mobile device, go to the app store, search for **ASUS Router**, and download the app.
- 4 [App] On your iOS or Android mobile device, tap **Settings > Wi-Fi**, connect to the default network SSID shown on the product label on the bottom side of the router. Or scan the QR code on the product label to connect the default network SSID.
- 5 [App] Launch **ASUS Router App** and follow the instructions to complete the setup.

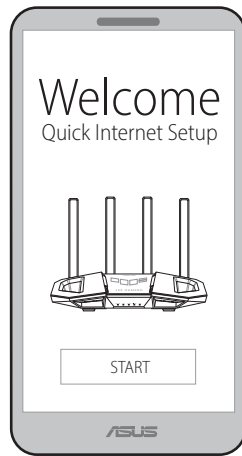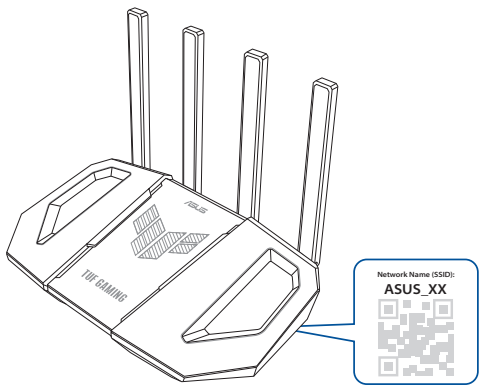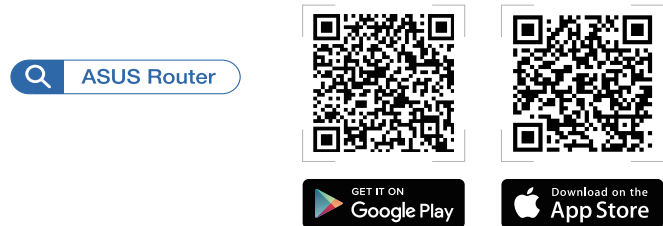

– or via Web Browser

- 3 [Wired] Connect your PC to a LAN port at the back side of the router using an additional network cable.
- 4 [Wired / Wireless] Open a web browser.

You will be redirected to the ASUS Setup Wizard. If not, navigate to <http://www.asusrouter.com/>. Follow the instructions to complete the setup.



[Wireless] Connect to the network with default SSID shown on the product label on the bottom side of your router "ASUS_XX".

