


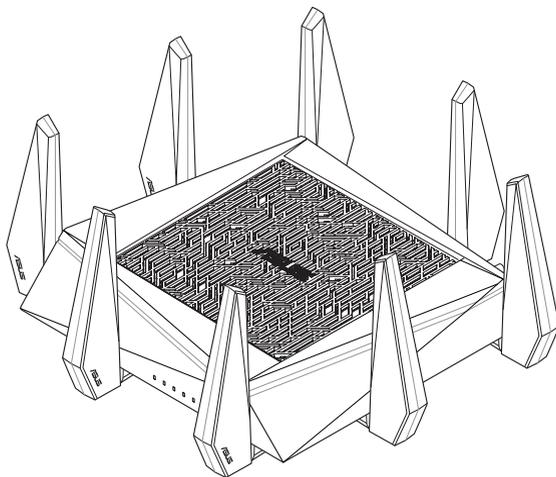

RT-AX95U

Wireless-AX11000 Tri-band Gigabit Router



Quick Start Guide

E13976 / First Edition / February 2018


Package contents

- ☑ RT-AX95U Wireless Router
- ☑ AC adapter
- ☑ Quick Start Guide
- ☑ 8 * wireless antennas
- ☑ Network cable (RJ-45)



NOTE: If any of the items is damaged or missing, contact your retailer.

A quick look at your router

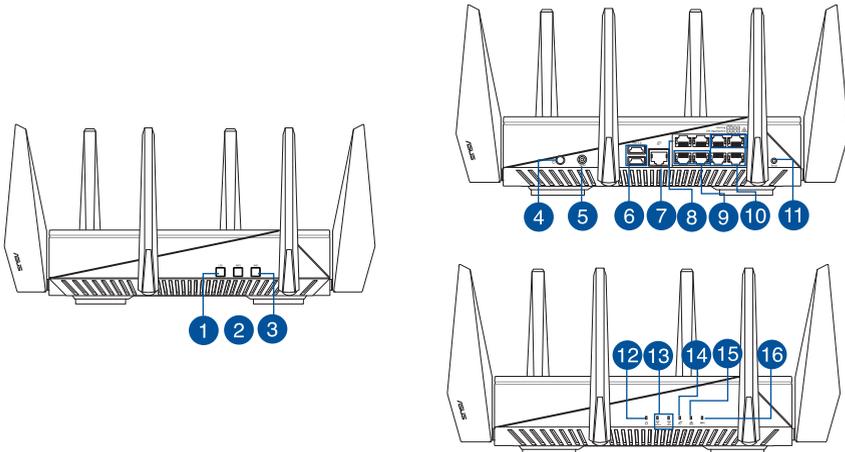


| | |
|--------------------------|-------------------------------|
| 1. LED On/Off button | 9. Link Aggregation (LAN 5~6) |
| 2. WPS button | 10. LAN ports |
| 3. WiFi On/Off button | 11. Reset button |
| 4. Power button | 12. Power LED |
| 5. Power (DC-IN) port | 13. 2.4GHz / 5GHz WiFi LED |
| 6. USB 3.0 ports | 14. WAN (Internet) LED |
| 7. WAN (Internet) port | 15. LAN LED |
| 8. Gaming ports (LAN1~2) | 16. WPS LED |


Preparing your modem

1. **Unplug the power cable/DSL modem. If it has a battery backup, remove the battery.**


NOTE: If you are using DSL for Internet, you will need your username/password from your Internet Service Provider (ISP) to properly configure the router.

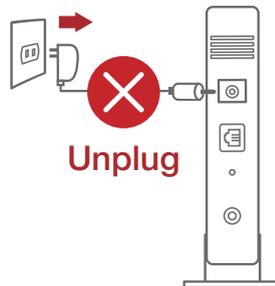

2. **Connect your modem to the router with the bundled network cable.**

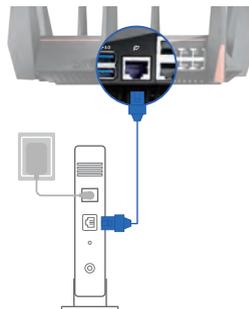

3. **Power on your cable/DSL modem.**
4. **Check your cable/DSL modem LED lights to ensure the connection is active.**

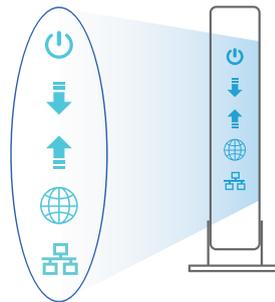


Setting up your router

You can set up your router via wired or wireless connection.

A. Wired connection

1. Plug your router into a power outlet and power it on. Connect the network cable from your computer to a LAN port on your router.

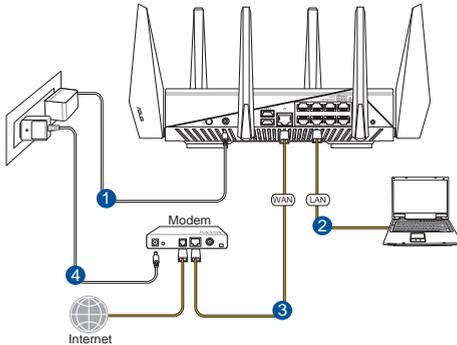

2. The web GUI launches automatically when you open a web browser. If it does not auto-launch, enter <http://router.asus.com>
3. Set up a password for your router to prevent unauthorized access.

Login Information Setup


Change the router password to prevent unauthorized access to your ASUS wireless router.

| | |
|-------------------|------------------------------------|
| Router Login Name | <input type="text" value="admin"/> |
| New Password | <input type="password"/> |
| Retype Password | <input type="password"/> |

Show password

B. Wireless connection

1. Plug your router into a power outlet and power it on.

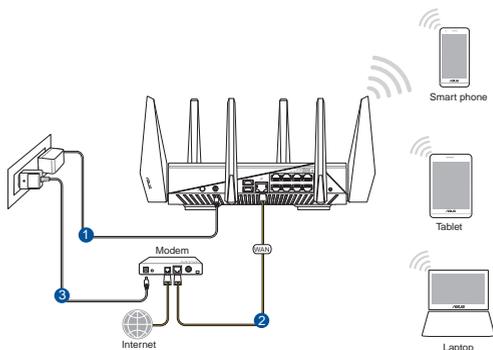

2. Connect to the network name(SSID) shown on the product label on the back side of the router. For better network security, change to a unique SSID and assign a password.



| | |
|------------------------|------------|
| 2.4G WiFi Name (SSID): | ASUS_XX_2G |
|------------------------|------------|

| | |
|------------------------|--------------|
| 5G-1 WiFi Name (SSID): | ASUS_XX_5G-1 |
|------------------------|--------------|

| | |
|------------------------|--------------|
| 5G-2 WiFi Name (SSID): | ASUS_XX_5G-2 |
|------------------------|--------------|

* **XX** refers to the last two digits of 2.4GHz MAC address. You can find it on the label on the back of your ROG router.

3. Once connected, the web GUI launches automatically when you open a web browser. If it does not auto-launch, enter <http://router.asus.com>.
4. Set up a password for your router to prevent unauthorized access.

Login Information Setup

Change the router password to prevent unauthorized access to your ASUS wireless router.

Router Login Name:

New Password:

Retype Password: Show password

Remembering your wireless router settings

- Remember your wireless settings as you complete the router setup.

| | |
|-----------------------|-----------|
| Router Name: | Password: |
| 2.4 GHz network SSID: | Password: |
| 5GHz-1 network SSID: | Password: |
| 5GHz-2 network SSID: | Password: |

FAQ

1. Where can I find more information about the wireless router?
 - Online FAQ site: <http://support.asus.com/faq>
 - Technical support site: <https://www.asus.com/support>.
 - Customer hotline: refer to the Support Hotline section in this Quick Start Guide

Networks Global Hotline Information

| Region | Country | Hotline Number | Service Hours | |
|----------------|----------------------------|---|--------------------------------------|--|
| Europe | Cyprus | 800-92491 | 09:00-13:00 ; 14:00-18:00 Mon-Fri | |
| | France | 0033-170949400 | 09:00-18:00 Mon-Fri | |
| | Germany | 0049-1805010920 | | |
| | | 0049-1805010923 (component support) | | 09:00-18:00 Mon-Fri 10:00-17:00 Mon-Fri |
| | | 0049-2102959911 (Fax) | | |
| | Hungary | 0036-15054561 | 09:00-17:30 Mon-Fri | |
| | Italy | 199-400089 | 09:00-13:00 ; 14:00-18:00 Mon-Fri | |
| | Greece | 00800-44142044 | 09:00-13:00 ; 14:00-18:00 Mon-Fri | |
| | Austria | 0043-820240513 | 09:00-18:00 Mon-Fri | |
| | Netherlands/ Luxembourg | 0031-591570290 | 09:00-17:00 Mon-Fri | |
| | Belgium | 0032-78150231 | 09:00-17:00 Mon-Fri | |
| | Norway | 0047-2316-2682 | 09:00-18:00 Mon-Fri | |
| | Sweden | +46-858769407 | 09:00-18:00 Mon-Fri | |
| | Finland | 00358-969379690 | 10:00-19:00 Mon-Fri | |
| | Denmark | 0045-38322943 | 09:00-18:00 Mon-Fri | |
| | Poland | 0048-225718040 | 08:30-17:30 Mon-Fri | |
| | Spain | 0034-902889688 | 09:00-18:00 Mon-Fri | |
| | Portugal | 00351-707500310 | 09:00-18:00 Mon-Fri | |
| | Slovak Republic | 00421-232162621 | 08:00-17:00 Mon-Fri | |
| | Czech Republic | 00420-596766888 | 08:00-17:00 Mon-Fri | |
| | Switzerland-German | 0041-848111010 | 09:00-18:00 Mon-Fri | |
| | Switzerland-French | 0041-848111014 | 09:00-18:00 Mon-Fri | |
| | Switzerland-Italian | 0041-848111012 | 09:00-18:00 Mon-Fri | |
| United Kingdom | 0044-1442265548 | 09:00-17:00 Mon-Fri | | |
| Ireland | 0035-31890719918 | 09:00-17:00 Mon-Fri | | |
| Russia and CIS | 008-800-100-ASUS | 09:00-18:00 Mon-Fri | | |
| Ukraine | 0038-0445457727 | 09:00-18:00 Mon-Fri | | |

| Region | Country | Hotline Numbers | Service Hours | |
|--------------|----------------|------------------------------------|---------------------------------------|--|
| Asia-Pacific | Australia | 1300-278788 | 09:00-18:00 Mon-Fri | |
| | New Zealand | 0800-278788 | 09:00-18:00 Mon-Fri | |
| | Japan | | 0800-1232787 | 09:00-18:00 Mon-Fri 09:00-17:00 Sat-Sun |
| | | | 0081-570783886 (Non-Toll Free) | 09:00-18:00 Mon-Fri 09:00-17:00 Sat-Sun |
| | Korea | 0082-215666868 | 09:30-17:00 Mon-Fri | |
| | Thailand | 0066-24011717 1800-8525201 | 09:00-18:00 Mon-Fri | |
| | Singapore | | 0065-64157917 | 11:00-19:00 Mon-Fri |
| | | | 0065-67203835 (Repair Status Only) | 11:00-19:00 Mon-Fri 11:00-13:00 Sat |
| | Malaysia | 1300-88-3495 | 9:00-18:00 Mon-Fri | |
| | Philippine | 1800-18550163 | 09:00-18:00 Mon-Fri | |
| | India | | 1800-2090365 | 09:00-18:00 Mon-Sat 09:00-21:00 Mon-Sun |
| | | India(WL/NW) | | |
| | Indonesia | | 0062-2129495000 | 09:30-17:00 Mon-Fri |
| | | | 500128 (Local Only) | 9:30 – 12:00 Sat |
| Vietnam | 1900-555581 | 08:00-12:00 13:30-17:30 Mon-Sat | | |
| Hong Kong | 00852-35824770 | 10:00-19:00 Mon-Sat | | |
| Americas | USA | | 8:30-12:00 EST Mon-Fri | |
| | Canada | 1-812-282-2787 | 9:00-18:00 EST Sat-Sun | |
| | Mexico | | 001-8008367847 | 08:00-20:00 CST Mon-Fri |
| | | | 08:00-15:00 CST Sat | |

| Region | Country | Hotline Numbers | Service Hours |
|-----------------------------|--------------------|--|--|
| Middle East + Africa | Egypt | 800-2787349 | 09:00-18:00 Sun-Thu |
| | Saudi Arabia | 800-1212787 | 09:00-18:00 Sat-Wed |
| | UAE | 00971-42958941 | 09:00-18:00 Sun-Thu |
| | Turkey | 0090-2165243000 | 09:00-18:00 Mon-Fri |
| | South Africa | 0861-278772 | 08:00-17:00 Mon-Fri |
| | Israel | *6557/00972-39142800 *9770/00972-35598555 | 08:00-17:00 Sun-Thu 08:30-17:30 Sun-Thu |
| Balkan Countries | Romania | 0040-213301786 | 09:00-18:30 Mon-Fri |
| | Bosnia Herzegovina | 00387-33773163 | 09:00-17:00 Mon-Fri |
| | Bulgaria | 00359-70014411 | 09:30-18:30 Mon-Fri |
| | | 00359-29889170 | 09:30-18:00 Mon-Fri |
| | Croatia | 00385-16401111 | 09:00-17:00 Mon-Fri |
| | Montenegro | 00382-20608251 | 09:00-17:00 Mon-Fri |
| | Serbia | 00381-112070677 | 09:00-17:00 Mon-Fri |
| Slovenia | | 00368-59045400 00368-59045401 | 08:00-16:00 Mon-Fri |
| Baltic Countries | Estonia | 00372-6671796 | 09:00-18:00 Mon-Fri |
| | Latvia | 00371-67408838 | 09:00-18:00 Mon-Fri |
| | Lithuania-Kaunas | 00370-37329000 | 09:00-18:00 Mon-Fri |
| | Lithuania-Vilnius | 00370-522101160 | 09:00-18:00 Mon-Fri |

NOTES:

- UK support e-mail: **network_support_uk@asus.com**
 - For more information, visit the ASUS support site at: **<https://www.asus.com/support>**
-

ASUS Recycling/Takeback Services

ASUS recycling and takeback programs come from our commitment to the highest standards for protecting our environment. We believe in providing solutions for you to be able to responsibly recycle our products, batteries, other components, as well as the packaging materials. Please go to <http://csr.asus.com/english/Takeback.htm> for the detailed recycling information in different regions.

REACH

Complying with the REACH (Registration, Evaluation, Authorisation, and Restriction of Chemicals) regulatory framework, we published the chemical substances in our products at ASUS REACH website at <http://csr.asus.com/english/REACH.htm>

Federal Communications Commission Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



WARNING! Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Prohibition of Co-location

This device and its antennas(s) must not be co-located or operating in conjunction with any other antenna or transmitter except in accordance with FCC multi-transmitter product procedures.

IMPORTANT NOTE:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 31cm between the radiator & your body.

For product available in the USA/Canada market, only channel 1~11 can be operated. Selection of other channels is not possible.

This device is restricted for indoor use.

All cables used to connect peripherals must be shielded and grounded. Operation with cables connected to peripherals that are not shielded and grounded may result in interference to radio and television reception.

FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.