


# SpaceLink-WL500 Block Diagram

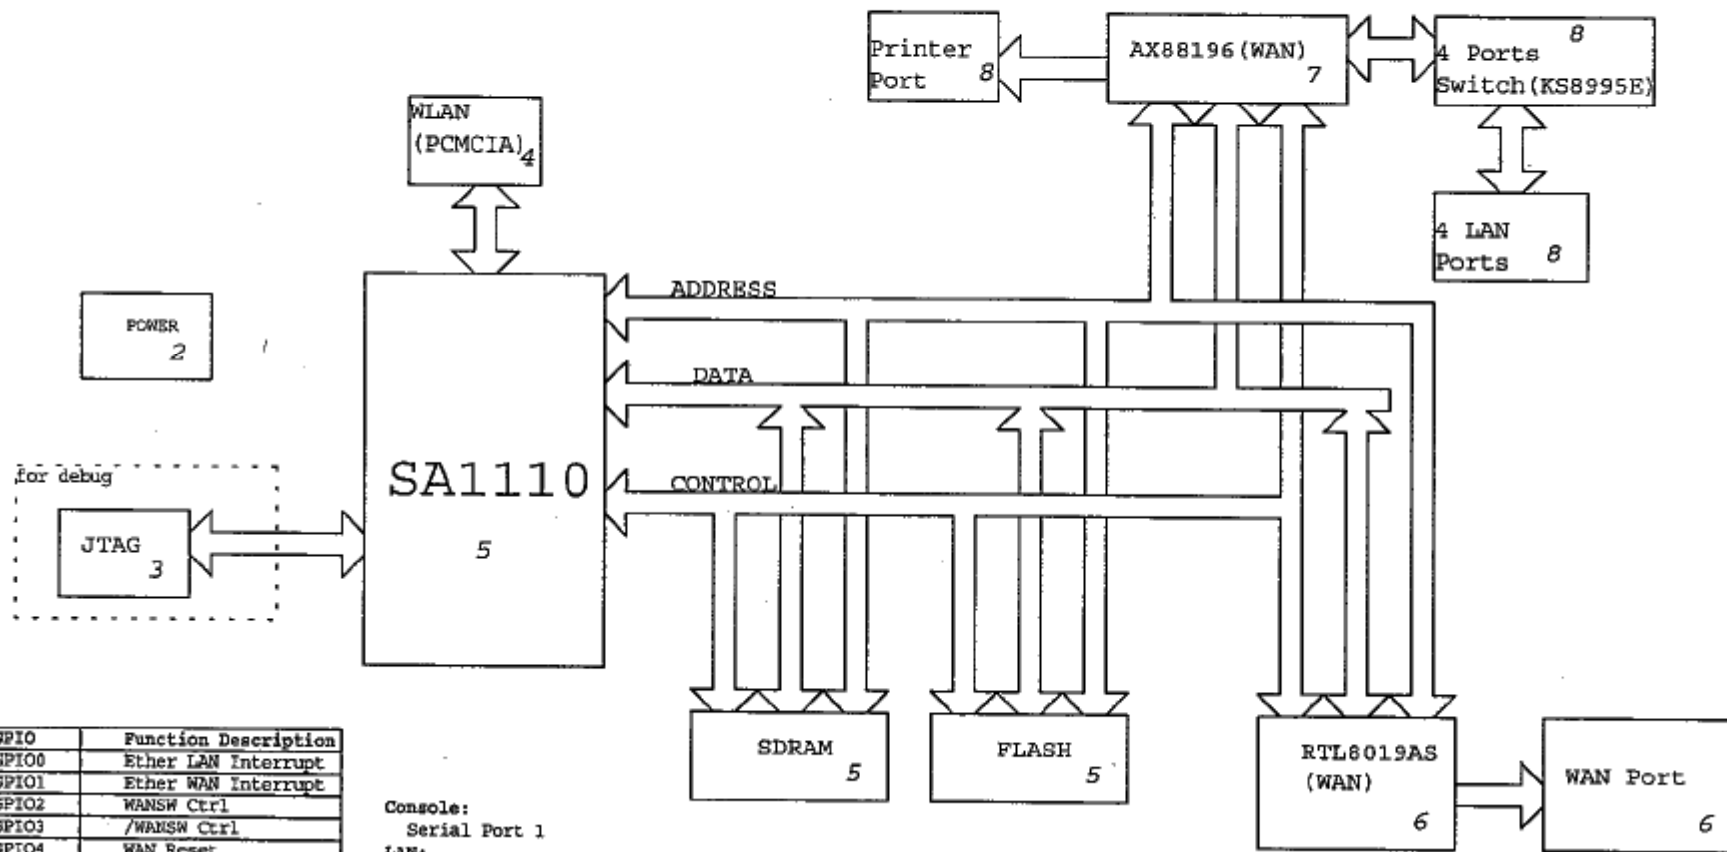

GPIO	Function Description
GPIO0	Ether LAN Interrupt
GPIO1	Ether WAN Interrupt
GPIO2	WANSW Ctrl
GPIO3	/WANSW Ctrl
GPIO4	WAN Reset
GPIO5	None
GPIO6	None
GPIO7	None
GPIO8	PCMCIA IREQ
GPIO9	LAN LED1
GPIO10	LAN LED4/UART RI
GPIO11	UART DSR
GPIO12	UART DCD
GPIO13	UART CTS
GPIO14	UART RTS
GPIO15	UART DTR
GPIO16	Reset to Default
GPIO17	PCMCIA Reset
GPIO18	LAN Reset
GPIO19	LPT SLCT
GPIO20	Ready LED
GPIO21	Air LED
GPIO22	LAN LED
GPIO23	WAN LED
GPIO24	LPT LED
GPIO25	LAN LED3
GPIO26	WAN Link
GPIO27	LAN LED2

Console:  
Serial Port 1  
LAN:  
Memory Bank 5  
WAN:  
Memory Bank 4

Note:  
Modified from V1.4  
1)EMI and ESD issue

